

Aerophone AE-10 音色表

No	Tone	音色 (中文)	Super NATURAL	移調	八度升降
001	Alto Sax Eb	中音薩克斯風 降 E 調	✓	Eb (+3)	-1
002	Tenor Sax Bb	次中音薩克斯風 降 B 調	✓	Bb (-2)	-1
003	Alto Sax Plus Eb	中音薩克斯風 降 E 調	✓	Eb (+3)	-1
004	Tenor Sax Plus Bb	次中音薩克斯風 降 B 調	✓	Bb (-2)	-1
005	Sax Section Eb	薩克斯風合奏 降 E 調	✓	Eb (+3)	-1
006	Brass Section Bb	銅管合奏 降 B 調	✓	Bb (-2)	0
007	Wind Section	木管合奏	✓	C (0)	0
008	Saw Lead	鋸齒波合成器		C (0)	+1
009	Sqr Lead	方波合成器		C (0)	+1
010	Shakuhachi	尺八	✓	C (0)	0
011	Erhu	二胡	✓	C (0)	0
012	Full Sax Eb	薩克斯風 降 E 調	✓	Eb (+3)	-1
013	Soprano Sax Bb	高音薩克斯風 降 B 調	✓	Bb (-2)	0
014	Baritone Sax Eb	低音薩克斯風 降 E 調	✓	Eb (+3)	-2
015	Dist. Guitar	破音電吉他		C (0)	0
016	Bag Pipes	風笛	✓	C (0)	0
017	Flute	長笛	✓	C (0)	+1
018	Oboe	雙簧管	✓	C (0)	0
019	Clarinet Bb	單簧管 降 B 調	✓	Bb (-2)	0
020	Recorder	直笛	✓	C (0)	+1
021	Trumpet Bb	小喇叭 降 B 調	✓	Bb (-2)	0
022	Harmonica	口琴	✓	C (0)	0
023	Voice Du	人聲嘟聲		C (0)	0
024	Hard Lead	強烈主奏合成器		C (0)	0
025	Sine Lead	正弦波主奏合成器		C (0)	+1
026	Synth Brass	合成器銅管		C (0)	0
027	JP-8000 Brass	JP-8000 合成器銅管		C (0)	0
028	Violin	小提琴	✓	C (0)	0
029	Cello	大提琴	✓	C (0)	-1
030	Pan Flute	排笛	✓	C (0)	+1
031	Bassoon	低音管	✓	C (0)	-1
032	French Horn F	法國號 F 調	✓	F (+5)	-1
033	Tuba	低音號	✓	C (0)	-2
034	R&B Organ	節奏藍調風琴		C (0)	0
035	Mute Trumpet Bb	悶音小喇叭 降 B 調	✓	Bb (-2)	0
036	Synth Strings	合成器弦樂		C (0)	0
037	Synth Bass	合成器貝斯		C (0)	0
038	Jazz Scat	爵士人聲		C (0)	-1
039	Qudi	簫笛		C (0)	+1
040	Suona	唢呐		C (0)	0
041	Saw Lead 2	鋸齒波主奏合成器 2		C (0)	+1
042	Saw Lead Du	鋸齒波主奏合成器嘟聲		C (0)	0
043	Synth Brass Du	合成銅管嘟聲		C (0)	0
044	Alto Sax Saw Eb	中音薩克斯風鋸齒波 降 B 調	✓	Eb (+3)	-1
045	Clarinet Sqr Bb	單簧管 方波 降 B 調	✓	Bb (-2)	0
046	Chunky Lead 1	厚重主奏合成器 1		C (0)	0
047	Chunky Lead 2	厚重主奏合成器 2		C (0)	0
048	Chunky Lead 3	厚重主奏合成器 3		C (0)	0
049	OvGuitar Lead 1	吉他破音主奏 1		C (0)	0
050	OvGuitar Lead 2	吉他破音主奏 2		C (0)	0
051	Techno Synth 1	電音合成 1		C (0)	+1
052	Techno Synth 2	電音合成 2		C (0)	0
053	Techno Synth 3	電音合成 3		C (0)	0
054	Pipe Organ 1	管風琴 1		C (0)	+1
055	Pipe Organ 2	管風琴 2		C (0)	0
056	Pop A.Sax1 Eb	Pop 中音薩克斯風 1 降 E 調	✓	Eb (+3)	-1
057	Pop A.Sax2 Eb	Pop 中音薩克斯風 2 降 E 調	✓	Eb (+3)	-1
058	Pop A.Sax3 Eb	Pop 中音薩克斯風 3 降 E 調	✓	Eb (+3)	-1
059	Pop A.Sax4 Eb	Pop 中音薩克斯風 4 降 E 調	✓	Eb (+3)	-1
060	Pop S.Sax1 Bb	Pop 高音薩克斯風 1 降 B 調	✓	Bb (-2)	0
061	Pop T.Sax1 Bb	Pop 次中音薩克斯風 1 降 B 調	✓	Bb (-2)	-1
062	Pop T.Sax2 Bb	Pop 次中音薩克斯風 2 降 B 調	✓	Bb (-2)	-1
063	Piccolo	短笛	✓	C (0)	+2
064	Bass Clarinet Bb	低音單簧管 降 B 調	✓	Bb (-2)	-1
065	Low Wood Wind	低音木管	✓	C (0)	-1
066	Alto Recorder F	中音直笛 F 調	✓	F (+5)	0
067	Ocarina	陶笛	✓	C (0)	+1
068	Trumpet 2 Bb	小喇叭 2 降 B 調	✓	Bb (-2)	0
069	Flugel Horn Bb	高音號 降 B 調	✓	Bb (-2)	0
070	Trombone Bb	伸縮號 降 B 調	✓	Bb (-2)	-1
071	Euphonium Bb	上低音號 降 B 調	✓	Bb (-2)	-1
072	Brass Section 2 Bb	銅管合奏 2 降 B 調	✓	Bb (-2)	0
073	Contrabass	低音提琴	✓	C (0)	-2
074	String Section	弦樂合奏	✓	C (0)	0

No	Tone	音色 (中文)	Super NATURAL	移調	八度升降
075	Low Strings	低音弦樂	✓	C (0)	-1
076	Acoustic Bass	弦貝斯	✓	C (0)	-2
077	London Choir	倫敦合唱團	✓	C (0)	0
078	Vibraphone	鐵琴	✓	C (0)	0
079	Glockenspiel	鐘琴	✓	C (0)	+1
080	Steel Drums	鋼鼓	✓	C (0)	-1
081	Uilleann Pipe	愛爾蘭風笛	✓	C (0)	0
082	Ryuteki	龍笛	✓	C (0)	+1
083	Yang Chin	揚琴	✓	C (0)	0
084	Sarangi	薩朗琴 (印度)	✓	C (0)	0
085	Perky Organ	風琴		C (0)	0
086	Soap Opera	Soap Opera(肥皂劇)		C (0)	0
087	La Seine	La Seine(塞納河)		C (0)	0
088	Harmonerca	口琴		C (0)	0
089	Harmonica 2	口琴 2		C (0)	0
090	Finger Bass	指彈貝斯		C (0)	-2
091	2-way Sect.	2-way Sect.		C (0)	0
092	Full Strings	飽滿弦樂合奏		C (0)	0
093	Octave Strings	八度音程弦樂合奏		C (0)	0
094	Staccato Str	斷奏弦樂		C (0)	0
095	Full Strings Sect	飽滿弦樂合奏		C (0)	0
096	SoftSynthBrass	柔和合成器銅管		C (0)	0
097	Saw Brass	鋸齒波銅管		C (0)	0
098	Epic Lead	史詩般的主奏音色		C (0)	0
099	Wind Syn Lead	木管合成器主奏		C (0)	0
100	Soft Lead	柔和合成器主奏		C (0)	0
101	JP Saw Lead	JP 鋸齒波合成器主奏		C (0)	0
102	TriStac Lead	三層合成器主奏		C (0)	0
103	Double Saw	雙重鋸齒波		C (0)	0
104	Digitaless	Digitaless		C (0)	0
105	Super Saw Slow	超級鋸齒波慢奏		C (0)	0
106	JP-8000 Saws	JP-8000 鋸齒波		C (0)	0
107	ContactSport	ContactSport		C (0)	0
108	D JP-8000 Brass	D JP-8000 銅管		C (0)	0
109	D J-Pop Brass	D J-Pop 銅管		C (0)	0
110	D RnB Bass	D R&B 貝斯		C (0)	-2
111	D Motion Pad	D 合成器背景音色		C (0)	0
112	D Super Saw	D 超級鋸齒波		C (0)	0
113	D JP Saw Lead	D JP 鋸齒波合成器主奏		C (0)	0
114	D JP-8000 Saws	D JP-8000 鋸齒波		C (0)	0
115	D Trancy X	D Trancy X 合成器音色		C (0)	0
116	D Saw Coffee Bee	D 鋸齒波合成器音色		C (0)	0
117	D Saw Lead	D 鋸齒波合成器主奏		C (0)	+1
118	Jinghu	京胡		C (0)	+1
119	Sihu	四胡		C (0)	+1
120	Banhu	板胡		C (0)	+1
121	Xiao	簫		C (0)	+1
122	Xun	埙		C (0)	+1
123	Hulusi	葫蘆絲		C (0)	+1
124	Bawu	巴烏		C (0)	+1
125	Matouqin	馬頭琴		C (0)	+1
126	Klui	Klui 泰國長笛		C (0)	+1
127	Khaen	Khaen 越南笛		C (0)	+1
128	Vocoder with BOSS VO-1	聲碼器— 連接使用 BOSS VO-1		C (0)	0

本文件說明系統版本 3.0 以上的音色表。

關於系統升級的詳細資訊，請瀏覽以下網址。

<http://tw.roland.com/support/>

1. 在支援選單中，選擇 "系統升級 & 驅動程式"。
2. 在產品名稱中選擇 "Aerophone AE-10"。
3. 選擇 "AE-10 系統程式"。

音色表

#	音色	SuperNATURAL	移調	八度升降	八度升降鍵	MFX1 效果器	MFX2 效果器	拇指控制器 (左)	拇指控制器 (右)	CC# 控制碼與音色控制之間的對應									
										CC1	CC16	CC17	CC18	CC19	CC65	CC80	CC81	CC82	
001	Alto Sax Eb	中音薩克斯風降 E 調	✓	Eb (+3)	-1	OCT1	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
002	Tenor Sax Bb	次中音薩克斯風降 B 調	✓	Bb (-2)	-1	OCT1	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
003	Alto Sax Plus Eb *1	中音薩克斯風降 E 調 *1	✓	Eb (+3)	-1	OCT1	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
004	Tenor Sax Plus Bb *1	次中音薩克斯風降 B 調 *1	✓	Bb (-2)	-1	OCT1	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
005	Sax Section Eb	薩克斯風合奏降 E 調	✓	Eb (+3)	-1	OCT2	EQ	Off	H.3 (Harmony 3rd) *2	H.5 (Harmony 5th) *2	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
006	Brass Section Bb	銅管合奏降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	H.3 (Harmony 3rd) *2	H.5 (Harmony 5th) *2	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
007	Wind Section	木管合奏	✓	C (0)	0	OCT2	EQ	Off	H.3 (Harmony 3rd) *2	H.5 (Harmony 5th) *2	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
008	Saw Lead	鋸齒波合成器		C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
009	Sqr Lead	方波合成器		C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
010	Shakuhachi	尺八	✓	C (0)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	H.-8 (Harmony -1 Oct)	-	Noise Level	-	Growl Sens	-	Portamento	Staccato	Ornament	-
011	Erhu	二胡	✓	C (0)	0	OCT2	EQ	Delay	CC80 (Staccato)	H.-8 (Harmony -1 Oct)	-	Noise Level	-	-	-	Portamento	Staccato	Ornament	-
012	Full Sax Eb	薩克斯風降 E 調	✓	Eb (+3)	-1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
013	Soprano Sax Bb	高音薩克斯風降 B 調	✓	Bb (-2)	0	OCT1	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
014	Baritone Sax Eb	低音薩克斯風降 E 調	✓	Eb (+3)	-2	OCT1	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
015	Dist. Guitar	破音電吉他		C (0)	0	OCT2	EQ	Distortion	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
016	Bag Pipes	風笛	✓	C (0)	0	OCT2	EQ	Delay	CC80 (Drone) *2	H.5 (Harmony 5th)	-	-	-	-	-	Portamento	Drone	Ornament	-
017	Flute	長笛	✓	C (0)	+1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
018	Oboe	雙簧管	✓	C (0)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
019	Clarinet Bb	單簧管降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
020	Recorder	直笛	✓	C (0)	+1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	-	Portamento	Staccato	-	-
021	Trumpet Bb	小喇叭降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
022	Harmonica	口琴	✓	C (0)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	-	-	-
023	Voice Du	人聲嘟聲		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
024	Hard Lead	強烈主奏合成器		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
025	Sine Lead	正弦波主奏合成器		C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
026	Synth Brass	合成器銅管		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
027	JP-8000 Brass	JP-8000 合成器銅管		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
028	Violin	小提琴	✓	C (0)	0	OCT2	EQ	Delay	CC81 (Pizzicato)	CC65 (Portamento)	-	Noise Level	-	-	-	Portamento	Staccato	Pizzicato	Tremolo
029	Cello	大提琴	✓	C (0)	-1	OCT2	EQ	Delay	CC81 (Pizzicato)	CC65 (Portamento)	-	Noise Level	-	-	-	Portamento	Staccato	Pizzicato	Tremolo
030	Pan Flute	排笛	✓	C (0)	+1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Flutter	-
031	Bassoon	低音管	✓	C (0)	-1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
032	French Horn F	法國號 F 調	✓	F (+5)	-1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
033	Tuba	低音號	✓	C (0)	-2	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
034	R&B Organ	節奏藍調風琴		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
035	Mute Trumpet Bb	悶音小喇叭降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
036	Synth Strings	合成器弦樂		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
037	Synth Bass	合成器貝斯		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
038	Jazz Scat	爵士人聲		C (0)	-1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
039	Qudi	崑笛		C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
040	Suona	唢呐		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
041	Saw Lead 2	鋸齒波主奏合成器 2		C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
042	Saw Lead Du	鋸齒波主奏合成器嘟聲		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
043	Synth Brass Du	合成銅管嘟聲		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
044	Alto Sax Saw Eb	中音薩克斯風鋸齒波降 B 調	✓	Eb (+3)	-1	OCT1	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
045	Clarinet Sqr Bb	單簧管 方波降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
046	Chunky Lead 1	厚重主奏合成器 1		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
047	Chunky Lead 2	厚重主奏合成器 2		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
048	Chunky Lead 3	厚重主奏合成器 3		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
049	OvGuitar Lead 1	吉他破音主奏 1		C (0)	0	OCT2	EQ	Overdrive	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-

#	音色	SuperNATURAL	移調	八度升降	八度升降鍵	MFX1 效果器	MFX2 效果器	拇指控制器 (左)	拇指控制器 (右)	CC# 控制碼與音色控制之間的對應									
										CC1	CC16	CC17	CC18	CC19	CC65	CC80	CC81	CC82	
050	OvGuitar Lead 2	吉他破音主奏 2		C (0)	0	OCT2	EQ	Overdrive	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
051	Techno Synth 1	電音合成 1		C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
052	Techno Synth 2	電音合成 2		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
053	Techno Synth 3	電音合成 3		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
054	Pipe Organ 1	管風琴 1		C (0)	+1	OCT2	EQ	Delay	H.3 (Harmony 3rd) *2	H.5 (Harmony 5th) *2	Modulation	-	-	-	-	Portamento	-	-	-
055	Pipe Organ 2	管風琴 2		C (0)	0	OCT2	EQ	Delay	H.3 (Harmony 3rd) *2	H.5 (Harmony 5th) *2	Modulation	-	-	-	-	Portamento	-	-	-
056	Pop A.Sax1 Eb	Pop 中音薩克斯風 1 降 E 調	✓	Eb (+3)	-1	OCT1	EQ	Enhancer	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
			明亮而強烈的中音薩克斯風，適合爵士樂或流行樂。																
057	Pop A.Sax2 Eb	Pop 中音薩克斯風 2 降 E 調	✓	Eb (+3)	-1	OCT1	EQ	Enhancer	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
			適合搖滾樂的中音薩克斯風。它原始而粗獷的特色會增強音樂能量強度。																
058	Pop A.Sax3 E	Pop 中音薩克斯風 3 降 E 調	✓	Eb (+3)	-1	OCT1	EQ	Enhancer	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
			適合獨奏抒情爵士的音色。您可以藉由吹奏弱音來表現呼吸聲，吹奏動態力度將會對音色特質有顯著的改變。																
059	Pop A.Sax4 Eb	Pop 中音薩克斯風 4 降 E 調	✓	Eb (+3)	-1	OCT1	EQ	Enhancer	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
			明亮的中音薩克斯風，適合在流行歌曲中擔任背景音樂吹奏。音色帶有寬敞疊音和殘響的獨特特色。																
060	Pop S.Sax1 Bb	Pop 高音薩克斯風 1 降 B 調	✓	Bb (-2)	0	OCT1	EQ	Enhancer	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
			適合爵士樂或流行樂的高音薩克斯風。也很適合搭配於在輕柔爵士樂中演奏高音薩克斯風。																
061	Pop T.Sax1 Bb	Pop 次中音薩克斯風 1 降 B 調	✓	Bb (-2)	-1	OCT1	EQ	Enhancer	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
			明亮而強勁的次中音薩克斯風，適合爵士樂或流行樂。																
062	Pop T.Sax2 Bb	Pop 次中音薩克斯風 2 降 B 調	✓	Bb (-2)	-1	OCT1	EQ	Enhancer	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	SubTone
			強勁的次中音薩克斯風，適合爵士樂、流行樂，或搖滾等各種曲風。																
063	Piccolo	短笛	✓	C (0)	+2	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
064	Bass Clarinet Bb	低音單簧管 降 B 調	✓	Bb (-2)	-1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
065	Low Wood Wind	低音木管	✓	C (0)	-1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	-	-
066	Alto Recorder F	中音直笛 F 調	✓	F (+5)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	-	Portamento	Staccato	-	-
067	Ocarina	陶笛	✓	C (0)	+1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	-	Portamento	Staccato	Ornament	-
068	Trumpet 2 Bb	小喇叭 2 降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
069	Flugel Horn Bb	高音號 降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
070	Trombone Bb	伸縮號 降 B 調	✓	Bb (-2)	-1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
071	Euphonium Bb	上低音號 降 B 調	✓	Bb (-2)	-1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
072	Brass Section 2 Bb	銅管合奏 2 降 B 調	✓	Bb (-2)	0	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	Bend Mode	Portamento	Staccato	Fall	-
073	Contrabass	低音提琴	✓	C (0)	-2	OCT2	EQ	Delay	CC81 (Pizzicato)	CC65 (Portamento)	-	Noise Level	-	-	-	Portamento	Staccato	Pizzicato	Tremolo
074	String Section	弦樂合奏	✓	C (0)	0	OCT2	EQ	Delay	CC81 (Pizzicato)	CC65 (Portamento)	-	Noise Level	-	-	-	Portamento	Staccato	Pizzicato	Tremolo
075	Low Strings	低音弦樂	✓	C (0)	-1	OCT2	EQ	Delay	CC81 (Pizzicato)	CC65 (Portamento)	-	Noise Level	-	-	-	Portamento	Staccato	Pizzicato	Tremolo
076	Acoustic Bass	弦貝斯	✓	C (0)	-2	OCT2	EQ	Delay	CC81 (Harmonics)	CC65 (Portamento)	-	Noise Level	-	-	-	Portamento	Staccato	Harmonics	-
077	London Choir	倫敦合唱團	✓	C (0)	0	OCT2	EQ	Delay	CC80 (Voice Woo)	CC65 (Portamento)	-	-	-	-	-	Portamento	Voice Woo	-	-
078	Vibraphone	鐵琴	✓	C (0)	0	OCT2	EQ	Delay	CC1 (Roll)	CC65 (Portamento)	Roll	Mallet Hardness	Roll Speed	Mute	Bend Mode	Portamento	Dead Stroke	Tremolo Sw	-
079	Glockenspiel	鐘琴	✓	C (0)	+1	OCT2	EQ	Delay	CC1 (Roll)	CC65 (Portamento)	Roll	Mallet Hardness	Roll Speed	Mute	Bend Mode	Portamento	Dead Stroke	-	-
080	Steel Drums	鋼鼓	✓	C (0)	-1	OCT2	EQ	Delay	CC1 (Roll)	CC65 (Portamento)	Roll	Resonance Level	Roll Speed	Mute	Bend Mode	Portamento	Mute	-	-
081	Uilleann Pipe	愛爾蘭風笛	✓	C (0)	0	OCT2	EQ	Delay	CC80 (Drone)*2	CC65 (Portamento)	-	-	-	-	-	Portamento	Drone	Ornament	-
082	Ryuteki	龍笛	✓	C (0)	+1	OCT2	EQ	Delay	CC18 (Growl Sens)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	-	Portamento	Staccato	Ornament	-
083	Yang Chin	揚琴	✓	C (0)	0	OCT2	EQ	Delay	CC16 (Resonance Level)	CC65 (Portamento)	Roll	Resonance Level	Roll Speed	Slide Roll	Bend Mode	Portamento	Mute	Tremolo	-
084	Sarangi	薩朗琴 (印度)	✓	C (0)	0	OCT2	EQ	Delay	CC80 (Tambura)	CC65 (Portamento)	-	Noise Level	-	Growl Sens	-	Portamento	Tambura	-	-
085	Perky Organ	風琴		C (0)	0	OCT2	EQ	Rotary	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
086	Soap Opera	Soap Opera(肥皂劇)		C (0)	0	OCT2	EQ	Rotary	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
087	La Seine	La Seine(塞納河)		C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-

#	音色	SuperNATURAL	移調	八度升降	八度升降鍵	MFX1 效果器	MFX2 效果器	拇指控制器 (左)	拇指控制器 (右)	CC# 控制碼與音色控制之間的對應								
										CC1	CC16	CC17	CC18	CC19	CC65	CC80	CC81	CC82
088	Harmonderca	口琴	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
089	Harmonica 2	口琴 2	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
090	Finger Bass	指彈貝斯	C (0)	-2	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
091	2-way Sect.	2-way Sect.	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
092	Full Strings	飽滿弦樂合奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
093	Octave Strings	八度音程弦樂合奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
094	Staccato Str	斷奏弦樂	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
095	Full Strings Sect	飽滿弦樂合奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
096	SoftSynthBrass	柔和合成器銅管	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
097	Saw Brass	鋸齒波銅管	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
098	Epic Lead	史詩般的主奏音色	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
099	Wind Syn Lead	木管合成器主奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
100	Soft Lead	柔和合成器主奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
101	JP Saw Lead	JP 鋸齒波合成器主奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
102	TriStac Lead	三層合成器主奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
103	Double Saw	雙重鋸齒波	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
104	Digitaless	Digitaless	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
105	Super Saw Slow	超級鋸齒波慢奏	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
106	JP-8000 Saws	JP-8000 鋸齒波	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
107	ContactSport	ContactSport	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
108	D JP-8000 Brass	D JP-8000 銅管	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
109	D J-Pop Brass	D J-Pop 銅管	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
110	D RnB Bass	D R&B 貝斯	C (0)	-2	OCT2	Enhancer	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
111	D Motion Pad	D 合成器背景音色	C (0)	0	OCT2	3Tap Pan Delay	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
112	D Super Saw	D 超級鋸齒波	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
113	D JP Saw Lead	D JP 鋸齒波合成器主奏	C (0)	0	OCT2	3Tap Pan Delay	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
114	D JP-8000 Saws	D JP-8000 鋸齒波	C (0)	0	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
115	D Trancy X	D Trancy X 合成器音色	C (0)	0	OCT2	Off	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
116	D Saw Coffee Bee	D 鋸齒波合成器音色	C (0)	0	OCT2	Pitch Shifter	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
117	D Saw Lead	D 鋸齒波合成器主奏	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
118	Jinghu	京胡	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
119	Sihu	四胡	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
120	Banhu	板胡	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
121	Xiao	簫	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
122	Xun	埙	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
123	Hulusi	葫蘆絲	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
124	Bawu	巴烏	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
125	Matouqin	馬頭琴	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
126	Klui	Klui 泰國長笛	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
127	Khaen	Khaen 越南笛	C (0)	+1	OCT2	EQ	Delay	CC1 (Modulation)	H.5 (Harmony 5th)	Modulation	-	-	-	-	Portamento	-	-	-
128	Vocoder *3	Vocoder 聲碼器— 連接使用 BOSS VO-1	C (0)	0	OCT2	EQ	Distortion	CC1 (Modulation)	CC65 (Portamento)	Modulation	-	-	-	-	Portamento	-	-	-

*1 這些音色可讓初學者也很容易展現豐富的演奏表情。

*2 Toggle 切換設定設為 ON 開啟

*3 使用此音色時需連接 BOSS VO-1 。Hold 功能 將會開啟。

音色控制的效果

Noise Level: 調整呼吸聲量或弦樂的擦弦噪音。

Growl Sens: 調整垂管樂器吹奏時發生的明顯表情細膩差別 (咆哮聲)。

Bend Mode: 當您想要在效果滑音 / 下降音時和正常音高變化之間切換時，需使用這個。

Drone: 設定值在 64–127 範圍之間，會發出與您演奏的聲音同的長音 (drone tone)。設定值在 0–63 之間，長音將會靜音。

Ornament: 讓您重現獨特裝飾音，像是尺八一開始起音的往上滑音。