

# Owner's Manual

Guitar Amplifier



KATANA-50  
KATANA-100  
KATANA-100/212  
KATANA-HEAD

This owner's manual applies to the KATANA-50, KATANA-100, KATANA-100/212, and KATANA-HEAD.

A **50/100 only**, **100/HEAD only**, or **HEAD only** icon will be used to mark explanations that pertain only to a specific model.

\* All operating methods and panel specifications are common between the KATANA-100 and the KATANA-100/212.



## KATANA-50

KTN-50

50 W output, 30 cm (12 inch) speaker



## KATANA-100

KTN-100

100 W output, 30 cm (12 inch) speaker



## KATANA-100/212

KTN100/212

100 W output, 30 cm (12 inch) speaker x 2



## KATANA-HEAD

KTN-HEAD

100 W output, 12 cm (5 inch) speaker

### BOSS Guitar Amp "KATANA"

An all-in-one guitar amp that's ideal for live performance

#### Main Features

- Four original amp sounds are provided: a "brown sound" that's ideal for rock and inherits an edge from the BOSS WAZA HEAD, in addition to clean, crunch, and lead.
- Simple operation and high-quality BOSS effects are built-in (three can be used simultaneously). In addition to simple operation from the amp itself, you can use the dedicated software to edit the settings from your PC.
- The power control function lets you adjust the amp sound to the desired volume, and standby (MUTE) is also provided
- A dedicated acoustic amp that can also be used for acoustic guitar is built-in as well
- The combo amp models are equipped with a cabinet tilt mechanism that allows easier monitoring while you play (KATANA-50, KATANA-100, KATANA-100/212)
- The head amp model is equipped with a small speaker that allows practicing without requiring a speaker unit to be connected (KATANA-HEAD)
- You can connect a GA-FC (except for the KATANA-50) or FS series footswitch to control functions using your foot
- The compact and sturdy cabinets are designed for easy transport

# USING THE UNIT SAFELY

Before using this unit, carefully read the sections entitled "IMPORTANT SAFETY INSTRUCTIONS" (inside front cover), "USING THE UNIT SAFELY" (p. 2), and "IMPORTANT NOTES" (p. 3). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature of your new unit, read Owner's Manual in its entirety. This manual should be saved and kept on hand as a convenient reference.

Copyright © 2016 ROLAND CORPORATION

## INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices

 <b>WARNING</b>	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 <b>CAUTION</b>	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

### ALWAYS OBSERVE THE FOLLOWING

#### WARNING

##### Make sure that the power cord is grounded

Connect mains plug of this model to a mains socket outlet with a protective earthing connection.




##### To completely turn off power to the unit, pull out the plug from the outlet

Even with the power switch turned off, this unit is not completely separated from its main source of power. When the power needs to be completely turned off, turn off the power switch on the unit, then pull out the plug from the outlet. For this reason, the outlet into which you choose to connect the power cord's plug should be one that is within easy reach and readily accessible.



##### Secure a sufficient amount of space at the setup location

Since this unit normally emits a slight amount of heat, make sure to secure sufficient space around it, as shown below.

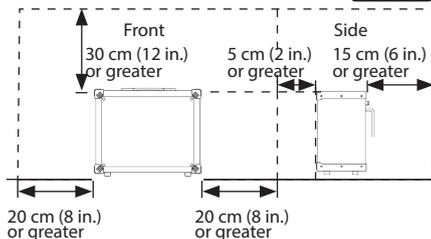

##### Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



##### Do not repair or replace parts by yourself

Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."



#### WARNING

##### Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.



##### Do not place in an unstable location

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



##### Connect the power cord to an outlet of the correct voltage

The unit should be connected to a power supply only of the type described as marked on the rear side of unit.



##### Use only the supplied power cord

Use only the attached power cord. Also, the supplied power cord must not be used with any other device.



##### Do not bend the power cord or place heavy objects on it

Otherwise, fire or electric shock may result.



##### Avoid extended use at high volume

Use of the unit at high volume for extended periods of time may cause hearing loss. If you ever experience any hearing loss or ringing in the ears, you should immediately stop using the unit and consult a specialized physician.



#### WARNING

##### Do not allow foreign objects or liquids to enter unit; never place containers with liquid on unit

Do not place containers containing liquid (e.g., flower vases) on this product. Never allow foreign objects (e.g., flammable objects, coins, wires) or liquids (e.g., water or juice) to enter this product. Doing so may cause short circuits, faulty operation, or other malfunctions.



##### Turn off the unit if an abnormality or malfunction occurs

Immediately turn the unit off, remove the power cord from the outlet, and request servicing by your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" when:



- The power cord has been damaged; or
- If smoke or unusual odor occurs; or
- Objects have fallen into, or liquid has been spilled onto the unit; or
- The unit has been exposed to rain (or otherwise has become wet); or
- The unit does not appear to operate normally or exhibits a marked change in performance.

##### Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.



##### Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.



##### Do not share an outlet with an unreasonable number of other devices

Otherwise, you risk overheating or fire.



##### Do not use overseas

Before using the unit in overseas, consult with your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."



The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.



No naked flame sources such as lighted candles should be placed on the apparatus.



Use the apparatus in moderate climates.



**⚠ CAUTION**

**When disconnecting the power cord, grasp it by the plug**

To prevent conductor damage, always grasp the power cord by its plug when disconnecting it.



**Periodically clean the power plug**

An accumulation of dust or foreign objects between the power plug and the power outlet can lead to fire or electric shock.



At regular intervals, be sure to pull out the power plug, and using a dry cloth, wipe away any dust or foreign objects that may have accumulated.

**Disconnect the power plug whenever the unit will not be used for an extended period of time**

Fire may result in the unlikely event that a breakdown occurs.



**⚠ CAUTION**

**Route all power cords and cables in such a way as to prevent them from getting entangled**

Injury could result if someone were to trip on a cable and cause the unit to fall or topple.



**Avoid climbing on top of the unit, or placing heavy objects on it**

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



**Never connect/disconnect a power plug if your hands are wet**

Otherwise, you could receive an electric shock.



**Disconnect all cords/cables before moving the unit**

Before moving the unit, disconnect the power plug from the outlet, and pull out all cords from external devices.



**⚠ CAUTION**

**Before cleaning the unit, disconnect the power plug from the outlet**

If the power plug is not removed from the outlet, you risk receiving an electric shock.



**Whenever there is a threat of lightning, disconnect the power plug from the outlet**

If the power plug is not removed from the outlet, you risk causing malfunction or receiving an electric shock.



# IMPORTANT NOTES

## Power Supply

- Do not connect this unit to same electrical outlet that is being used by an electrical appliance that is controlled by an inverter or a motor (such as a refrigerator, washing machine, microwave oven, or air conditioner). Depending on the way in which the electrical appliance is used, power supply noise may cause this unit to malfunction or may produce audible noise. If it is not practical to use a separate electrical outlet, connect a power supply noise filter between this unit and the electrical outlet.

## Placement

- Using the unit near power amplifiers (or other equipment containing large power transformers) may induce hum. To alleviate the problem, change the orientation of this unit; or move it farther away from the source of interference.
- This unit may interfere with radio and television reception. Do not use this unit in the vicinity of such receivers.
- Noise may be produced if wireless communications devices, such as cell phones, are operated in the vicinity of this unit. Such noise could occur when receiving or initiating a call, or while conversing. Should you experience such problems, you should relocate such wireless devices so they are at a greater distance from this unit, or switch them off.
- When moved from one location to another where the temperature and/or humidity is very different, water droplets (condensation) may form inside the unit. Damage or malfunction may result if you attempt to use the unit in this condition. Therefore, before using the unit, you must allow it to stand for several hours, until the condensation has completely evaporated.
- Depending on the material and temperature of the surface on which you place the unit, its rubber feet may discolor or mar the surface.
- Do not place containers or anything else containing liquid on top of this unit. Also, whenever any liquid has been spilled on the surface of this unit, be sure to promptly wipe it away using a soft, dry cloth.

## Maintenance

- Never use benzene, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

## Repairs and Data

- Before sending the unit away for repairs, be sure to make a backup of the data stored within it; or you may prefer to write down the needed information. Although we will do our utmost to preserve the data stored in your unit when we carry out repairs, in some cases, such as when the memory section is physically damaged, restoration of the stored content may be impossible. Roland assumes no liability concerning the restoration of any stored content that has been lost.

## Additional Precautions

- Any data stored within the unit can be lost as the result of equipment failure, incorrect operation, etc. To protect yourself against the irretrievable loss of data, try to make a habit of creating regular backups of the data you've stored in the unit.
- Roland assumes no liability concerning the restoration of any stored content that has been lost.
- Use a reasonable amount of care when using the unit's buttons, sliders, or other controls; and when using its jacks and connectors. Rough handling can lead to malfunctions.
- When disconnecting all cables, grasp the connector itself—never pull on the cable. This way you will avoid causing shorts, or damage to the cable's internal elements.
- A small amount of heat will radiate from the unit during normal operation.
- To avoid disturbing others nearby, try to keep the unit's volume at reasonable levels.
- Use only the specified expression pedal. By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.
- Do not use connection cables that contain a built-in resistor.

## Intellectual Property Right

- Roland and BOSS are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- MMP (Moore Microprocessor Portfolio) refers to a patent portfolio concerned with microprocessor architecture, which was developed by Technology Properties Limited (TPL). Roland has licensed this technology from the TPL Group.
- ASIO is a trademark and software of Steinberg Media Technologies GmbH.
- This product contains eParts integrated software platform of eSOL Co., Ltd. eParts is a trademark of eSOL Co., Ltd. in Japan.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.


# Panel Descriptions

## Top Panel

### KATANA-50



### KATANA-100, KATANA-100/212, KATANA-HEAD

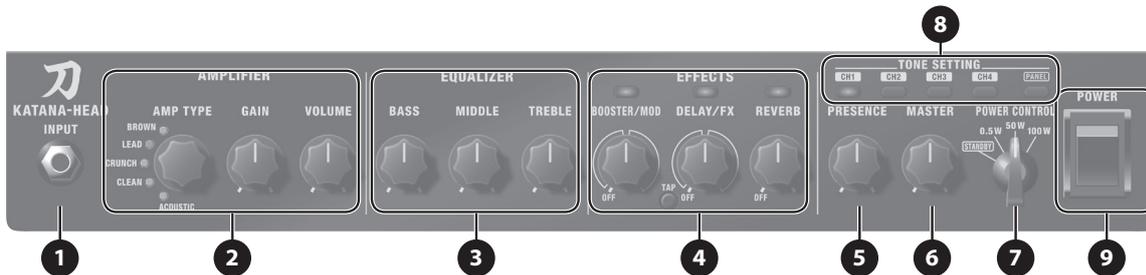

#### 1 INPUT jack

Connect your electric guitar here.

#### 2 AMPLIFIER

##### [AMP TYPE] knob

Selects the amp type. All provided amp types are original.

Type	Explanation
BROWN	A lead sound with an edge inherited from the BOSS WAZA brown sound.
LEAD	Different gain settings allow this sound to cover a wide range from crunch to high-gain.
CRUNCH	A fat crunch sound that faithfully responds to the nuances of your picking.
CLEAN	A clean and natural sound. In conjunction with BOOSTER, it can be used for solo or lead.
ACOUSTIC	A dedicated acoustic guitar amp that supports connection of an acoustic guitar.

##### [GAIN] knob

Adjusts the gain (amount of distortion).

##### [VOLUME] knob

Adjusts the volume.

#### 3 EQUALIZER

##### [BASS] knob

Adjusts the sound level of the low-frequency range.

##### [MIDDLE] knob

Adjusts the sound level of middle-frequency range.

##### [TREBLE] knob

Adjusts the sound level of the high-frequency range.

#### 4 EFFECTS

Here you can make settings for the built-in effects. For details on the effect types and settings for each knob, refer to "Using the Effects" (p. 8).

##### [BOOSTER/MOD] button/knob

Controls distortion-type effects and modulation effects.

##### [DELAY/FX] button/knob

Controls effects such as delay, wah, tremolo, and octave.

##### [TAP] button/knob

Sets the delay time. When you press this button two or more times, the delay time is set to the interval between presses.

##### [REVERB] button/knob

Controls the reverb.

#### 5 [PRESENCE] knob 100/HEAD only

Adds lustrous outline to the mid- and high-frequency range. This is effective when you want to improve the definition of the sound.

#### 6 [MASTER] knob

Adjusts the overall volume.

#### 7 [POWER CONTROL] switch

Lets you switch the output level of the power amp according to your location or needs. By selecting "STANDBY" you can mute the sound while leaving the unit powered-on. This lets you mute the amp without changing the volume or other settings when you leave the stage, such as between sets of your live performance.

#### 8 TONE SETTING

Here you can store or recall sounds that you've set up on the panel.

##### [CH 1]–[CH 4] buttons

The [CH 1]–[CH 4] buttons (CH 1–CH 2 on the KATANA-50) remember the settings of all top panel knobs (except for the [MASTER] knob) and buttons. When you press and hold a button for one second, the panel settings are stored.

\* You can make the settings back to the factory state by turning the power on while holding down the [PANEL] button.

##### [PANEL] button


Makes the unit sound using the current settings of the panel knobs.

#### 9 [POWER] switch

Turns the power of the KATANA on/off.

## Rear Panel

## KATANA-50

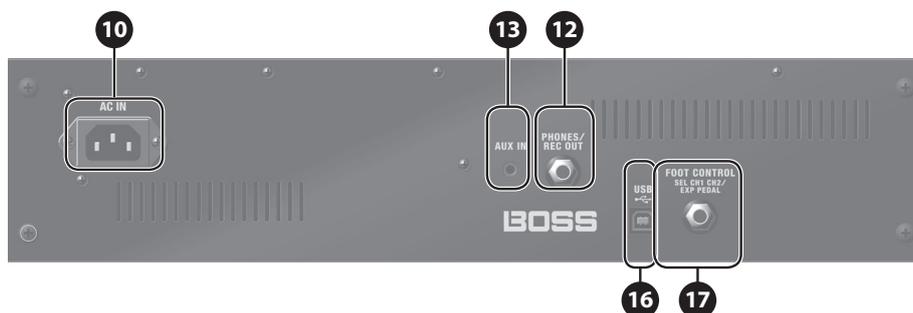

## KATANA-100, KATANA-100/212, KATANA-HEAD

**10 AC IN jack**

Connect the included power cord.

- \* Use only the power cord that was included with the unit.

**11 SPEAKER OUT jack** HEAD only

Connect a speaker box. Only use speaker cable to connect the speaker. Do not use any shielded cable designed for use with guitars.

- \* You must use a speaker box that has an input impedance of  $8\Omega$  or higher.
- \* If a plug is inserted in this jack, no sound will be output from the KATANA's own speaker.

**12 PHONES/REC OUT jack**

Connect headphones here. You can obtain powerful guitar sounds just as if you were playing through the speaker. To adjust the volume, use the [VOLUME] knob along with the [MASTER] knob.

- \* If a plug is inserted in this jack, no sound will be output from the KATANA's own speaker. This is convenient if you don't want loud sound to be produced from the speaker, such as when you're practicing at night.

**13 AUX IN jack**

Here you can connect a CD player, audio player, electronic musical instrument, or similar audio source, and listen to it while you play your guitar.

**14 LINE OUT jack** 100/HEAD only

Connect this to your PA system or recorder. You can obtain powerful guitar amp sound just as if you were playing through the speaker.



You can use this in conjunction with an external PA system, or to record your performance via direct line while monitoring the sound from the KATANA's speaker.

Adjust the output level using the [VOLUME] knob.

Since the [MASTER] knob does not affect the output, you can turn down the [MASTER] knob so that sound is output to a connected device without any sound being produced from the amp itself.

- \* To prevent malfunction and equipment failure, always turn down the volume, and turn off all the units before making any connections.

**15 EFX LOOP SEND/RETURN jacks**


100/HEAD only

Connect an external effect device (monaural).

Connect the SEND jack to the input of your external effect device, and connect the output of your external effect device to the RETURN jack.

**16 USB port**

You can use a commercially available USB 2.0 cable to record the sound of the KATANA into your computer. You can also use dedicated software to edit the settings of the internal effects (p. 8).

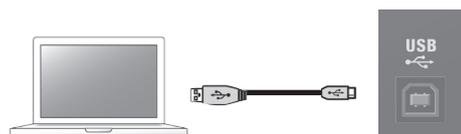

**You must install the USB driver when connecting the unit to your computer.**


Download the USB driver from the Roland website. For details, refer to Readme.htm which is included in the download.

[www.boss.info/support/](http://www.boss.info/support/)

## 17 FOOT CONTROL

### SEL CH1 CH2/EXP PEDAL jack

If you connect a footswitch (sold separately: FS-5L), you can use your foot to switch between CH. 1 and CH. 2. If you connect an expression pedal (sold separately: Roland EV-5, BOSS FV-500L, BOSS FV-500H), you can use your foot to vary the volume.

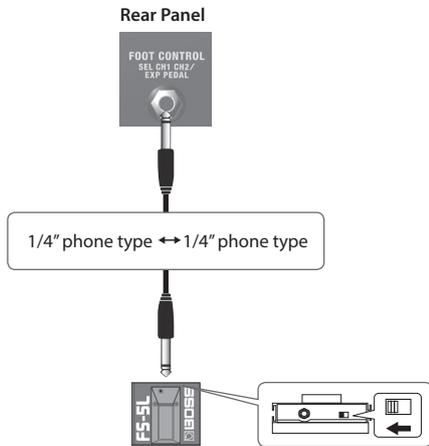


### GA-FC jack **100/HEAD only**

You can connect the separately sold Roland GA-FC to switch channels and turn effects on/off.

#### Connecting the GA-FC


Connect a stereo cable to the GA-FC jack.

- \* Always use a stereo cable.
- \* Use cables that do not contain resistors.

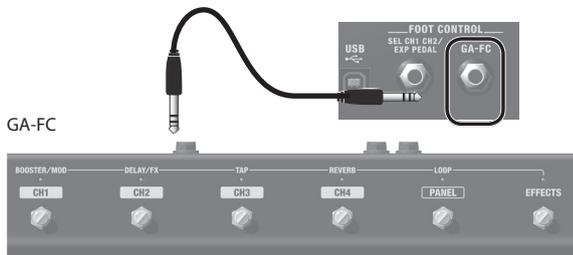

#### Using the GA-FC

You can switch TONE SELECT (CH1–CH4, PANEL). You can also switch EFFECTS (BOOSTER/MOD, DELAY/FX, REVERB) on/off, set the delay time (TAP), and turn EFFECT LOOP on/off (LOOP).

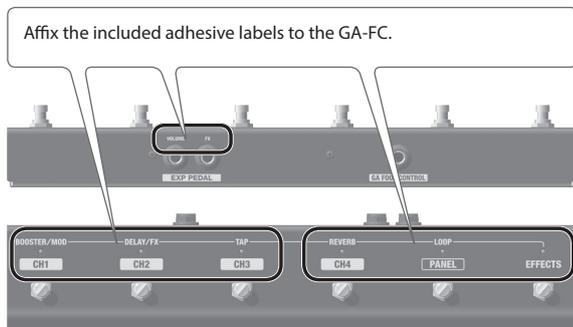

#### Using the expression pedals

If you connect an expression pedal (sold separately: Roland EV-5, BOSS FV-500L, BOSS FV-500H), you can use the pedal to vary the volume or control an effect such as WAH.



Jack	Explanation
VOLUME	Adjust the volume.
FX	* You can control an effect such as WAH.

#### Setting MINIMUM VOLUME of an expression pedal

With the [MINIMUM VOLUME] knob of an expression pedal, you can set the value for when the pedal is lifted up all the way (lowest value).

[MINIMUM VOLUME] knob



- \* Use only the specified expression pedal. By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

## 18 MIDI IN jack **HEAD only**

You can control the KATANA-HEAD from a multi-effect unit or a MIDI foot controller.

### How the MIDI receive channel is specified

Receive channel	Operation
CH 1	Hold down the [CH 1] button while turning the power on.
CH 2	Hold down the [CH 2] button while turning the power on.
CH 3	Hold down the [CH 3] button while turning the power on.
CH 4	Hold down the [CH 4] button while turning the power on.

- \* Receive channel is set to CH1 when shipped from the factory.

### RECOGNIZED RECEIVE DATA

RX CH	1-4	
OMNI	OFF (fixed)	
PC	1 (00H) :	CH1
	2 (01H) :	CH2
	3 (02H) :	CH3
	4 (03H) :	CH4
	5 (04H) :	PANEL
CC	#16	FX1 SW
	#17	FX2 SW
	#18	FX3 SW
	#19	EFFECT LOOP SW
		0 - 63 : OFF, 64 - 127 : ON

- \* When you operate the knobs in the EFFECTS section, the settings of the knobs become effective and the above on/off setting will be discarded.

## Turning the Power On/Off

\* Once everything is properly connected (p. 4–p. 6), be sure to follow the procedure below to turn on their power. If you turn on equipment in the wrong order, you risk causing malfunction or equipment failure.

### 1. Make sure that the KATANA's [MASTER] knob and the volume of the devices connected to the KATANA are set to 0.

\* Before connecting your instrument to the KATANA's INPUT jack, set the [MASTER] knob to the minimum setting (far left).

### 2. Turn on the KATANA.

\* Before turning the unit on/off, always be sure to turn the volume down. Even with the volume turned down, you might hear some sound when switching the unit on/off. However, this is normal and does not indicate a malfunction.



### 3. Turn on the power of the devices connected to the LINE OUT jack and PHONES/REC OUT jack.

### 4. Adjust the volume levels for the devices.

Before switching off the power, lower the volume on each of the devices in your system and then TURN OFF the devices in the reverse order to which they were switched on.

\* If you need to turn off the power completely, first turn off the unit, then unplug the power cord from the power outlet. Refer to "To completely turn off power to the unit, pull out the plug from the outlet" (p. 2).

\* When you operate the stand, please be careful not to get your fingers pinched between the movable part and the panel. In places where small children are present, make sure that an adult provides supervision and guidance.

## Restoring the Factory Settings

Here's how the settings stored in the KATANA can be returned to their factory-set condition (factory reset).


### 1. While holding down the [PANEL] button, turn the power on.

All settings of the unit will return to their factory-set state.

## Tilting the Unit

50/100 only

When using the KATANA-50, KATANA-100, or KATANA-100/212 at a low position such as on the floor, extending the stand will make the sound from the speakers easier to hear.

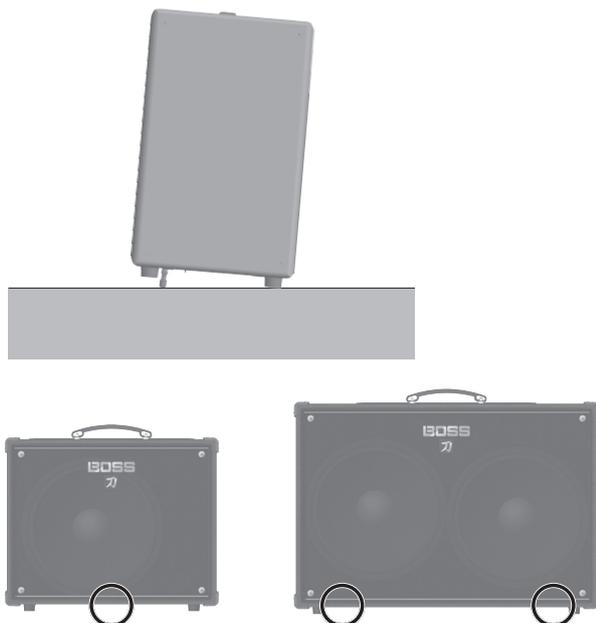

KATANA-50, KATANA-100

KATANA-100/212

\* The KATANA-50 and KATANA-100 have one folding leg attached to the bottom, and the KATANA-100/212 has two folding legs (at left and right).

\* Be sure to fold the stand when transporting the unit.

English

日本語

Deutsch

Français

Italiano

Español

Português

Nederlands

# Using the Effects

The KATANA amp lets you switch between 15 types of effect by using the buttons and knobs. You can use three types of effect simultaneously.



## Effects assigned to each knob when the unit is shipped

Knob	Color of the button	BOOSTER	MOD
	Green	BLUES DRIVE	CHORUS
	Red	OVERDRIVE	FLANGER
	Orange	DISTORTION	PHASER
Knob	Color of the button	DELAY	FX
	Green	DIGITAL DELAY	TREMOLO
	Red	ANALOG DELAY	T.WAH
	Orange	TAPE ECHO	OCTAVE
Knob	Color of the button	REVERB	
	Green	PLATE REVERB	
	Red	SPRING REVERB	
	Orange	HALL REVERB	

1. Press the [BOOSTER/MOD], [DELAY/FX], or [REVERB] button to select the effect that you want to use.

Each time you press the button, its color changes.




2. Turn the knob to adjust the depth of the effect.



\* Either BOOSTER or MOD is selected depending on the position of the knob.



\* Either DELAY or FX is selected depending on the position of the knob.

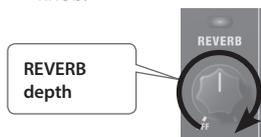

## About the Factory-Set Effects

Effect	Explanation
<b>BOOSTER</b>	
BLUES DRIVE	A crunch sound like the BOSS BD-2, creating distortion that faithfully reproduces the nuances of your picking.
OVERDRIVE	An overdrive sound like the BOSS OD-1, producing sweet and mild distortion.
DISTORTION	A standard and highly usable distortion sound.
<b>MOD</b>	
CHORUS	An effect that adds a slightly modulated sound to the direct signal, creating beautiful spaciousness and depth.
FLANGER	Produces a flanging effect which applies modulation that is reminiscent of a jet airplane.
PHASER	Produces a phasing effect which applies a sense of rotation to the sound by adding a slightly phase-shifted sound to the direct signal.
<b>DELAY</b>	
DIGITAL DELAY	A clear digital delay sound.
ANALOG DELAY	A mild analog delay sound.
TAPE ECHO	A sound with the distinctive modulation of a tape echo unit.
<b>FX</b>	
TREMOLO	An effect that cyclically modulates the volume.
T.WAH	A wah effect that modulates a filter according to the volume of the guitar, producing a wah effect.
OCTAVE	Adds a sound one octave lower than the input, generating a sense of low-frequency solidity.
<b>REVERB</b>	
PLATE REVERB	Simulates a plate reverb (a reverb unit that uses the vibration of a metal plate), providing a metallic resonance with an extended high-frequency range.
SPRING REVERB	Simulates the spring reverb unit built into some guitar amps.
HALL REVERB	Simulates the reverberation of a concert hall.

## Making use of the KATANA's dedicated software

You can connect the amp via USB to your computer, and use it with dedicated software. Using the dedicated software allows you to do the following:




- Easily download dedicated effects from Boss Tone Central (<http://bosstonecentral.com>) download site into the amp.
- Edit the effect settings.
- Back up effects and other internal settings, or restore settings from a backup.


You can easily download the dedicated software from our BOSS TONE CENTRAL (<http://bosstonecentral.com/>) website. For details on how to use the software, refer to the Readme.htm file that comes with the download.

# Block Diagram

## KATANA-50

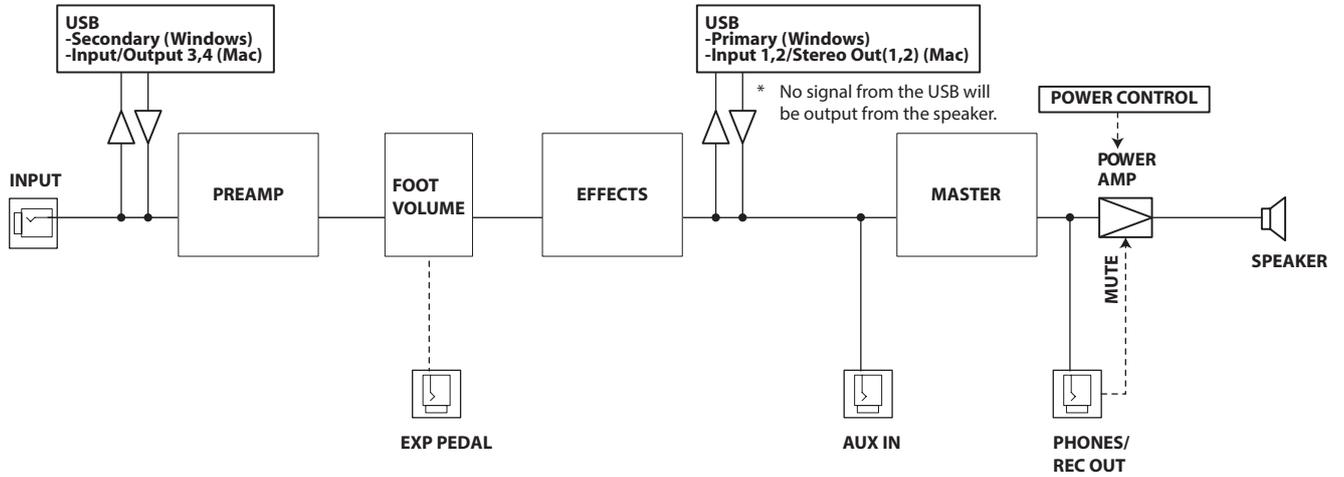

## KATANA-100, KATANA-100/212, KATANA-HEAD

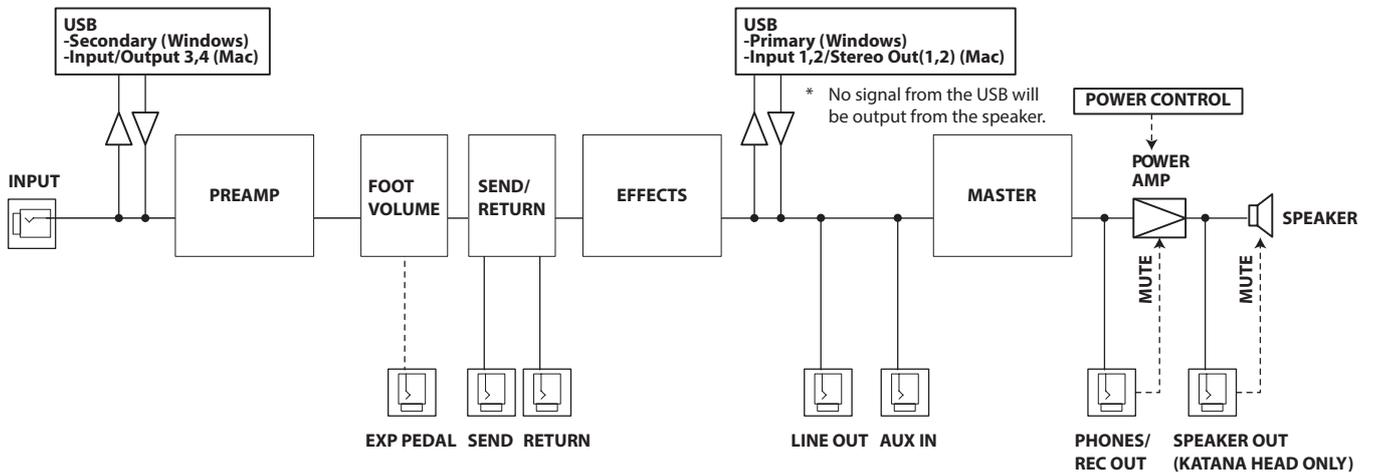

# Main Specifications

BOSS KATANA-50: Guitar Amplifier  
 BOSS KATANA-100: Guitar Amplifier  
 BOSS KATANA-100/212: Guitar Amplifier  
 BOSS KATANA-HEAD: Guitar Amplifier

	KATANA-50	KATANA-100	KATANA-100/212	KATANA-HEAD
<b>Rated Power Output</b>	50 W	100 W		
<b>Nominal Input Level</b>	INPUT: -10 dBu (1M $\Omega$ ) AUX IN: -10 dBu			
<b>Speaker</b>	30 cm (12 inches) x 1	30 cm (12 inches) x 1	30 cm (12 inches) x 2	12 cm (5 inches) x 1
<b>Controls</b>	[POWER] switch [MASTER] knob [POWER CONTROL] switch: STANDBY, 0.5 W, 25 W, 50 W <AMPLIFIER> [AMP TYPE] switch: ACOUSTIC, CLEAN, CRUNCH, LEAD, BROWN [GAIN] knob [VOLUME] knob <EQUALIZER> [BASS] knob [MIDDLE] knob [TREBLE] knob <MULTI EFFECT> [BOOSTER/MOD] button [DELAY/FX] button [REVERB] button [TAP] button [BOOSTER/MOD] knob [DELAY/FX] knob [REVERB] knob <TONE SETTING> [CH1] button [CH2] button [CH3] button [CH4] button [PANEL] button	[POWER] switch [MASTER] knob [PRESENCE] knob [POWER CONTROL] switch: STANDBY, 0.5 W, 50 W, 100 W <AMPLIFIER> [AMP TYPE] knob: ACOUSTIC, CLEAN, CRUNCH, LEAD, BROWN [GAIN] knob [VOLUME] knob <EQUALIZER> [BASS] knob [MIDDLE] knob [TREBLE] knob <MULTI EFFECT> [BOOSTER/MOD] button [DELAY/FX] button [REVERB] button [TAP] button [BOOSTER/MOD] knob [DELAY/FX] knob [REVERB] knob <TONE SETTING> [CH1] button [CH2] button [CH3] button [CH4] button [PANEL] button		
<b>Indicators</b>	BOOSTER/MOD DELAY/FX REVERB TAP CH1 CH2 PANEL	ACOUSTIC, CLEAN, CRUNCH, LEAD, BROWN BOOSTER/MOD DELAY/FX REVERB TAP CH1 CH2 CH3 CH4 PANEL		
<b>Connectors</b>	INPUT jack: 1/4-inch phone type AUX IN jack: Stereo miniature phone type REC OUT/PHONES jack: Stereo 1/4-inch phone type EXP PEDAL/CTL CH1/CH2 jack: 1/4-inch TRS phone type USB port: USB B type AC IN jack	INPUT jack: 1/4-inch phone type AUX IN jack: Stereo miniature phone type REC OUT/PHONES jack: Stereo 1/4-inch phone type SEND jack: 1/4-inch phone type RETURN jack: 1/4-inch phone type LINE OUT jack: 1/4-inch phone type EXP PEDAL/CTL CH1/CH2 jack: 1/4-inch TRS phone type GA-FC jack: 1/4-inch TRS phone type USB port: USB B type AC IN jack		INPUT jack: 1/4-inch phone type AUX IN jack: Stereo miniature phone type REC OUT/PHONES jack: Stereo 1/4-inch phone type SEND jack: 1/4-inch phone type RETURN jack: 1/4-inch phone type LINE OUT jack: 1/4-inch phone type SPEAKER OUT jack: 1/4-inch phone type EXP PEDAL/CTL CH1/CH2 jack: 1/4-inch TRS phone type GA-FC jack: 1/4-inch TRS phone type MIDI IN connector USB port: USB B type AC IN jack
<b>Power Consumption</b>	47 W	77 W		
<b>Dimensions</b>	470 (W) x 238 (D) x 398 (H) mm 18-9/16 (W) x 9-3/8 (D) x 15-11/16 (H) inches	530 (W) x 248 (D) x 484 (H) mm 20-7/8 (W) x 9-13/16 (D) x 17-1/2 (H) inches	670 (W) x 248 (D) x 484 (H) mm 26-7/16 (W) x 9-13/16 (D) x 19-1/16 (H) inches	470 (W) x 228 (D) x 215 (H) mm 18-9/16 (W) x 9 (D) x 8-1/2 (H) inches
<b>Weight</b>	11.6 kg 25 lbs 10 oz	14.8 kg 32 lbs 11 oz	19.8 kg 43 lbs 11 oz	8.8 kg 19 lbs 7 oz
<b>Accessories</b>	Owner's manual Power cord	Owner's manual Power cord GA-FC sticker		
<b>Options (sold separately)</b>	Footswitch: BOSS FS-5L Expression pedal: Roland EV-5, BOSS FV-500L, BOSS FV-500H	Footswitch: BOSS FS-5L, BOSS FS-6, BOSS FS-7 Expression pedal: Roland EV-5, BOSS FV-500L, BOSS FV-500H GA FOOT CONTROLLER (GA-FC)		

\* 0 dBu = 0.775 Vrms

\* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

For the USA

## FEDERAL COMMUNICATIONS COMMISSION RADIO FREQUENCY INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment requires shielded interface cables in order to meet FCC class B limit.

Any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For Canada

CAN ICES-3 (B)/NMB-3 (B)

For Korea

### 사용자 안내문

기종별	사용자 안내문
B 급 기기 (가정용 방송통신기자재)	이 기기는 가정용(B 급) 전자파적합기기로서 주로 가정에서 사용하는 것을 목적으로 하며, 모든 지역에서 사용할 수 있습니다.

For C.A. US (Proposition 65)

### WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

2036-1 Nakagawa, Hosoe-cho, Kita-ku, Hamamatsu, Shizuoka 431-1304, Japan



For the USA

## DECLARATION OF CONFORMITY Compliance Information Statement

Model Name : KATANA-50, KATANA-100, KATANA-100/212, KATANA-HEAD  
Type of Equipment : GUITAR AMPLIFIER  
Responsible Party : Roland Corporation U.S.  
Address : 5100 S. Eastern Avenue, Los Angeles, CA 90040-2938  
Telephone : (323) 890-3700

**For EU Countries**



- UK** This symbol indicates that in EU countries, this product must be collected separately from household waste, as defined in each region. Products bearing this symbol must not be discarded together with household waste.
- DE** Dieses Symbol bedeutet, dass dieses Produkt in EU-Ländern getrennt vom Hausmüll gesammelt werden muss gemäß den regionalen Bestimmungen. Mit diesem Symbol gekennzeichnete Produkte dürfen nicht zusammen mit dem Hausmüll entsorgt werden.
- FR** Ce symbole indique que dans les pays de l'Union européenne, ce produit doit être collecté séparément des ordures ménagères selon les directives en vigueur dans chacun de ces pays. Les produits portant ce symbole ne doivent pas être mis au rebut avec les ordures ménagères.
- IT** Questo simbolo indica che nei paesi della Comunità europea questo prodotto deve essere smaltito separatamente dai normali rifiuti domestici, secondo la legislazione in vigore in ciascun paese. I prodotti che riportano questo simbolo non devono essere smaltiti insieme ai rifiuti domestici. Ai sensi dell'art. 13 del D.Lgs. 25 luglio 2005 n. 151.
- ES** Este símbolo indica que en los países de la Unión Europea este producto debe recogerse aparte de los residuos domésticos, tal como esté regulado en cada zona. Los productos con este símbolo no se deben depositar con los residuos domésticos.
- PT** Este símbolo indica que nos países da UE, a recolha deste produto deverá ser feita separadamente do lixo doméstico, de acordo com os regulamentos de cada região. Os produtos que apresentem este símbolo não deverão ser eliminados juntamente com o lixo doméstico.
- NL** Dit symbool geeft aan dat in landen van de EU dit product gescheiden van huishoudelijk afval moet worden aangeboden, zoals bepaald per gemeente of regio. Producten die van dit symbool zijn voorzien, mogen niet samen met huishoudelijk afval worden verwijderd.
- DK** Dette symbol angiver, at i EU-lande skal dette produkt opsamles adskilt fra husholdningsaffald, som defineret i hver enkelt region. Produkter med dette symbol må ikke smides ud sammen med husholdningsaffald.
- NO** Dette symbolet indikerer at produktet må behandles som spesialavfall i EU-land, iht. til retningslinjer for den enkelte regionen, og ikke kastes sammen med vanlig husholdningsavfall. Produkter som er merket med dette symbolet, må ikke kastes sammen med vanlig husholdningsavfall.

- SE** Symbolen anger att i EU-länder måste den här produkten kasseras separat från hushållsavfall, i enlighet med varje regions bestämmelser. Produkter med den här symbolen får inte kasseras tillsammans med hushållsavfall.
- FI** Tämä merkintä ilmaisee, että tuote on EU-maissa kerättävä erillään kotitalousjätteistä kunkin alueen voimassa olevien määräysten mukaisesti. Tällä merkinnällä varustettuja tuotteita ei saa hävittää kotitalousjätteiden mukana.
- HU** Ez a szimbólum azt jelenti, hogy az Európai Unióban ezt a terméket a háztartási hulladéktól elkülönítve, az adott régióban érvényes szabályozás szerint kell gyűjteni. Az ezzel a szimbólummal ellátott termékeket nem szabad a háztartási hulladék közé dobni.
- PL** Symbol oznacza, że zgodnie z regulacjami w odpowiednim regionie, w krajach UE produktu nie należy wyrzucać z odpadami domowymi. Produktów opatrzonych tym symbolem nie można utylizować razem z odpadami domowymi.
- CZ** Tento symbol udává, že v zemích EU musí být tento výrobek sbírán odděleně od domácího odpadu, jak je určeno pro každý region. Výrobky nesoucí tento symbol se nesmí vyhazovat spolu s domácím odpadem.
- SK** Tento symbol vyjadruje, že v krajinách EÚ sa musí zber tohto produktu vykonávať oddelene od domového odpadu, podľa nariadení platných v konkrétnej krajine. Produkty s týmto symbolom sa nesmú vyhazovať spolu s domovým odpadom.
- EE** See sümbol näitab, et EL-i maades tuleb see toode olemprügist eraldi koguda, nii nagu on igas piirkonnas määratletud. Selle sümboliga märgitud tooteid ei tohi ära visata koos olmeprügiga.
- LT** Šis simbolis rodo, kad ES šalyse šis produktas turi būti surenkamas atskirai nuo buitinių atliekų, kaip nustatyta kiekviename regione. Šiuo simboliu paženklinoti produktai neturi būti išmetami kartu su buitiniems atliekomis.
- LV** Šis simbols norāda, ka ES valstīs šo produktu jāievāc atsevišķi no mājsaimniecības atkritumiem, kā noteikts katrā reģionā. Produktus ar šo simbolu nedrīkst izmest kopā ar mājsaimniecības atkritumiem.
- SI** Ta simbol označuje, da je treba proizvod v državah EU zbirati ločeno od gospodinjjskih odpadkov, tako kot je določeno v vsaki regiji. Proizvoda se tem znakom ni dovoljeno odlagati skupaj z gospodinjjskimi odpadki.
- GR** Το σύμβολο αυτό υποδηλώνει ότι στις χώρες της Ε.Ε. το συγκεκριμένο προϊόν πρέπει να συλλέγεται χωριστά από τα υπόλοιπα οικιακά απορρίμματα, σύμφωνα με όσα προβλέπονται σε κάθε περιοχή. Τα προϊόντα που φέρουν το συγκεκριμένο σύμβολο δεν πρέπει να απορρίπτονται μαζί με τα οικιακά απορρίμματα.

**For China**

## 有关产品中所含有害物质的说明

本资料就本公司产品中所含的特定有害物质及其安全性予以说明。  
本资料适用于 2007 年 3 月 1 日以后本公司所制造的产品。

**环保使用期限**



此标志适用于在中国国内销售的电子信息产品，表示环保使用期限的年数。所谓环保使用期限是指在自制造日起的定期限内，产品中所含的有害物质不致引起环境污染，不会对人身、财产造成严重的不良影响。环保使用期限仅在遵照产品使用说明书，正确使用产品的条件下才有效。不当的使用，将会导致有害物质泄漏的危险。

**产品中有毒有害物质或元素的名称及含量**

部件名称	有毒有害物质或元素					
	铅(Pb)	汞(Hg)	镉(Cd)	六价铬(Cr(VI))	多溴联苯(PBB)	多溴二苯醚(PBDE)
外壳(壳体)	×	○	○	○	○	○
电子部件(印刷电路板等)	×	○	×	○	○	○
附件(电源线、交流适配器等)	×	○	○	○	○	○

○：表示该有毒有害物质在该部件所有均质材料中的含量均在 SJ/T11363-2006 标准规定的限量要求以下。  
×：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 SJ/T11363-2006 标准规定的限量要求。  
因根据现有的技术水平，还没有什么物质能够代替它。

# Information

When you need repair service, call your nearest Roland Service Center or authorized Roland distributor in your country as shown below.

## AFRICA

### REUNION

**MARCEL FO-YAM Sarl**  
25 Rue Jules Hermann,  
Chaudron - BP79 97 491  
Ste Clotilde Cedex,  
REUNION ISLAND  
TEL: (0262) 218-429

### SOUTH AFRICA

**Paul Bothner(PTY)Ltd.**  
Royal Cape Park, Unit 24  
Londonderry Road, Ottery 7800  
Cape Town, SOUTH AFRICA  
TEL: (021) 799 4900

## ASIA

### CHINA

**Roland Shanghai Electronics Co.,Ltd.**  
5F, No.1500 Pingliang Road,  
Yangpu Shanghai 200090, CHINA  
TEL: (021) 5580-0800  
Toll Free: 4007-888-010

**Roland Shanghai Electronics Co.,Ltd. (BEIJING OFFICE)**  
3F, Soluxe Fortune Building  
63 West Dawang Road,  
Chaoyang Beijing, CHINA  
TEL: (010) 5960-2565/0777  
Toll Free: 4007-888-010

### HONG KONG

**Tom Lee Music**  
11/F Silvercord Tower 1  
30 Canton Rd  
Tsimshatsui, Kowloon,  
HONG KONG  
TEL: 852-2737-7688

### Parsons Music Ltd.

8th Floor, Railway Plaza, 39  
Chatham Road South, T.S.T,  
Kowloon, HONG KONG  
TEL: 852-2333-1863

### INDIA

**Rivera Digitec (India) Pvt. Ltd.**  
411, Nirman Kendra Mahalaxmi  
Flats Compound Off. Dr. Edwin  
Moses Road, Mumbai-400011,  
INDIA  
TEL: (022) 2493 9051

### INDONESIA

**PT. Citra Intirama**  
Ruko Garden Shopping Arcade  
Unit 8 CR, Podomoro City  
Jl.Jetjend. S.Parman Kav.28  
Jakarta Barat 11470, INDONESIA  
TEL: (021) 5698-5519/5520

### KAZAKHSTAN

**Alatau Dbyystary**  
141 Abylai-Khan ave, 1st floor,  
050000 Almaty, KAZAKHSTAN  
TEL: (727) 2725477  
FAX: (727) 2720730

### KOREA

**Cosmos Corporation**  
27, Banpo-daero, Seocho-gu,  
Seoul, KOREA  
TEL: (02) 3486-8855

### MALAYSIA

**Roland Asia Pacific Sdn. Bhd.**  
45-1, Block C2, Jalan PJU 1/39,  
Dataran Prima, 47301 Petaling  
Jaya, Selangor, MALAYSIA  
TEL: (03) 7805-3263

### MYANMAR

**THAW AND ZIN FAMILY CO., LTD.**  
4061-4062, Taw Win Center,  
Level-3, Yangon, MYANMAR  
TEL: 09 31010744 / 09 5061300

### PHILIPPINES

**G.A. Yupangco & Co. Inc.**  
339 Gil J. Puyat Avenue  
Makati, Metro Manila 1200,  
PHILIPPINES  
TEL: (02) 899 9801

### SINGAPORE

**Sweet Lee Service Centre**  
12 Jalan Kilang Barat #01-00  
Singapore 159354  
TEL: (+65) 6376 6141

### TAIWAN

**ROLAND TAIWAN ENTERPRISE CO., LTD.**  
9F-5, No. 112 Chung Shan  
North Road Sec. 2 Taipei 104,  
TAIWAN  
TEL: (02) 2561 3339

### THAILAND

**Theera Music Co., Ltd.**  
100-108 Soi Verng  
Nakornkasem, New Road,  
Sumpantawong, Bangkok  
10100, THAILAND  
TEL: (02) 224-8821

### VIET NAM

**VIET THUONG CORPORATION**  
386 CACH MANG THANG TAM ST.  
DIST.3, HO CHI MINH CITY,  
VIET NAM  
TEL: (08) 9316540

## CARIBBEAN

### BARBADOS

**A&B Music Supplies LTD**  
12 Webster Industrial Park  
Wilkey, St.Michael, BARBADOS  
TEL: (246) 430-1100

### CURACAO

**Zeelandia Music Center Inc.**  
Orionweg 30  
Curacao, Netherland Antilles  
TEL: (305) 5926866

### DOMINICAN REPUBLIC

**Instrumentos Fernando Giraldez**  
Calle Roberto Pastoriza #325  
Sanchez Naco Santo Domingo,  
DOMINICAN REPUBLIC  
TEL: (809) 683 0305

### MARTINIQUE

**Musique & Son**  
Z.I.Les Mangle  
97232 Le Lamentin,  
MARTINIQUE F.W.I.  
TEL: 596 596 426860

### TRINIDAD

**AMR Ltd**  
Ground Floor Maritime Plaza  
Barataria TRINIDAD W.I.  
TEL: (868) 638 6385

## CENTRAL/SOUTH AMERICA

### ARGENTINA

**Instrumentos Musicales S.A.**  
Av.Santa Fe 2055  
(1123) Buenos Aires, ARGENTINA  
TEL: (011) 4508-2700

### BRAZIL

**Roland Brasil Ltda.**  
Rua San Jose, 211  
Parque Industrial San Jose  
Cotia - Sao Paulo - SP, BRAZIL  
TEL: (011) 4615 5666

### CHILE

**Audiomusica SpA**  
Av. Chile España 393  
Ñuñoa  
Santiago, CHILE  
TEL: (+56) 2 2384 20 00

### COLOMBIA

**CENTRO MUSICAL S.A.S.**  
Parque Industrial del Norte  
Bodega 130  
GIRAROTA - ANTIOQUIA,  
COLOMBIA  
TEL: (454) 57 77 EXT 115

### COSTA RICA

**JUAN Bansbach Instrumentos Musicales**  
Ave.1. Calle 11, Apartado 10237,  
San Jose, COSTA RICA  
TEL: 258-0211

### ECUADOR

**Mas Musica**  
Rumihacha 822 y Zaruma  
Guayaquil - ECUADOR  
TEL: (593-4) 2302364

### EL SALVADOR

**OMNI MUSIC**  
75 Avenida Norte y Final Alameda  
Juan Pablo II, Edificio No.4010  
San Salvador, EL SALVADOR  
TEL: 262-0788

### GUATEMALA

**Casa Instrumental**  
Calzada Roosevelt 34-01,zona  
11 Ciudad de Guatemala,  
GUATEMALA  
TEL: (502) 599-2888

### HONDURAS

**Almacen Pajaro Azul S.A. de C.V.**  
B.O.Paz Barahona  
3 Ave.11 Calle S.O  
San Pedro Sula, HONDURAS  
TEL: (504) 553-2029

### NICARAGUA

**Bansbach Instrumentos Musicales Nicaragua**  
Altamira D'Este Calle Principal de  
la Farmacia 5ta.Avenida  
1 Cuadra al Lago.#503  
Managua, NICARAGUA  
TEL: (505) 277-2557

### PANAMA

**SUPRO MUNDIAL, S.A.**  
Boulevard Andrews, Allbrook,  
Panama City, REP. DE PANAMA  
TEL: 315-0101

### PARAGUAY

**WORLD MUSIC**  
Jebai Center 2018, Centro  
CIUDAD DE ESTE, PARAGUAY  
TEL: (595) 615 059

### PERU

**Audiomusica Peru SAC**  
Av.Angamos Oeste 737  
Piso 3  
Miraflores  
Lima, PERU  
TEL: (+57) 1 2557005

### URUGUAY

**Todo Musica S.A.**  
Francisco Acuna de Figueroa  
1771  
C.P.: 11.800  
Montevideo, URUGUAY  
TEL: (02) 924-2335

### VENEZUELA

**Instrumentos Musicales Allegro,C.A.**  
Av.las industrias edf.Guitar  
import #7 zona Industrial de  
Turumo Caracas, VENEZUELA  
TEL: (212) 244-1122

## EUROPE

### BELGIUM/FRANCE/

### HOLLAND/

### LUXEMBOURG

### Roland Central Europe N.V.

Houtstraat 3, B-2260, Oevel  
(Westerlo) BELGIUM  
TEL: (014) 575811

### BOSNIA AND

### HERZEGOVINA

**Mix-AP Music**  
78000 Banja Luka, Veselina  
Maslese 3,  
BOSNIA AND HERZEGOVINA  
TEL: 65 403 168

### CROATIA

**ART-CENTAR**  
Degenova 3.  
HR - 10000 Zagreb, CROATIA  
TEL: (1) 466 8493

### EUROMUSIC AGENCY

K. Racina 1/15  
HR - 40000 CAKOVEC, CROATIA  
Tel: 40-370-841

### CZECH REPUBLIC

**CZECH REPUBLIC DISTRIBUTOR s.r.o**  
Pod Bani 8  
180 00 Praha 8, CZECH REP.  
TEL: 266 312 557

### DENMARK/ESTONIA/

### LATVIA/LITHUANIA

**Roland Scandinavia A/S**  
Skagerrakvej 7, DK-2150  
Nordhavn, DENMARK  
TEL: 39166200

### FINLAND

**Roland Scandinavia As, Filial Finland**  
Vanha Nurmijarventie 62  
01670 Vantaa, FINLAND  
TEL: (0) 9 68 24 020

### GERMANY/AUSTRIA

**ROLAND Germany GmbH.**  
Adam-Opel-Strasse 4, 64569  
Nauheim, GERMANY  
TEL: 6152 95546-00

### GREECE/CYPRUS

**STOLLAS S.A.**  
**Music Sound Light**  
155, New National Road  
Patras 26442, GREECE  
TEL: 2610 435400

### HUNGARY

**Roland East Europe Ltd.**  
2045. Törökbalint, FSD Park 3. ép.,  
HUNGARY  
TEL: (23) 511 011

### IRELAND

**Roland Ireland**  
E2 Calmout Park, Calmout  
Avenue, Dublin 12,  
Republic of IRELAND  
TEL: (01) 4294444

### ITALY

**Roland Italy S. p. A.**  
Viale delle Industrie 8,  
20020 Arese, Milano, ITALY  
TEL: (02) 937781

### MACEDONIA

**MK MUJZIK**  
Bratstvo Edinstvo 9  
2208 Lozovo, MACEDONIA  
TEL: 70 264 458

### MONTENEGRO

**MAX-AP**  
P. Fah 92  
Przno, Kamenovo bb  
86000 Budva, MONTENEGRO  
TEL: 33 452-820

### NORWAY

**Roland Scandinavia Avd. Kontor Norge**  
Lilleakerveien 2 Postboks 95  
Lilleaker N-0216 Oslo,  
NORWAY  
TEL: 2273 0074

### POLAND

**ROLAND POLSKA SP. Z O.O.**  
ul. Katy Grodziskie 16b  
03-289 Warszawa, POLAND  
TEL: (022) 678 9512

### PORTUGAL

**Roland Iberia S.L. Branch Office Porto**  
Rua 5 de Outubro nº 5587  
4465-082 Sao Mamede de  
Infesta, Porto, PORTUGAL  
TEL: (+35 1) 22 01 39 526

### ROMANIA

**Pro Music Concept SRL**  
440221 Satu Mare  
B-dul Independentei nr. 14/a.,  
ROMANIA  
TEL: (0361) 807-333

### RUSSIA

**Roland Music LLC**  
Dorozhnaya ul.3,korp.6  
117 545 Moscow, RUSSIA  
TEL: (495) 981-4967

### SERBIA

**Music AP**  
Sutjeska br. 5 XS - 24413 PALIC,  
SERBIA  
TEL: (0) 24 539 395

### SLOVAKIA

**DAN Distribution, s.r.o.**  
Povazská 18.  
SK - 940 01 Nové Zámky,  
SLOVAKIA  
TEL: (035) 6424 330

### SPAIN

**Roland Iberia S.L.**  
Llacuna, 161, 2º-2º  
08018 Barcelona, SPAIN  
TEL: (00 34) 93 493 91 36

### SWEDEN

**Roland Scandinavia A/S SWEDISH SALES OFFICE**  
Märbackagatan 31, 4 tr.  
SE-123 43 Farsta, SWEDEN  
TEL: (0) 8 683 04 30

### SWITZERLAND

**Roland (Switzerland) AG**  
Landstrasse 5, Postfach,  
CH-4452 Itingen, SWITZERLAND  
TEL: (061) 975-9987

### TURKEY

**ZUHAL DIS TICARET A.S.**  
Galipdede Cad. No: 33 Tunel,  
Beyoglu, Istanbul, Turkey  
TEL: (0212) 249 85 10

### UKRAINE

**EURHYTHMICS Ltd.**  
P.O.Box: 37-a.  
Nedecey Str. 30  
UA - 89600 Mukachevo,  
UKRAINE  
TEL: (03131) 314-40

### UNITED KINGDOM

**Roland (U.K.) Ltd.**  
Atlantic Close, SWANSEA SA7  
9FJ, UNITED KINGDOM  
TEL: (01792) 702701

## MIDDLE EAST

### BAHRAIN

**Moon Stores**  
No.1231&1249 Rumaytha  
Building Road 3931,  
Manama 339, BAHRAIN  
TEL: 17 813 942

### EGYPT

**Al Fanny Trading**  
9, EBN Hagar Al Askalany Street,  
ARD E1 Golf, Heliopolis,  
Cairo 11341, EGYPT  
TEL: (022)-417-1828

### IRAN

**MOCO INC.**  
Jadeh Makhsoos Karaj (K-9),  
Nakhe Zarin Ave.  
Jalal Street, Reza Alley No.4  
Tehran 1389716791, IRAN  
TEL: (021)-44545370-5

### ISRAEL

**Halilit P. Greenspoon & Sons Ltd.**  
8 Retzif Ha'Alia Hashnia St.  
Tel-Aviv-Yafa ISRAEL  
TEL: (03) 6823666

### JORDAN

**MUSIC HOUSE CO. LTD. FREDDY FOR MUSIC**  
P. O. Box 922846  
Amman 11192, JORDAN  
TEL: (06) 5692696

### KUWAIT

**EASA HUSAIN AL-YOUSIFI & SONS CO.**  
Al-Yousifi Service Center  
P.O.Box 126 (Safat) 13002,  
KUWAIT  
TEL: 00 965 802929

### LEBANON

**Chahine S.A.L.**  
George Zeidan St., Chahine Bldg.,  
Achrafieh, P.O.Box: 16-5857  
Beirut, LEBANON  
TEL: (01) 20-1441

### OMAN

**TALENTZ ENTERPRISES LLC**  
MALATAN BUILDING NO. 4  
SHOP NO. 3  
AL NOOR STREET  
RUWI  
SULTANATE OF OMAN.  
TEL: 00968 24783443  
FAX: 00968 24784554

### QATAR

**AL-EMADI TRADING & CONTRACTING CO.**  
P.O. Box 62, Doha, QATAR  
TEL: 4423-554

### SAUDI ARABIA

**Adawlah Universal Electronics APL**  
Behind Pizza Inn  
Prince Turkey Street  
Adawlah Building,  
PO BOX 2154,  
Al Khobar 31952,  
SAUDI ARABIA  
TEL: (03) 8643601

### SYRIA

**Technical Light & Sound Center**  
PO Box 13520 Bldg No.49  
Khaled Abn Alwalid St.  
Damascus, SYRIA  
TEL: (01 1) 223-5384

### U.A.E.

**Adawlah Universal Electronics APL**  
Omar bin alkhattab street, fish  
roubai about, nayef area, deira,  
Dubai, U.A.E.  
TEL: (04) 2340442

## NORTH AMERICA

### CANADA

**Roland Canada Ltd. (Head Office)**  
5480 Parkwood Way Richmond  
B. C., V6V 2M4, CANADA  
TEL: (604) 270 6626

### Roland Canada Ltd. (Toronto Office)

170 Admiral Boulevard  
Mississauga On L5T 2N6,  
CANADA  
TEL: (905) 362 9707

### MEXICO

**Casa Veerkamp, s.a. de c.v.**  
Av. Toluca No. 323, Col. Olivar  
de los Padres 01780 Mexico D.F.,  
MEXICO  
TEL: (55) 5668-6699

### Faly Music

Sucursal Capu Blvd. Norte N.3213  
Col. Nueva Aurora Cp.72070  
Puebla, Puebla, MEXICO  
TEL: 01 (222) 2315567 o 97  
FAX: 01 (222) 2266241

### Gama Music S.A. de C.V.

Madero Pte. 810 Colonia Centro  
C.P. 64000 Monterrey, Nuevo  
León, MEXICO  
TEL: 01 (81) 8374-1640 o 8372-4097  
www.gamamusica.com

### Holocausto Music

Bolivar No.62 y 76, Col.Centro  
Del.Cuahutemoc  
Mexico D.F. CP 06080, MEXICO  
TEL: 52-55 5709 9046

### Top Music S de RL de CV

Mesones 13 Local B  
Col Centro Del Cuahutemoc  
Mexico D.F. CP 06080, MEXICO  
TEL: 52-55-57099090

### U. S. A.

**Roland Corporation U.S.**  
5100 S. Eastern Avenue  
Los Angeles, CA 90004-2938,  
U. S. A.  
TEL: (323) 890 3700

## OCEANIA

### AUSTRALIA/NEW ZEALAND

**Roland Corporation Australia Pty.,Ltd.**  
38 Campbell Avenue, Dee Why  
West. NSW 2099, AUSTRALIA

For Australia  
TEL: (02) 9982 8266

For New Zealand  
TEL: (09) 3098 715