 


# Connecting the GA-FC EX/GA-FC to the KATANA Mk II

## Connections

Connect the GA-FC jack on the KATANA Mk II with a stereo cable.

A stereo cable must be used.

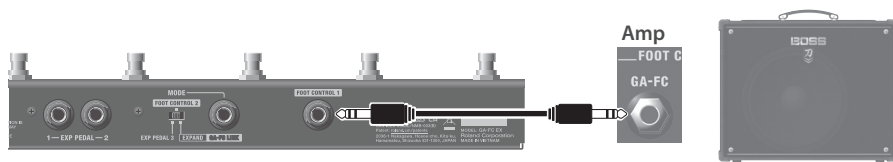

## Switching Between Operating Modes on the GA-FC EX/GA-FC

Press the [EFFECTS] switch on the GA-FC EX/GA-FC to switch between the operating modes of the GA-FC EX/GA-FC.

To switch between function modes, keep the [EFFECTS] switch pressed down for at least one second.

EFFECTS indicator	Operating mode
Unlit	Channel select
Lit	EFFECTS ON/OFF
Blinking	FUNCTION

### GA-FC EX




### GA-FC



## Using an Expression Pedal and Footswitch

Connect an expression pedal (FV-500L, FV-500H, and Roland EV-5; sold separately) to control the volume and other parameters with your foot.


If a footswitch (FS-5U; sold separately) is connected, you can use it to switch between the TONE SETTING's BANK A/B, or to set the delay time (TAP).

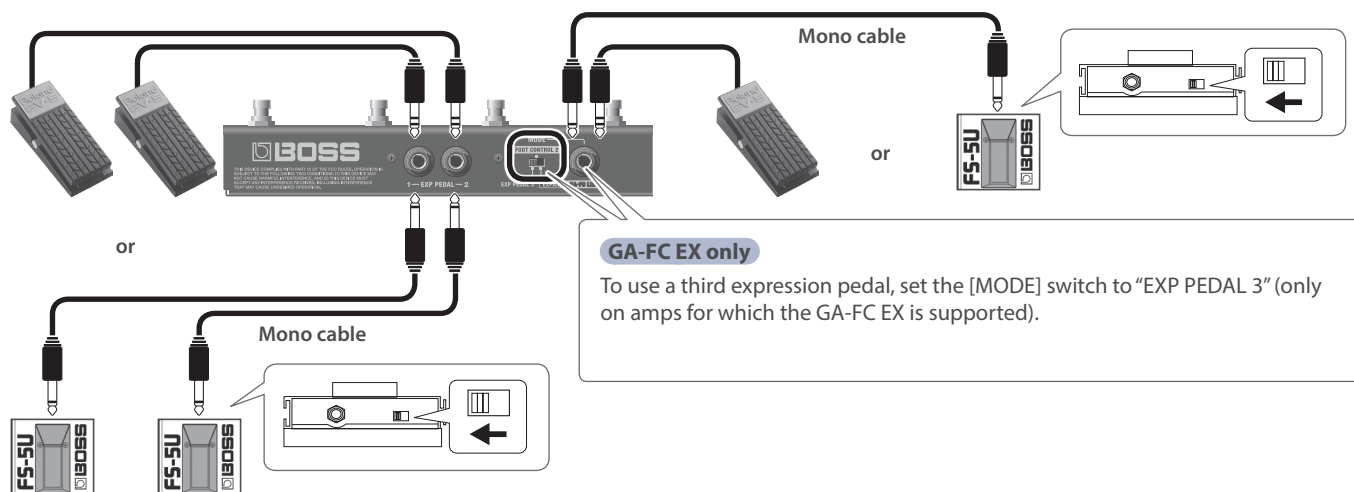

\* Use only the specified expression pedal (FV-500L, FV-500H, and Roland EV-5; sold separately). By connecting any other expression pedals, you risk causing malfunction and/or damage to the unit.

Connecting a Second GA-FC EX (or GA-FC)


When the [MODE] switch on the GA-FC EX is set to “EXPAND”, you can connect a second GA-FC EX (or GA-FC).  
As an example, you can switch between channels on the first unit and between effects on the second unit.

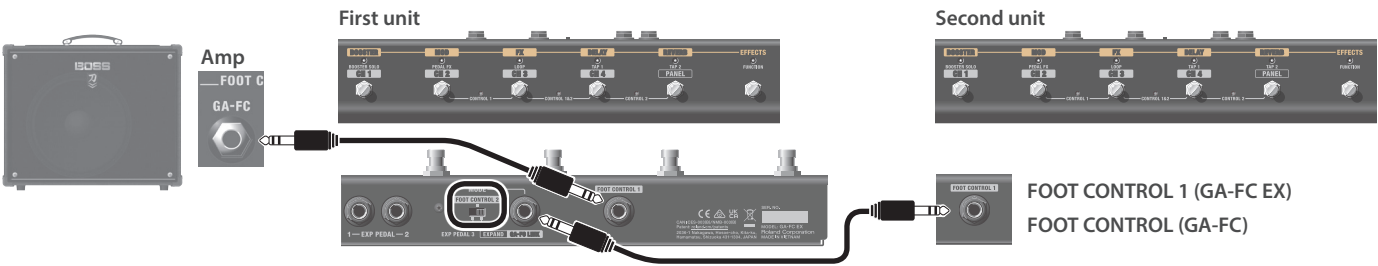

First unit	Used only for switching between channels.
Second unit	Used only for turning the effects on/off, or for switching between functions.

Connecting to a Second Amp (Amp 1 and Amp2) GA-FC EX only

When the [MODE] switch on the GA-FC EX is set to “FOOT CONTROL 2”, you can connect a second amp (only amps that are compatible with the GA-FC EX).

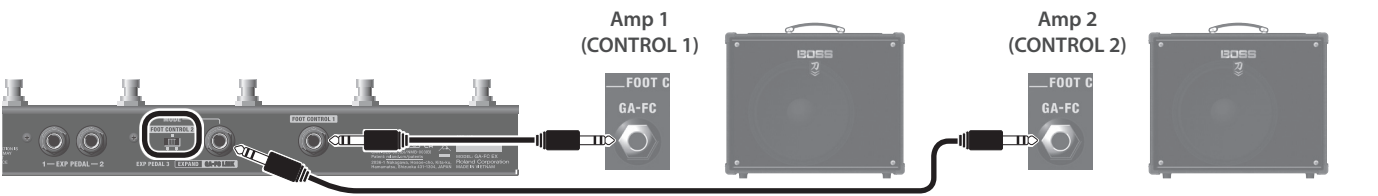

Switching between amps to control

When two amps are connected to this unit, you can switch between amps to control either one.  
Press the two switches (as shown below) at the same time for at least one second to switch.

Switches	Amps to control	Explanation
[CH 2] switch + [CH 3] switch	CONTROL 1	Controls the CONTROL 1 amp.
[CH 3] switch + [CH 4] switch	CONTROL 1&2	Controls the CONTROL 1 and CONTROL 2 amps at the same time. This lets you use the two amps as a dual amp, both with the same settings. * The indicators on the GA-FC EX light up according to the CONTROL 1 settings. * If you switch to using either CONTROL 1 or CONTROL 2 while using CONTROL 1&2, the indicator displays on the amps (such as their on/off state) may not match what you see on the GA-FC EX.
[CH 4] switch + [PANEL] switch	CONTROL 2	Controls the CONTROL 2 amp.

