

Before using this unit, carefully read the sections entitled "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of the unit. This manual should be saved and kept on hand as a convenient reference.

Main Features

- Thanks to the elasticity of hollow rubber, performance-generated vibration transmitted to a lower floor is reduced
- Low-profile design ensures excellent playability and stability
- Supports kick pad, kick trigger unit, and hi-hat control pedal
- Also supports V-Kick and V-Hi-Hat when used in conjunction with the NE-1 (sold separately)

Installation

The NE-10 is used by placing it under your kick pad or hi-hat control pedal. The illustrations at right show examples of how it is used.

To obtain maximum insulation of vibration, please note the following points.

- Place on a flat and stable floor so that the rubber feet contact the floor evenly.
When the unit is placed on thick-pile carpeting, the rubber feet may sink into the pile, reducing the noise insulating effect
- Place the kick pad or hi-hat control pedal on the center of the NE-10, making sure that the device does not extend beyond the edge of the NE-10.

Main Specifications

Dimensions	210 (W) x 540 (D) x 30 (H) mm 8-5/16 (W) x 21-5/16 (D) x 1-3/16 (H) inches
Weight	2.8 kg 6 lbs 3 oz
Compatible Models	KD-9, KD-7, FD-8 Multiple NE-1 (sold separately) units are required for the following models. KD-140, KD-120, VH-13, VH-11

* In the interest of product improvement, the specifications and/or appearance of this unit are subject to change without prior notice.

Copyright © 2013 ROLAND CORPORATION

All rights reserved.

No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

Setting Examples / 設置例

KD-9 Kick Pad

Place the unit as shown in the illustration.
* Use the anchor bolts to secure the unit as necessary.

図のように設置します。
※ 必要に応じて、アンカー・ボルトで固定します。




KD-140/KD-120 V-Kick

If using the NE-10 under the KD-140, use two NE-1 units (sold separately); if using the NE-10 with the KD-120, use four NE-1 units.
Extend the spike from the rubber foot, and place the tip of the spike in the middle of the NE-1.

KD-140 を設置する場合は NE-1 (別売) を 2 個、KD-120 の場合は 4 個用意します。
スパイクをラバー・フットから出し、スパイクの先端を NE-1 の中央に載せます。

KD-140

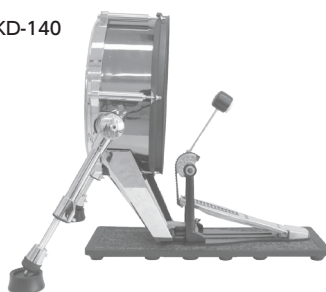

KD-120



FD-8 Hi-Hat Control Pedal

Place the unit as shown in the illustration.
* Use the anchor bolts to secure the unit as necessary.

図のように設置します。
※ 必要に応じて、アンカー・ボルトで固定します。



VH-13/VH-11 V-Hi-Hat

According to the number of feet of your hi-hat stand, use two or three NE-1 units (sold separately).
Place each of the hi-hat stand's feet on an NE-1.

ハイハット・スタンドの脚の数にあわせて、2 個または 3 個の NE-1 (別売) を用意します。
ハイハット・スタンドの脚を NE-1 に載せます。



Noise Eater NE-1 (Sold Separately / 別売)



* You will need multiple NE-1 units (sold separately) as appropriate for the equipment you're using.

※ 使用する機器によって、複数の NE-1 (別売) が必要です。

この製品を正しくお使いいただくために、ご使用前に『安全上のご注意』と『使用上のご注意』をよくお読みください。取扱説明書は、必要なときにすぐに見ることができるよう、手元に置いてください。

主な特長

- 中空ゴムの弾性により、演奏時に発生する階下への振動を低減
- 低床設計により、優れた演奏性と安定性を確保
- キック・パッド、キック・トリガー・ユニット、ハイハット・コントロール・ペダルに対応
- NE-1 (別売) と組み合わせることで、V キック、V ハイハットにも対応

設置方法

NE-10 は、キック・パッドやハイハット・コントロール・ペダルの下に敷いて使用します。左図の設置例を参考にしてお使いください。

また、以下の点にご注意いただくことで、防振効果を最大限に発揮することができます。

- ゴム足が床と均等に接するよう、平らで安定した床の上に設置してください。
毛足の長いじゅうたん上で使用すると、ゴム足が沈み込み、防振効果が得られないことがあります。
- キック・パッドやハイハット・コントロール・ペダルは、NE-10 の中央に置き、はみ出さないように設置してください。

主な仕様

外形寸法	210 (幅) × 540 (奥行) × 30 (高さ) mm
質量	2.8kg
対応機種	KD-9、KD-7、FD-8 以下の機種には、NE-1 (別売) が必要です。 KD-140、KD-120、VH-13、VH-11

※ 製品の仕様や外観は、改良のため予告なく変更することがあります。



© 2013 ローランド株式会社
本書の一部、もしくは全部を無断で複写・転載することを禁じます。






USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS


About ⚠ WARNING and ⚠ CAUTION Notices

 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols


	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The 🔥 symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

 **WARNING**


Do not use for other purposes


This product is a vibration-reducing accessory only for use with V-Drums.



Do not disassemble or modify by yourself



Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.




 **WARNING**

Do not use or store in the following types of locations


- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness.



 **WARNING**

Do not place in a location that is unstable

This product must be carefully placed so it is level and sure to remain stable. You still need to make sure that any location you choose for placing the unit provides a level surface that will properly support the unit, and keep it from wobbling.



Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.



IMPORTANT NOTES

<p>Placement</p> <ul style="list-style-type: none">• Do not expose the unit to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Excessive heat can deform or discolor the unit.• Depending on the material and temperature of the surface on which you place this product, its rubber feet may discolor or mar the surface. You can place the V-Drums Mat (TDM series) under the rubber feet to prevent this from happening.• Do not use this product outdoors.	<p>Maintenance</p> <ul style="list-style-type: none">• For everyday cleaning wipe the unit with a soft, dry cloth or one that has been slightly dampened with water. To remove stubborn dirt, use a cloth impregnated with a mild, non-abrasive detergent. Afterwards, be sure to wipe the unit thoroughly with a soft, dry cloth.• Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.	<p>Additional Precautions</p> <ul style="list-style-type: none">• The carbon included in this product may blacken nearby items, but this can be removed with a pencil eraser.• Additives in the surface of the rubber may whiten with the passage of time, but this does not affect the performance or functionality of the product.• Do not stand on top of this product, or place any instrument other than V-Drums on it; doing so may cause deformation or damage. <p>Trademarks</p> <ul style="list-style-type: none">• Roland, V-Drums, Noise Eater are either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
---	---	---






For C.A. US (Proposition 65)

WARNING









This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

安全上のご注意

火災・感電・傷害を防止するには

⚠ 警告と ⚠ 注意の意味について		図記号の例	
 警告	取り扱いを誤った場合に、使用者が死にまたは重傷を負う可能性が想定される内容を表しています。		△は、注意（危険、警告を含む）を表しています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表しています。
 注意	取り扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表しています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表しています。		⊘は、禁止（してはいけないこと）を表しています。具体的な禁止内容は、⊘の中に描かれています。左図の場合は、「分解禁止」を表しています。
			●は、強制（必ずすること）を表しています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表しています。

以下の指示を必ず守ってください

 警告	 警告	 警告
<p>他の用途に使用しない</p> <p>この製品は V ドラム専用の防振アクセサリーです。他の用途に使用しないでください。</p> 	<p>次のような場所で使用や保管はしない</p> <ul style="list-style-type: none">• 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）• 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所• 湯気や油煙が当たる場所• 塩害の恐れがある場所• 雨に濡れる場所• ほこりや砂ぼこりの多い場所• 振動や揺れの多い場所  	<p>不安定な場所に設置しない</p> <p>この製品を、ぐらつくような台や傾いた場所に設置しないでください。必ず、安定した水平な場所に設置してください。</p> <p>お子様がけがをしないように注意する</p> <p>お子様のいる場所で使用する場合やお子様が使用する場合、必ず大人のかたが、監視／指導してあげてください。</p>  

使用上のご注意

<p>設置について</p> <ul style="list-style-type: none">• 直射日光の当たる場所や発熱する機器の近く、閉め切った車内などに設置しないでください。変形、変色することがあります。• 設置条件（設置面の材質、温度など）によっては、この製品のゴム足が設置した床の表面を変色または変質させることがあります。ゴム足の下に V ドラム・マット（TDM シリーズ）を敷くと、安心してお使いいただけます。• この製品は、屋外で使用しないでください。	<p>お手入れについて</p> <ul style="list-style-type: none">• 通常のお手入れは、柔らかい布で乾拭きするか、固く絞った布で汚れを拭き取ってください。汚れが激しいときは、中性洗剤を含んだ布で汚れを拭き取ってから、柔らかい布で乾拭きしてください。• 変色や変形の原因となる、ベンジン、シンナー、アルコール類は使用しないでください。	<p>その他の注意について</p> <ul style="list-style-type: none">• 製品に含まれるカーボンが、周囲の物に黒く付着することがありますが、消しゴムで除去することができます。• 時間の経過にともない、ゴムの表面に添加剤が白く現れることがありますが、製品の性能や機能には影響ありません。• 変形や破損の原因となるため、この製品の上に乗りたり、V ドラム以外の楽器を乗せたりしないでください。• 本機が入っていた梱包箱や緩衝材を廃棄するときは、各地域のゴミの分別基準に従ってください。 <p>商標について</p> <ul style="list-style-type: none">• Roland、V-Drums、Noise Eater は、日本国およびその他の国におけるローランド株式会社の登録商標または商標です。
--	---	---