

Roland

SRX-06

EXPANSION
BOARD
SRX Series
SR-JV80 Collection Vol.1

COMPLETE ORCHESTRA

OWNER'S MANUAL

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (p. 2; p. 4). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, Owner's manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

この機器を正しくお使いいただくために、ご使用前に「安全上のご注意」(P.3)と「使用上のご注意」(P.4)をよくお読みください。また、この機器の優れた機能を十分ご理解いただくためにも、この取扱説明書をよくお読みください。取扱説明書は必要となきにすぐに見ることができるよう、手元に置いてください。

Thank you, and congratulations on your choice of the SRX-06 "SR-JV80 Collection Vol.1 Complete Orchestra" Wave Expansion Board.

This expansion board contains all of the waveforms used in the SR-JV80-02 Orchestral, SR-JV80-13 Vocal, and SR-JV80-16 Orchestral II collections, along with specially selected orchestral sounds from waveforms included in the SR-JV80-07 SuperSoundSet. This board contains new Patches and Rhythm Sets which combine the waveforms in a manner that highlights the benefits of SRX Effects and Matrix Control.

Along with standard orchestral instrument sounds such as strings, winds, percussion, and piano, the board also contains a wide variety of choir and vocal phrases. These sounds can be used in orchestral compositions, music for films, and a wide variety of other applications.

- Patches: 449
- Rhythm Sets: 5
- Waveforms: 512

* The parameter settings for Patches and Rhythm Sets are optimized for the Fantom series, XV series, JUNO-G, MX-200, RD series with SRX slots, MC-909, VR-760, and G-70 models, so there are some minor differences in the sounds each instrument produces.

The included CD-ROM contains data reproducing the original sounds of the SR-JV80-02, SR-JV80-13, and SR-JV80-16. (Compatible models: Fantom (FA-76), XV-5080, XV-5050, XV-3080, XV-88, XV-2020)

This expansion board utilizes a new format. Check the system program version for your instrument, and if a relevant upgrade is available, upgrade your instrument using the appropriate system update program on the included CD-ROM. (See p. 15.)
This program applies to the SRX-01~09.

このたびは、ウェーブ・エクスパンション・ボード SRX-06 「SR-JV80 Collection Vol.1 Complete Orchestra」をお買い上げいただき、まことにありがとうございます。

このエクスパンション・ボードは SR-JV80-02 Orchestral、13 Vocal、16 Orchestral II に搭載されていたウェーブフォームを完全収録、07 SuperSoundSet に搭載されていたウェーブフォームの内、オーケストラ系音色を厳選して収録しています。

これらのウェーブフォームを組み合わせた SRX 仕様の Effect、Matrix Control を生かした新規 パッチ、リズム・セットを搭載しています。

オーケストラで使用される弦楽器 / 管楽器 / 打楽器 / ピアノといった代表的な音色をはじめ、各種クワイヤやボーカルフレーズも収録されており、オーケストラ編成曲、映画音楽などに幅広くお使いいただけます。

- パッチ 449 種類
- リズム・セット 5 種類
- ウェーブフォーム 512 種類

※ 各パッチ/リズム・セットは Fantom シリーズ、XV シリーズ、JUNO-G、MX-200、SRX 対応の RD シリーズ、MC-909、VR-760 の各機種ごとに最適なパラメーター設定を行っておりますので、それぞれ出音が異なることがあります。

付属の CD-ROM に SR-JV80-02、13、16 のオリジナル音色を再現するデータが収録されています。
(対応機種: Fantom (FA-76)、XV-5080、XV-5050、XV-3080、XV-88、XV-2020)

このエクスパンション・ボードは新フォーマットを採用しています。お使いの機種のシステム・プログラム・バージョンをご確認の上、バージョン・アップ対象の場合は、付属 CD-ROM に収録されているシステム・アップデート・プログラムでバージョン・アップしてからご使用ください。(P.15 をご覧ください。)
このアップデート・プログラムは SRX-01 ~ 09 で使用出来ます。

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⚡ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual.

- Do not open or perform any internal modifications on the unit.

- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page.

- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
 - Damp (e.g., baths, washrooms, on wet floors); or are
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.

- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit.

⚠ WARNING

- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit.

- Protect the unit from strong impact. (Do not drop it!)

- Before installing the SRX-06, you must first always turn off the Fantom series/XV series/JUNO-G/MX-200/RD series with SRX slots/MC-909/VR-760/G-70 and unplug its power cord.

- DO NOT play a CD-ROM disc on a conventional audio CD player. The resulting sound may be of a level that could cause permanent hearing loss. Damage to speakers or other system components may result.

⚠ CAUTION

- Never climb on top of, nor place heavy objects on the unit.

- Install the circuit board only into the specified unit (Fantom series/XV series/JUNO-G/MX-200/RD series with SRX slots/MC-909/VR-760/G-70). Remove only the specified screws during the installation.



- Should you remove screws, make sure to put them in a safe place out of children's reach, so there is no chance of them being swallowed accidentally.

* In the interest of product improvement, the specifications and/or contents of this package are subject to change without prior notice.




安全上のご注意

火災・感電・傷害を防止するには

⚠ 警告と ⚠ 注意の意味について


 警告	取扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表わしています。
 注意	取扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表わしています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表わしています。


図記号の例


	△は、注意（危険、警告を含む）を表わしています。 具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表わしています。
	⊘は、禁止（してはいけないこと）を表わしています。 具体的な禁止内容は、⊘の中に描かれています。左図の場合は、「分解禁止」を表わしています。
	●は、強制（必ずすること）を表わしています。 具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表わしています。



----- 以下の指示を必ず守ってください -----


警告



- この機器を使用する前に、以下の指示と取扱説明書をよく読んでください。 

- この機器を分解したり、改造したりしないでください。 


- 修理／部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランド・サービスに相談してください。 


- 次のような場所での使用や保存はしないでください。
 - 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など） 
 - 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所 
 - 雨に濡れる場所
 - ホコリの多い場所
 - 振動の多い場所


- この機器に、異物（燃えやすいもの、硬貨、針金など）や液体（水、ジュースなど）を絶対に入れないでください。 


-  

警告


- お子様のいるご家庭で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視／指導してあげてください。 


- この機器を落としたり、この機器に強い衝撃を与えないでください。 


- SRX-06 を取り付ける前に、Fantom シリーズ、XV シリーズ、JUNO-G、MX-200、SRX 対応の RD シリーズ、MC-909、VR-760 の電源を切って電源プラグをコンセントから外してください。 

- CD-ROM を、一般のオーディオ CD プレーヤーで再生しないで下さい。大音量によって耳を痛めたり、スピーカーを破損する恐れがあります。 

注意

- この機器の上に乗ったり、機器の上に重いものを置かないでください。 

- 指定の機器（Fantom シリーズ、XV シリーズ、JUNO-G、MX-200、SRX 対応の RD シリーズ、MC-909、VR-760）だけに取り付け、取り付け時には指定されたネジだけを外してください。 

- ネジを外した場合は、小さなお子様が誤って飲み込んだりすることのないようお子様の手の届かないところへ保管してください。 

※ 製品の仕様および内容は、改良のため予告なく変更することがあります。

IMPORTANT NOTES

When you purchase the SRX-06 expansion board from an authorized Roland dealer, the included sounds and samples are licensed, not sold, to you by Roland Corporation, for commercial use in music production, public performance, broadcast, etc.

You may use any of the included phrases and/or samples in a commercial or non-commercial recording without paying any additional license fees. However, you must strictly adhere to the following crediting guidelines on any music recording that utilize material from SRX-06.

Reproduction or duplication of this collection or any of the sound recording contained in the SRX-06, either as they exist on this expansion board or by any means of reformatting, mixing, filtering, re-synthesizing, processing or otherwise editing for use in another product or for re-sale, is strictly prohibited without the express written consent of Roland. All unauthorized giving, trading, lending, renting, re-issue, re-distribution or re-sale of the sounds included in the SRX-06 are expressly prohibited.

In Plain English: Be creative in your application of the SRX-06 sounds, and keep this library for your use only. DO NOT COPY IT. Roland constantly monitors other Soundware releases to check for copyright infringements, and will prosecute all piracy and copyright violations to the fullest extent of the law. THIS LIBRARY IS GUARANTEED TO BE 100% COPYRIGHT CLEAN.

In addition to the items listed under "USING THE UNIT SAFELY" on page 2, please read and observe the following:

Handling CD-ROMs

- * Avoid touching or scratching the shiny underside (encoded surface) of the disc. Damaged or dirty CD-ROM discs may not be read properly. Keep your discs clean using a commercially available CD cleaner.

Handling the Board

To avoid the risk of damage to internal components that can be caused by static electricity, please carefully observe the following whenever you handle the board.

- * Before you touch the board, always first grasp a metal object (such as a water pipe), so you are sure that any static electricity you might have been carrying has been discharged.
- * When handling the board, grasp it only by its edges. Avoid touching any of the electronic components or connectors.
- * Save the bag in which the board was originally shipped, and put the board back into it whenever you need to store or transport it.

French language for Canadian Safety Standard

Veillez suivre attentivement les instructions suivantes quand vous manipulez la carte afin d'éviter tout risque d'endommagement des pièces internes par l'électricité statique.

- * Toujours toucher un objet métallique relié à la terre (comme un tuyau par exemple) avant de manipuler la carte pour vous décharger de l'électricité statique que vous auriez pu accumuler.
- * Lorsque vous manipulez la carte, la tenir par les côtés. Évitez de toucher aux composants ou aux connecteurs.
- * Conservez le sachet d'origine dans lequel était la carte lors de l'envoi et remettez la carte dedans si vous devez la ranger ou la transporter.

使用上のご注意

お客様がSRX-06 エクスパンション・ボード（以下、「本製品」といいます）をローランドの正規販売店からお買い上げになった時点で、本製品に含まれる音やサンプルは、ローランド株式会社から、お客様に対して、音楽制作、公共の場での演奏、放送などの商用目的のための使用を許諾したものであって、著作権を譲渡したものではありません。

お客様は、いかなる追加料金を支払うこともなく、本製品に含まれるあらゆるフレーズやサンプルを、商用あるいは非商用目的の録音に使用できます。ただし、お客様が本製品を使用して音楽の録音を行う際は、以下のことにご注意ください。

本製品に含まれるいかなる録音物も、そのままの状態であれ、いかなる手段によって再構成、ミキシング、フィルター加工、再合成、加工処理、その他の編集作業をした状態であれ、ローランドの書面による許可なく、他の製品に含めたり再販売するために複製・複写することを禁止します。また、本製品に含まれるいかなる音も、許可なく贈与、取引、貸与、賃貸、再発行、再配布、再販売することを禁止します。

従って、本製品の音色は音楽制作の範囲でお使いいただくようお願いいたします。そして、本製品のライブラリーはお客様ご自身の個人的使用の目的の範囲でお使いください。本製品の音色データの複製・複写は禁止します。

ローランドは、著作権侵害がないかどうか、常時他のサウンド・ライブラリーの発売を把握しており、著作権侵害に対しては法的手段を行使する場合があります。

なお、本製品のライブラリーは第三者の著作権を一切侵害していないことを保証します。

3 ページに記載されている「安全上のご注意」以外に、次のことに注意してください。

修理について

- * お客様がこの機器を分解、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合があります。
- * 当社では、この製品の補修用性能部品（製品の機能を維持するために必要な部品）を、製造切後 6 年間保有しています。この部品保有期間を修理可能の期間とさせていただきます。なお、保有期間が経過した後も、故障箇所によっては修理可能の場合がありますので、お買い上げ店、または最寄りのローランド・サービスにご相談ください。

CD-ROM の取り扱い

- * ディスクの裏面（信号面）に触れたり、傷をつけたりしないでください。データの読み出しがうまくいかないことがあります。ディスクの汚れは、市販の CD 専用クリーナーでクリーニングしてください。

基板の取り扱い

この基板は、静電気により部品が破壊される恐れがあります。基板を取り扱うときは、次の点に注意してください。

- * 基板を持つときは、あらかじめ何らかの金属に触れて、体や衣類にたまっている静電気を放電してください。
- * 基板を持つときは、基板の縁を持ち、部品やコネクタの部分に直接手を触れないでください。
- * 基板を保管するとき、または輸送するときなどは、購入時に基板が入っていた袋（導電袋）に入れてください。

INSTALLING THE WAVE EXPANSION BOARD

* Turn off your instrument.

1. Remove the cover located on the top (or rear) of your instrument.
 - * When turning the unit upside-down, get a bunch of newspapers or magazines, and place them under the four corners or at both ends to prevent damage to the buttons and controls. Also, you should try to orient the unit so no buttons or controls get damaged.
 - * When turning the unit upside-down, handle with care to avoid dropping it, or allowing it to fall or tip over.
2. Insert the Wave Expansion Board connector into a connector for an SRX Series slot, while simultaneously inserting the board holders into the holes in the Wave Expansion Board.
 - * Do not touch any of the printed circuit pathways or connection terminals.
 - * Never use excessive force when installing a circuit board. If it doesn't fit properly on the first attempt, remove the board and try again.
3. Use the supplied Installation Tool to turn the holders in the LOCK direction, so the board will be fastened in place. (To remove the Wave Expansion Board, turn the board holders in the UNLOCK direction, and lift up the board.)
 - * When circuit board installation is complete, double-check your work.
4. Using the screws removed in Step 1, refasten the cover in its original position.
5. Check if the Wave Expansion Board is correctly installed.
 - * If the "EXP" display cannot be selected (doesn't appear) in the Waveform Selection Screen (refer to the owner's manual of the instrument you use), remove the Wave Expansion Board and install it properly.




French language for Canadian Safety Standard

* Éteindre l'instrument.

1. Retirer le couvercle situé sur le dessus (ou à l'arrière) de l'instrument.
2. Insérer le connecteur de la carte dans un des creneaux pour la serie SRX tout en enfonçant les supports à carte dans les trous de celle-ci.
 - * Ne pas toucher aux circuits imprimés ou aux connecteurs.
 - * Ne jamais forcer lors de l'installation de la carte de circuits imprimés. Si la carte s'ajuste mal au premier essai, enlevez la carte et recommencez l'installation.
3. Utiliser l'outil d'installation fourni pour tourner les clips de retenue vers la position de blocage (LOCK) de façon à ce que la carte soit retenue en place.

(Pour retirer la carte d'expansion Wave, tourner les clips de retenue de la carte vers la position déblocage (UNLOCK) et retirer la carte en la soulevant.)

 - * Quand l'installation de la carte de circuits imprimés est terminée, revérifiez si tout est bien installé.
4. Remettre la plaque à sa place et la fixer à l'aide des vis enlevées à l'étape 1.
5. S'assurer que la carte d'expansion Wave est installée correctement.
 - * S'il est impossible de sélectionner l'affichage "EXP" (il n'apparaît pas) à l'écran de sélection Waveform (se reporter au guide du propriétaire de l'instrument utilisé), retirer la carte d'expansion Wave et la réinstaller correctement.

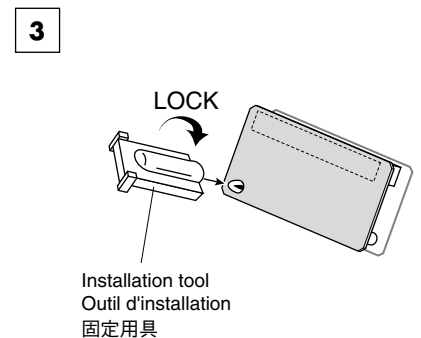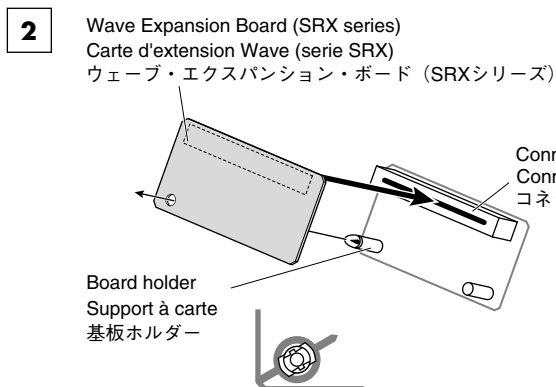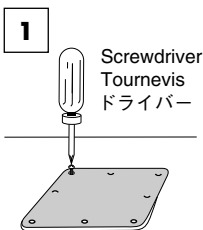

Position them as shown before you install the board.
Avant l'installation, orienter les supports à carte tel qu'indiqué sur le schéma.
取り付ける前に図のような向きに合わせます

ウェーブ・エクスパンション・ボードの取り付けかた

※ 使用機器の電源スイッチをオフにしてください。

1. 使用機器の上部、または背面にあるカバーをはずします。
 - ※ 本体を裏返す際は、ボタン、つまみなどを破損しないように、新聞や雑誌などを重ねて本体の四隅や両端に敷いてください。また、その際、ボタン、つまみなどが破損しないような位置に配置してください。
 - ※ 本体を裏返す際は、落下や転倒を引き起こさないよう取扱いにご注意ください。
2. SRX シリーズ用のスロットのコネクターにウェーブ・エクスパンション・ボードのコネクターを差し込み、同時に基板ホルダーをウェーブ・エクスパンション・ボードの穴にはめ込みます。
 - ※ 回路部やコネクター部には手を触れないでください。
 - ※ 基板を無理に押し込まないでください。装着しにくい場合、いったん基板を外してやり直してください。
3. 付属の固定用具で基板ホルダーを LOCK 方向に回し、ウェーブ・エクスパンション・ボードを固定します。(ウェーブ・エクスパンション・ボードを取り外すには、基板ホルダーを UNLOCK 方向に回してから取り外します。)
 - ※ 取り付けを終えたら、正しく取り付けられていることを再度確認してください。
4. 手順 1 で外したネジで、カバーを元通りに取り付けます。
5. ウェーブ・エクスパンション・ボードの取り付けが正しく行われたかを確認します。
 - ※ ウェーブフォームの選択画面（使用機器の取扱説明書参照）で“EXP”が選べない（表示されない）ときは、もう一度ウェーブ・エクスパンション・ボードをつけ直してください。

Patch List (1)

For Fantom series/XV series/JUNO-G/MX-200

(BANK SELECT MSB : 93; LSB : 7 [No.001-128], LSB : 8 [No.129-256], LSB ; 9 [No.257-384], LSB;10 [No.385-449])

No.	Name	Voices	Category
1	WarmVlns SRX	3	STRINGS
2	Legato Vlns	8	STRINGS
3	NaturalVlnsS	2	STRINGS
4	Agitato Vlns	4	STRINGS
5	Vlns-Spc /	4	STRINGS
6	Vl&Va Spicct	4	STRINGS
7	Arco Vas SRX	2	STRINGS
8	Agitato Vas	4	STRINGS
9	Vlas-Spc /	4	STRINGS
10	Marc Vas SRX	2	STRINGS
11	Vc Sec mf	4	STRINGS
12	Fast Cellos	4	STRINGS
13	Vcs Legato	1	STRINGS
14	3 Cellos	3	STRINGS
15	Cellos	3	STRINGS
16	CelloSectMrc	4	STRINGS
17	Marcato Vcs	3	STRINGS
18	Agitato Vcs	4	STRINGS
19	Vcs+Cbs SRX	2	STRINGS
20	Arco Vcs+Cbs	8	STRINGS
21	Thick Bases	2	STRINGS
22	Cb Sect SRX	4	STRINGS
23	WideBasses S	1	STRINGS
24	Agitato Cbs	4	STRINGS
25	BIG StrgEns	4	STRINGS
26	Big Strings2	4	STRINGS
27	Orch p	2	STRINGS
28	Orch p>f/Mod	4	STRINGS
29	StrsArco SRX	4	STRINGS
30	StrSwel/ModS	4	STRINGS
31	StStrOrcp/fS	2	STRINGS
32	SlowResinStr	4	STRINGS
33	Adagio Strs	4	STRINGS
34	LegatoStrngs	8	STRINGS
35	Intim StrSec	4	STRINGS
36	DramaStrsSRX	4	STRINGS
37	St Str p/f	4	STRINGS
38	SlowEpic Str	8	STRINGS
39	Real Strings	2	STRINGS
40	4Seasons SRX	4	STRINGS
41	VIVaVcB SRX	4	STRINGS
42	StudioString	4	STRINGS
43	Quartet SRX	4	STRINGS
44	VibSwStrings	4	STRINGS
45	Str Swell	4	STRINGS
46	OuvertureSRX	4	STRINGS
47	Cluster Sect	8	STRINGS
48	Velo Str SRX	4	STRINGS
49	Agitato to 0	5	STRINGS
50	DynaMarc SRX	4	STRINGS
51	VivaceStrSRX	4	STRINGS
52	Agitato STR	4	STRINGS
53	STR SpiccSRX	3	STRINGS
54	StacctoSectn	6	STRINGS
55	Spicc/releas	4	STRINGS
56	STR Marcato	2	STRINGS
57	Big Marcato!	4	STRINGS
58	Spicc Sect	6	STRINGS
59	Spc+Pz/rleas	4	STRINGS
60	Piz-Spc /	6	STRINGS
61	RoomPizz SRX	4	STRINGS
62	Stage Pizz	4	STRINGS
63	Nite Pizzico	5	STRINGS
64	VIOLIN solo	2	STRINGS
65	Solo Vln /	2	STRINGS
66	Solo Violin	1	STRINGS
67	Sad S.VlnSRX	2	STRINGS
68	Solo Viola	1	STRINGS
69	AgitatoVaSRX	2	STRINGS
70	Solo Cello 1	1	STRINGS
71	Solo Cello 2	1	STRINGS
72	The V Cello	2	STRINGS
73	Solo Vc /	2	STRINGS
74	Marcato Vc	1	STRINGS
75	Vln&Vcl	2	STRINGS
76	Solo Cb /	2	STRINGS
77	Tape Orc SRX	3	STRINGS
78	Tape Str SRX	6	STRINGS
79	Old Tale	2	STRINGS
80	Mellow Tape	2	STRINGS
81	Cystaline Pd	8	STRINGS
82	SynStrings	3	STRINGS
83	Full Orc SRX	4	ORCHESTRA
84	St.OrcUniSRX	2	ORCHESTRA
85	OrchUnif SRX	4	ORCHESTRA
86	GRAND OrcSRX	3	ORCHESTRA
87	WavinGoodbye	4	ORCHESTRA
88	DynOrchestr1	5	ORCHESTRA
89	Pathetique	5	ORCHESTRA
90	Oboes & Sect	6	ORCHESTRA

No.	Name	Voices	Category
91	SlowEpicOrch	8	ORCHESTRA
92	Grand Tutti	5	ORCHESTRA
93	Ultimate Orc	5	ORCHESTRA
94	SuspenceOrch	3	ORCHESTRA
95	Tremolo /	1	ORCHESTRA
96	TremOrc /Mod	2	ORCHESTRA
97	ORC full+BD	5	ORCHESTRA
98	Finally Orch	4	ORCHESTRA
99	Orch & Choir	7	ORCHESTRA
100	NowWeAreFree	4	ORCHESTRA
101	Too Tense	6	ORCHESTRA
102	OrchestrSRX	6	ORCHESTRA
103	DynOrchestr2	5	ORCHESTRA
104	GiantOrchest	6	ORCHESTRA
105	Strngs&Horns	4	ORCHESTRA
106	Full Orch. 1	2	ORCHESTRA
107	Full Orch. 2	4	ORCHESTRA
108	Full Orch. 3	4	ORCHESTRA
109	End Titles	4	ORCHESTRA
110	HornStrs SRX	4	ORCHESTRA
111	SRX Full Orc	5	ORCHESTRA
112	Harp & Flute	2	ORCHESTRA
113	Celesta&Flt	3	ORCHESTRA
114	ProkofievSRX	3	ORCHESTRA
115	MassInCeeSRX	4	ORCHESTRA
116	PentatnicSRX	1	ORCHESTRA
117	DawnSymphony	4	ORCHESTRA
118	Bad Ending	7	ORCHESTRA
119	Epic Ending	8	ORCHESTRA
120	Catwalk	5	HIT&STAB
121	OrchStaccato	4	HIT&STAB
122	Staccato SRX	2	HIT&STAB
123	OrchHitStack	4	HIT&STAB
124	Dynam Hit	5	HIT&STAB
125	MondoHit SRX	3	HIT&STAB
126	OrchHit SRX	4	HIT&STAB
127	OrchHitMajSRX	2	HIT&STAB
128	OrchHitMinSRX	2	HIT&STAB
129	OrchHitDimSRX	2	HIT&STAB
130	Big Hit Maj1	3	HIT&STAB
131	Big Hit Maj2	4	HIT&STAB
132	Big Hit Min	4	HIT&STAB
133	Big Hit Dim	4	HIT&STAB
134	Sfz! Hit-Maj	5	HIT&STAB
135	Sfz! Hit-Min	5	HIT&STAB
136	Suspense	2	HIT&STAB
137	Hit/Off-Maj	7	HIT&STAB
138	Trem Hit-Maj	5	HIT&STAB
139	Trem Hit-Min	5	HIT&STAB
140	Trem Hit-Dim	5	HIT&STAB
141	Orc/Prs 5-1^	4	HIT&STAB
142	Drama Stab	7	HIT&STAB
143	Maj Concern	8	HIT&STAB
144	OrcGlsMajSRX	1	HIT&STAB
145	OrcGlsMinSRX	1	HIT&STAB
146	Harp Up Hit	4	HIT&STAB
147	Harp Dn Hit	4	HIT&STAB
148	BrassStabSRX	4	HIT&STAB
149	Finale	5	HIT&STAB
150	Tuned HIT	3	HIT&STAB
151	YourMissionS	4	HIT&STAB
152	Big Hit SRX	4	HIT&STAB
153	HorrorHitSRX	4	HIT&STAB
154	Perc Hit	4	HIT&STAB
155	BrassFallSRX	2	HIT&STAB
156	Tp Fall	1	HIT&STAB
157	BrsStacc SRX	1	HIT&STAB
158	Finale SRX /	3	HIT&STAB
159	Orch Piccolo	2	FLUTE
160	Picc Vel Tr	1	FLUTE
161	Piccolo Trio	3	FLUTE
162	Orch Flute	1	FLUTE
163	Vibra Flute	1	FLUTE
164	FluteAtm/Aft	2	FLUTE
165	Picc/Fl 8va	3	FLUTE
166	Double Flute	1	FLUTE
167	Fl/EH Usn	4	FLUTE
168	Calliope SRX	4	FLUTE
169	DynoCelt SRX	2	FLUTE
170	Ethnic Flute	1	FLUTE
171	AmbiFluteSRX	2	FLUTE
172	T.WhistleDly	1	FLUTE
173	TinWhistle	1	FLUTE
174	Sop Recorder	1	FLUTE
175	Tnr Recorder	1	FLUTE
176	Whistle SRX	2	FLUTE
177	Solo Clari	1	WIND
178	Unison Clari	2	WIND
179	Orch Clar	2	WIND
180	Bs Clairenet	1	WIND

No.	Name	Voices	Category
181	Orch Bs Clar	2	WIND
182	Cl/Bs Cl 8va	4	WIND
183	Fl/Cl Usn	3	WIND
184	Fl/Cl 8va	3	WIND
185	Orch Oboe	2	WIND
186	Sweet Oboe	1	WIND
187	Cor Oboe	1	WIND
188	OBOE Solo	1	WIND
189	2 Close Oboe	3	WIND
190	Orch Eng Hrn	2	WIND
191	Horn'o U.K.	1	WIND
192	Orch Bassoon	2	WIND
193	Bassoon III	1	WIND
194	BassFoons	3	WIND
195	Cl/Bsn Usn	4	WIND
196	Cl/Bsn 8va	4	WIND
197	Fl/Ob Usn	3	WIND
198	Fl/EH 8va	4	WIND
199	Fl/Bsn 8va	3	WIND
200	BsCl/Bsn 8vb	4	WIND
201	BsCl/Bsn Usn	4	WIND
202	Cl/Hrn/Bsn 1	6	WIND
203	Cl/Hrn/Bsn 2	5 (6)	WIND
204	Ob/Hrns/Bsns	5 (6)	WIND
205	Ob/Bsn 8va	3	WIND
206	Ob/EH Usn	4	WIND
207	Ob/EH 8va	4	WIND
208	EH/Bsn Usn	4	WIND
209	EH/Bsn 8va	4	WIND
210	EH/Cl Usn	4	WIND
211	EH/Bs Cl 8va	3	WIND
212	Ob/Cl Usn	3	WIND
213	Ob/BsCl 15va	3	WIND
214	Hrns/Bsns	6	WIND
215	Really Reeds	4	WIND
216	Reed Duet	2	WIND
217	Multi Reeds	3	WIND
218	Medieval Rds	3	WIND
219	ScottishPIPE	1	WIND
220	Hill&Sheeps	2	ETHNIC
221	HilndChr SRX	1	ETHNIC
222	Solo Fr.Horn	1	AC.BRASS
223	SoloF.HrnSRX	1	AC.BRASS
224	HrnAccompSRX	2	AC.BRASS
225	Orch Hrns Sw	4 (5)	AC.BRASS
226	Hornz Stereo	2	AC.BRASS
227	Orch Hrns ff	3	AC.BRASS
228	FizzHorns ff	3	AC.BRASS
229	Fr.Horns SRX	3	AC.BRASS
230	Dynamic Hrns	2	AC.BRASS
231	Horn Sect /	2	AC.BRASS
232	Fr.HrnSfzSRX	2	AC.BRASS
233	MuteFr.Horns	2	AC.BRASS
234	F.Horn Rip	2	AC.BRASS
235	Trumpet Plus	1	AC.BRASS
236	Natural Tmpt	1	AC.BRASS
237	Real Tp SRX	1	AC.BRASS
238	El Bono SRX	2	AC.BRASS
239	Coronet	1	AC.BRASS
240	Flugelhorn	1	AC.BRASS
241	Mute Tp SRX	1	AC.BRASS
242	HrnmMute SRX	1	AC.BRASS
243	WahMute /Mod	2	AC.BRASS
244	Trumpeters	4	AC.BRASS
245	Tp Ens SRX	3	AC.BRASS
246	Trumps fff!	4	AC.BRASS
247	Softy Bones	4	AC.BRASS
248	Bone Fluegal	2	AC.BRASS
249	Natural Tbn	1	AC.BRASS
250	Trombone SRX	1	AC.BRASS
251	SoloTb SRX 1	1	AC.BRASS
252	SoloTb SRX 2	1	AC.BRASS
253	Bs Tb	1	AC.BRASS
254	Tbn One	1	AC.BRASS
255	Bone Boys	4	AC.BRASS
256	Bones sectn	4	AC.BRASS
257	BigBones SRX	4	AC.BRASS
258	BsBoneSctSRX	3	AC.BRASS
259	Noblesse	3	AC.BRASS
260	Brass Choral	3	AC.BRASS
261	BrassEns/Mod	4	AC.BRASS
262	Small Brass	4	AC.BRASS
263	Brass Orche	4	AC.BRASS
264	Switch Fall	2	AC.BRASS
265	4-Pc Brs Scn	4	AC.BRASS
266	BiggieBrsSRX	4	AC.BRASS
267	SoloTuba SRX	2	AC.BRASS
268	Tuba sfz/Mod	3	AC.BRASS
269	Tuba SRX	2	AC.BRASS
270	Medieval Brs	4	AC.BRASS

Patch List (2)

For Fantom series/XV series/JUNO-G/MX-200

(BANK SELECT MSB : 93; LSB : 7 [No.001-128], LSB : 8 [No.129-256], LSB ; 9 [No.257-384], LSB;10 [No.385-449])

No.	Name	Voices	Category	No.	Name	Voices	Category	No.	Name	Voices	Category
271	Full Brass	4	AC.BRASS	331	Musaccordion	5	ACCORDION	391	17th Movemnt	6	VOX
272	Brass ff	2	AC.BRASS	332	Mystery Pad	4	PULSATING	392	Matins	2	VOX
273	Brass Sect /	4	AC.BRASS	333	Psychedelic1	4	SYNTH FX	393	Quartet II 5	4	VOX
274	Multi Sax	2	SAX	334	Psychedelic2	4	SYNTH FX	394	Scat /	2	VOX
275	St.EuroPiano	4	AC.PIANO	335	Eylsium m7^	6	SYNTH FX	395	Scatmen! SRX	1	VOX
276	JoyoClassics	2	AC.PIANO	336	Eylsium 9th^	6	SYNTH FX	396	The Voices	2	VOX
277	Empathy	3	AC.PIANO	337	Eylsium +7^	6	SYNTH FX	397	VocalCollect	2	VOX
278	Piano & Strs	6	AC.PIANO	338	Eylsium b9^	6	SYNTH FX	398	GregorianCho	4	VOX
279	Pno Concerto	6	AC.PIANO	339	Vln RunUp Mj	8	SYNTH FX	399	Soprano&co.	2	VOX
280	Song Wish	6	AC.PIANO	340	Vln RunUp Mn	8	SYNTH FX	400	Tenor solo	1	VOX
281	HpsFrrtSRX 1	3	KEYBOARDS	341	Vln RunDn Mj	8	SYNTH FX	401	ClarsahHarpS	1	PLUCKED
282	HpsFrrtSRX 2	2	KEYBOARDS	342	Vln RunDn Mn	8	SYNTH FX	402	HeavensHarp	5	PLUCKED
283	HpsFrrtSRX 3	1	KEYBOARDS	343	Maj/MinHarps	2	SYNTH FX	403	C.Hrp/padSRX	4	PLUCKED
284	HpsBackSRX 1	4	KEYBOARDS	344	9th/b9 Harps	2	SYNTH FX	404	PhaseClarsah	4	PLUCKED
285	HpsBackSRX 2	2	KEYBOARDS	345	Harp m7 SRX	1	SYNTH FX	405	ClearHarpSRX	2	PLUCKED
286	HpsBackSRX 3	2	KEYBOARDS	346	Harp 9th SRX	1	SYNTH FX	406	Nails Harp	2	PLUCKED
287	Hps F/B SRX	3	KEYBOARDS	347	Harp +7 SRX	1	SYNTH FX	407	Harp SRX	1	PLUCKED
288	Hps F4/B SRX	3	KEYBOARDS	348	Harp b9 SRX	1	SYNTH FX	408	Natural Harp	1	PLUCKED
289	Hps F/B/B4 S	4	KEYBOARDS	349	Harpm7ScISRX	4	SYNTH FX	409	Warm Harp	1	PLUCKED
290	HpsLuteSRX 1	4	KEYBOARDS	350	Harp9thScISRX	4	SYNTH FX	410	Bousouk&Harp	4	PLUCKED
291	HpsLute 2	2	KEYBOARDS	351	Harp+7ScISRX	4	SYNTH FX	411	Ethelal Lute	4	PLUCKED
292	HpsLute 3	2	KEYBOARDS	352	Harpb9ScISRX	4	SYNTH FX	412	DelicateCOMB	3	PLUCKED
293	FullHarpsi 1	3	KEYBOARDS	353	Cluster Gong	4	SYNTH FX	413	St.CymblnSRX	2	PLUCKED
294	FullHarpsi 2	3	KEYBOARDS	354	Sus.Perc Hit	4	SYNTH FX	414	CymblnDuoSRX	2	PLUCKED
295	Continuo Pdl	2	KEYBOARDS	355	Prc Ens6-Maj	5	SYNTH FX	415	Bohemian SRX	3	PLUCKED
296	Celesta SRX	2	KEYBOARDS	356	Prc Ens7-Min	5	SYNTH FX	416	Bousouki Pic	2	PLUCKED
297	MusicBellSRX	2	BELL	357	Prc Ens8-Dim	5	SYNTH FX	417	Bousouki	1	PLUCKED
298	Water Mallet	3	BELL	358	Cluster SRX	1	SYNTH FX	418	PulcinelaSRX	4	PLUCKED
299	Newborn	4	BELL	359	HorrorClustr	2	SYNTH FX	419	SN Roll SRX/	3	PERCUSSION
300	Victoriana 1	3	BELL	360	Hell Section	4	SYNTH FX	420	Perc Ens 1^	3	PERCUSSION
301	St.M.Box SRX	2	BELL	361	Legettimare	7	SYNTH FX	421	Perc Ens 2^	4	PERCUSSION
302	Victoriana 2	3	BELL	362	Limbus SRX	2	SYNTH FX	422	Perc Ens 3^	6	PERCUSSION
303	ChurchBellS1	2	BELL	363	Backword	8	SYNTH FX	423	Perc Ens 4^	6	PERCUSSION
304	BlfryChm SRX	4	BELL	364	Dreamseq SRX	4	SYNTH FX	424	Perc Ens 5^	5	PERCUSSION
305	ChurchBellS2	3	BELL	365	Midnight SRX	4	SYNTH FX	425	Orch Percs	4	PERCUSSION
306	Tub.Bells S1	2	BELL	366	Colombus SRX	4	SYNTH FX	426	BodhranSplit	1	PERCUSSION
307	Tub.Bells S2	1	BELL	367	Once Upon A	5	OTHER SYNTH	427	BodhranVel S	3	PERCUSSION
308	BsMarimbSRX1	2	MALLET	368	Desert Dream	4	OTHER SYNTH	428	CrazyBodhrmS	1	PERCUSSION
309	BsMarimbSRX2	1	MALLET	369	AncientTimes	5	OTHER SYNTH	429	BodhranMenuS	1	PERCUSSION
310	MultiMallets	3	MALLET	370	Tension SRX	5	OTHER SYNTH	430	Perc Mix SRX	2	PERCUSSION
311	Glocken	1	MALLET	371	Wreck	6	BRIGHT PAD	431	MassiveTimpa	4	PERCUSSION
312	Glockeneste	3	MALLET	372	Eclipse SRX	4	BRIGHT PAD	432	4-way Timps	3	PERCUSSION
313	GlocklnstSRX	2	MALLET	373	PulsingVox S	3	BRIGHT PAD	433	DynaTimpsSRX	2	PERCUSSION
314	Clear Glock	1	MALLET	374	SynthStr.Pad	2	SOFT PAD	434	TimpaniRoll1	4	PERCUSSION
315	Xylorimba	2	MALLET	375	Meditate PAD	4	SOFT PAD	435	TimpaniRoll2	4	PERCUSSION
316	Xylophone S1	2	MALLET	376	Choir	3	VOX	436	MultiTimpani	1	PERCUSSION
317	Xylophone S2	1	MALLET	377	Angelic Pad	4	VOX	437	Roll > Klang	5	PERCUSSION
318	Mallet Stack	4	MALLET	378	BoysChoirSRX	1	VOX	438	Timpani /	2	PERCUSSION
319	OrgFlutes S1	3	ORGAN	379	Sing! /Mod	6	VOX	439	Big Orc.Perc	3	PERCUSSION
320	OrgFlutes S2	4	ORGAN	380	SmockyVoices	2	VOX	440	WindChimeSRX	1	PERCUSSION
321	OrgFlutes S3	2	ORGAN	381	Smooth Choir	5	VOX	441	FingerCymSRX	1	PERCUSSION
322	OrgFlute 8'S	1	ORGAN	382	X..Vox SRX	3	VOX	442	ConcertBDSRX	3	PERCUSSION
323	Psyche Pipes	2	ORGAN	383	RealChoirSRX	4	VOX	443	BD Roll SRX/	2	PERCUSSION
324	ChrChPipes S	4	ORGAN	384	StChrMm/Ah S	4	VOX	444	Tam Tam SRX	2	PERCUSSION
325	Organ&Recdr	4	ORGAN	385	Mmms & Aaahs	2	VOX	445	Platti! SRX	2	PERCUSSION
326	Early Harmn	5	ORGAN	386	Choir /Mod	4	VOX	446	SleighBellsS	1	PERCUSSION
327	CathedralSRX	4	ORGAN	387	Close Mouths	1	VOX	447	SlapstickS /	2	PERCUSSION
328	Harmonium	2	ORGAN	388	Voice Stax	7	VOX	448	TambourineS/	1	PERCUSSION
329	ChurchOrgSRX	4	ORGAN	389	MorphicChoir	6	VOX	449	CastanetsS /	1	PERCUSSION
330	OrganChrdSRX	3	ORGAN	390	Morph4Choir	8	VOX				

^: Accent
/: Alternate sound obtained with Key Velocity
/Mod: Alternate sound obtained with Modulation (CC:01)
/Aft: Alternate sound obtained with Aftertouch (CC:97)

When playing patches on the expansion board, we recommend that you set all the EFFECTS ON/OFF settings on the Fantom series/XV series to "ON." If such settings are set to "OFF," you may not obtain the intended sound.

- * When played by the XV-3080/88, Patches 203, 204, and 225 will have the number of voices indicated in parentheses.
- * Note that the Release Time has been set to a fairly long value for some of the patches. As a result, if your sound generator has been set so "Patch Remain" is "ON," the release portion of a previously sounding patch may continue to be heard even after switching to a new patch.
- * Some of the patches use waveforms of the SR-JV80 series. For this reason, the upper end of the keyboard may not sound because of key range restrictions.
- * Refer to the owner's manual for your instrument for specific instructions on how to play Patches on the expansion board.
- * On the Fantom series/XV series/JUNO-G/MX-200, you can not select only the patches which are designed to be used with the RD series (with SRX slots)/MC-909/VR-760/G-70.
- * Some of the patch names shown in this list may appear differently on the display of the device being used, but the tones themselves remain unaffected.

^: アクセント
/: Key Velocity による切替え音色
/Mod: Modulation (CC:01) による切替え音色
/Aft: Aftertouch (CC:97) による切替え音色

エキスパンション・ボードのパッチを発音させるときは、Fantomシリーズ/XVシリーズのEFFECTS ON/OFFの設定をすべてONにして使用することをお勧めいたします。OFFに設定した場合は、意図した音色にならないことがあります。

- * No.203、204と225はXV-3080/88で発音させると（）内のボイス数になります。
- * パッチの中にはリリース・タイムが長く設定してあるパッチもありますので、音源のパッチ・リメインがONになっていると音色を切り替えても前のパッチのリリースが残る場合があります。
- * パッチの中にはSR-JV80シリーズのウェーブフォームを使用しているため、上鍵域で発音の制限があり発音しない部分があります。
- * エキスパンション・ボードのパッチを発音させるときは、使用機器の取扱説明書にしたがって、実行してください。
- * Fantomシリーズ/XVシリーズ/JUNO-G/MX-200では、RDシリーズ(SRX対応)/MC-909/VR-760専用のパッチを選ぶことはできません。
- * 一部のパッチの名前が、本リストと使用機器の画面表示とで異なる場合がありますが、音色自体に影響はありません。

Patch List (3)

For RD series (with SRX slots)/MC-909/VR-760/G-70

(BANK SELECT MSB : 93; LSB : 7 [No.001-128], LSB : 8 [No.129-256], LSB ; 9 [No.257-384], LSB;10 [No.385-449])

No.	Name	Voices	Category	No.	Name	Voices	Category	No.	Name	Voices	Category
1	WarmVlns SRX	3	STRINGS	91	SlowEpicOrch	8	ORCHESTRA	181	Orch Bs Clar	2	WIND
2	Legato Vlns	8	STRINGS	92	Grand Tutti	5	ORCHESTRA	182	Cl/Bs Cl 8va	4	WIND
3	NaturalVlnsS	2	STRINGS	93	Ultimate Orc	5	ORCHESTRA	183	Fl/Cl Usn	3	WIND
4	Agitato Vlns	4	STRINGS	94	SuspenceOrch	3	ORCHESTRA	184	Fl/Cl 8va	3	WIND
5	Vlns-Spc /	4	STRINGS	95	Tremolo /	1	ORCHESTRA	185	Sweet Oboe	2	WIND
6	Vl&Va Spicct	4	STRINGS	96	TremOrc /Mod	2	ORCHESTRA	186	Sweet Oboe	1	WIND
7	Arco Vas SRX	2	STRINGS	97	ORC full+BD	5	ORCHESTRA	187	Cor Oboe	1	WIND
8	Agitato Vas	4	STRINGS	98	Finally Orch	4	ORCHESTRA	188	OBOE Solo	1	WIND
9	Vlas-Spc /	4	STRINGS	99	Orch & Choir	7	ORCHESTRA	189	2 Close Oboe	3	WIND
10	Marc Vas SRX	2	STRINGS	100	NowWeAreFree	4	ORCHESTRA	190	Orch Eng Hrn	2	WIND
11	Vc Sec mf	4	STRINGS	101	Too Tense	6	ORCHESTRA	191	Horn'o U.K.	1	WIND
12	Fast Cellos	4	STRINGS	102	OrchestrSRX	6	ORCHESTRA	192	Orch Bassoon	2	WIND
13	Vcs Legato	1	STRINGS	103	DynOrchestr2	5	ORCHESTRA	193	Bassoon III	1	WIND
14	3 Cellos	3	STRINGS	104	GiantOrchest	6	ORCHESTRA	194	BassFoons	3	WIND
15	Cellos	3	STRINGS	105	Strngs&Horns	4	ORCHESTRA	195	Cl/Bsn Usn	4	WIND
16	CelloSectMrc	4	STRINGS	106	Full Orch. 1	2	ORCHESTRA	196	Cl/Bsn 8va	4	WIND
17	Marcato Vcs	3	STRINGS	107	Full Orch. 2	4	ORCHESTRA	197	Fl/Ob Usn	3	WIND
18	Agitato Vcs	4	STRINGS	108	Full Orch. 3	4	ORCHESTRA	198	Fl/EH 8va	4	WIND
19	Vcs+Cbs SRX	2	STRINGS	109	End Titles	4	ORCHESTRA	199	Fl/Bsn 8va	3	WIND
20	Arco Vcs+Cbs	8	STRINGS	110	HornStrs SRX	4	ORCHESTRA	200	BsCl/Bsn 8vb	4	WIND
21	Thick Bases	2	STRINGS	111	SRX Full Orc	5	ORCHESTRA	201	BsCl/Bsn Usn	4	WIND
22	Cb Sect SRX	4	STRINGS	112	Harp & Flute	2	ORCHESTRA	202	Cl/Hrn/Bsn 1	6	WIND
23	WideBasses 5	1	STRINGS	113	Celesta&Flt	3	ORCHESTRA	203	Cl/Hrn/Bsn 2	6	WIND
24	Agitato Cbs	4	STRINGS	114	ProkofievSRX	3	ORCHESTRA	204	Ob/Hrns/Bsns	6	WIND
25	BIG StrgEns	4	STRINGS	115	MassInCeeSRX	6	ORCHESTRA	205	Ob/Bsn 8va	3	WIND
26	Big Strings2	4	STRINGS	116	PentatnicSRX	1	ORCHESTRA	206	Ob/EH Usn	4	WIND
27	Orch p	2	STRINGS	117	DawnSymphony	4	ORCHESTRA	207	Ob/EH 8va	4	WIND
28	Orch p>f/Mod	4	STRINGS	118	Bad Ending	7	ORCHESTRA	208	EH/Bsn Usn	4	WIND
29	StrsArco SRX	4	STRINGS	119	Epic Ending	8	ORCHESTRA	209	EH/Bsn 8va	4	WIND
30	StrSwel/ModS	4	STRINGS	120	Catwalk	5	HIT&STAB	210	EH/Cl Usn	4	WIND
31	StStrOrcp/fS	2	STRINGS	121	OrchStaccato	4	HIT&STAB	211	EH/Bs Cl 8va	3	WIND
32	SlowResinStr	4	STRINGS	122	Staccato SRX	2	HIT&STAB	212	Ob/Cl Usn	3	WIND
33	Adagio Strs	4	STRINGS	123	OrchHitStack	4	HIT&STAB	213	Ob/BsCl 15va	3	WIND
34	LegatoStrngs	8	STRINGS	124	Dynam Hit	5	HIT&STAB	214	Hrns/Bsns	6	WIND
35	Intim StrSec	4	STRINGS	125	MondoHit SRX	4	HIT&STAB	215	Really Reeds	4	WIND
36	DramaStrsSRX	4	STRINGS	126	OrchHit SRX	4	HIT&STAB	216	Reed Duet	2	WIND
37	St Str p/f	4	STRINGS	127	OrchHitMajSRX	2	HIT&STAB	217	Multi Reeds	3	WIND
38	SlowEpic Str	8	STRINGS	128	OrchHitMinSRX	2	HIT&STAB	218	Medieval Rds	3	WIND
39	Real Strings	2	STRINGS	129	OrchHitDimSRX	2	HIT&STAB	219	ScottishPIPE	1	WIND
40	4Seasons SRX	4	STRINGS	130	Big Hit Maj1	3	HIT&STAB	220	Hill&Sheeps	2	ETHNIC
41	VIVaVcB SRX	4	STRINGS	131	Big Hit Maj2	4	HIT&STAB	221	HilndChr SRX	1	ETHNIC
42	StudioString	4	STRINGS	132	Big Hit Min	4	HIT&STAB	222	Solo Fr.Horn	1	AC.BRASS
43	Quartet SRX	4	STRINGS	133	Big Hit Dim	4	HIT&STAB	223	SoloF.HrnSRX	1	AC.BRASS
44	VibSwStrings	4	STRINGS	134	Sfz! Hit-Maj	5	HIT&STAB	224	HrnAccompSRX	2	AC.BRASS
45	Str Swell	4	STRINGS	135	Sfz! Hit-Min	5	HIT&STAB	225	Orch Hrns Sw	5	AC.BRASS
46	OuvertureSRX	4	STRINGS	136	Suspense	2	HIT&STAB	226	Hornz Stereo	2	AC.BRASS
47	Cluster Sect	8	STRINGS	137	Hit/Off-Maj	7	HIT&STAB	227	Orch Hrns ff	3	AC.BRASS
48	Velo Str SRX	4	STRINGS	138	Trem Hit-Maj	5	HIT&STAB	228	FizzHorns ff	3	AC.BRASS
49	Agitato to 0	5	STRINGS	139	Trem Hit-Min	5	HIT&STAB	229	Fr.Horns SRX	3	AC.BRASS
50	DynaMarc SRX	4	STRINGS	140	Trem Hit-Dim	5	HIT&STAB	230	Dynamic Hrns	2	AC.BRASS
51	VivaceStrSRX	4	STRINGS	141	Orc/Prs 5-1^	4	HIT&STAB	231	Horn Sect /	2	AC.BRASS
52	Agitato STR	4	STRINGS	142	Drama Stab	7	HIT&STAB	232	Fr.HrnSfzSRX	2	AC.BRASS
53	STR SpicSRX	3	STRINGS	143	Maj Concern	8	HIT&STAB	233	MuteFr.Horns	2	AC.BRASS
54	StacctoSectn	6	STRINGS	144	OrcGlsMajSRX	1	HIT&STAB	234	F.Horn Rip	2	AC.BRASS
55	Spicc/ releas	4	STRINGS	145	OrcGlsMinSRX	1	HIT&STAB	235	Trumpet Plus	1	AC.BRASS
56	STR Marcato	2	STRINGS	146	Harp Up Hit	4	HIT&STAB	236	Natural Tmpt	1	AC.BRASS
57	Big Marcato!	4	STRINGS	147	Harp Dn Hit	4	HIT&STAB	237	Real Tp SRX	1	AC.BRASS
58	Spicc Sect	6	STRINGS	148	BrassStabSRX	4	HIT&STAB	238	El Bono SRX	2	AC.BRASS
59	Spc+Pz/ releas	4	STRINGS	149	Finale	5	HIT&STAB	239	Coronet	1	AC.BRASS
60	Piz-Spc /	6	STRINGS	150	Tuned HIT	3	HIT&STAB	240	Flugelhorn	1	AC.BRASS
61	RoomPizz SRX	4	STRINGS	151	YourMission5	4	HIT&STAB	241	Mute Tp SRX	1	AC.BRASS
62	Stage Pizz	4	STRINGS	152	Big Hit SRX	4	HIT&STAB	242	HrnmMute SRX	1	AC.BRASS
63	Nite Pizzico	5	STRINGS	153	HorrorHitSRX	4	HIT&STAB	243	WahMute /Mod	2	AC.BRASS
64	VIOLIN solo	2	STRINGS	154	Perc Hit	4	HIT&STAB	244	Trumpeters	4	AC.BRASS
65	Solo Vln /	2	STRINGS	155	BrassFallSRX	2	HIT&STAB	245	Tp Ens SRX	3	AC.BRASS
66	Solo Violin	1	STRINGS	156	Tp Fall	1	HIT&STAB	246	Trumps fff!	4	AC.BRASS
67	Sad S.VlnSRX	2	STRINGS	157	BrsStacc SRX	1	HIT&STAB	247	Softy Bones	4	AC.BRASS
68	Solo Viola	1	STRINGS	158	Finale SRX /	3	HIT&STAB	248	Bone Fluegal	2	AC.BRASS
69	AgitatoVaSRX	2	STRINGS	159	Orch Piccolo	2	FLUTE	249	Natural Tbn	1	AC.BRASS
70	Solo Cello 1	1	STRINGS	160	Picc Vel Tr	1	FLUTE	250	Trombone SRX	1	AC.BRASS
71	Solo Cello 2	1	STRINGS	161	Piccolo Trio	3	FLUTE	251	SoloTb SRX 1	1	AC.BRASS
72	The V Cello	2	STRINGS	162	Orch Flute	1	FLUTE	252	SoloTb SRX 2	1	AC.BRASS
73	Solo Vc /	2	STRINGS	163	Vibra Flute	1	FLUTE	253	Bs Tb	1	AC.BRASS
74	Marcato Vc	1	STRINGS	164	FluteAtm/Aft	2	FLUTE	254	Tbn One	1	AC.BRASS
75	Vln&Vcl	2	STRINGS	165	Picc/Fl 8va	3	FLUTE	255	Bone Boys	4	AC.BRASS
76	Solo Cb /	2	STRINGS	166	Double Flute	1	FLUTE	256	Bones sectn	4	AC.BRASS
77	Tape Orc SRX	3	STRINGS	167	Fl/EH Usn	4	FLUTE	257	BigBones SRX	4	AC.BRASS
78	Tape Str SRX	6	STRINGS	168	Calliope SRX	4	FLUTE	258	BsBoneSctSRX	3	AC.BRASS
79	Old Tale	2	STRINGS	169	DynoCelt SRX	2	FLUTE	259	Noblesse	3	AC.BRASS
80	Mellow Tape	2	STRINGS	170	Ethnic Flute	1	FLUTE	260	Brass Choral	3	AC.BRASS
81	Cystaline Pd	8	STRINGS	171	AmbiFluteSRX	2	FLUTE	261	BrassEns/Mod	4	AC.BRASS
82	SynStrings	3	STRINGS	172	T.WhistleDly	1	FLUTE	262	Small Brass	4	AC.BRASS
83	Full Orc SRX	4	ORCHESTRA	173	TinWhistle	1	FLUTE	263	Brass Orche	4	AC.BRASS
84	St.OrcUniSRX	2	ORCHESTRA	174	Sop Recorder	1	FLUTE	264	Switch Fall	2	AC.BRASS
85	OrchUnif SRX	4	ORCHESTRA	175	Tnr Recorder	1	FLUTE	265	4-Pc Brs Scn	4	AC.BRASS
86	GRAND OrcSRX	3	ORCHESTRA	176	Whistle SRX	2	FLUTE	266	BiggieBrsSRX	4	AC.BRASS
87	WavinGoodbye	4	ORCHESTRA	177	Solo Clari	1	WIND	267	SoloTuba SRX	2	AC.BRASS
88	DynOrchestr1	5	ORCHESTRA	178	Unison Clari	2	WIND	268	Tuba sfz/Mod	3	AC.BRASS
89	Pathetique	5	ORCHESTRA	179	Orch Clar	2	WIND	269	Tuba SRX	2	AC.BRASS
90	Oboes & Sect	6	ORCHESTRA	180	Bs Clairenet	1	WIND	270	Medieval Brs	4	AC.BRASS

Patch List (4)

For RD series (with SRX slots)/MC-909/VR-760/G-70

(BANK SELECT MSB : 93; LSB : 7 [No.001-128], LSB : 8 [No.129-256], LSB ; 9 [No.257-384], LSB;10 [No.385-449])

No.	Name	Voices	Category	No.	Name	Voices	Category	No.	Name	Voices	Category
271	Full Brass	4	AC.BRASS	331	Musaccordion	5	ACCORDION	391	17th Movemnt	6	VOX
272	Brass ff	2	AC.BRASS	332	Mystery Pad	4	PULSATING	392	Matins	2	VOX
273	Brass Sect /	4	AC.BRASS	333	Psychedelic1	4	SYNTH FX	393	Quartet II 5	4	VOX
274	Multi Sax	2	SAX	334	Psychedelic2	4	SYNTH FX	394	Scat /	2	VOX
275	St.EuroPiano	4	AC.PIANO	335	Eylsium m7^	6	SYNTH FX	395	Scatmen! SRX	1	VOX
276	JoyoClassics	2	AC.PIANO	336	Eylsium 9th^	6	SYNTH FX	396	The Voices	2	VOX
277	Empathy	3	AC.PIANO	337	Eylsium +7^	6	SYNTH FX	397	VocalCollect	2	VOX
278	Piano & Strs	6	AC.PIANO	338	Eylsium b9^	6	SYNTH FX	398	GregorianCho	4	VOX
279	Pno Concerto	6	AC.PIANO	339	Vln RunUp Mj	8	SYNTH FX	399	Soprano&co.	2	VOX
280	Song Wish	6	AC.PIANO	340	Vln RunUp Mn	8	SYNTH FX	400	Tenor solo	1	VOX
281	HpsFrntSRX 1	3	KEYBOARDS	341	Vln RunDn Mj	8	SYNTH FX	401	ClarsahHarpS	1	PLUCKED
282	HpsFrntSRX 2	2	KEYBOARDS	342	Vln RunDn Mn	8	SYNTH FX	402	Heavens Harp	5	PLUCKED
283	HpsFrntSRX 3	1	KEYBOARDS	343	Maj/MinHarps	2	SYNTH FX	403	C.Hrp/padSRX	4	PLUCKED
284	HpsBackSRX 1	4	KEYBOARDS	344	9th/b9 Harps	2	SYNTH FX	404	PhaseClarsah	4	PLUCKED
285	HpsBackSRX 2	2	KEYBOARDS	345	Harp m7 SRX	1	SYNTH FX	405	ClearHarpSRX	2	PLUCKED
286	HpsBackSRX 3	2	KEYBOARDS	346	Harp 9th SRX	1	SYNTH FX	406	Nails Harp	2	PLUCKED
287	Hps F/B SRX	3	KEYBOARDS	347	Harp +7 SRX	1	SYNTH FX	407	Harp SRX	1	PLUCKED
288	Hps F4/B SRX	3	KEYBOARDS	348	Harp b9 SRX	1	SYNTH FX	408	Natural Harp	1	PLUCKED
289	Hps F/B/B4 S	4	KEYBOARDS	349	Harpm7ScISRX	4	SYNTH FX	409	Warm Harp	1	PLUCKED
290	HpsLuteSRX 1	4	KEYBOARDS	350	Harpm9thScIS	4	SYNTH FX	410	Bousouk&Harp	4	PLUCKED
291	HpsLute 2	2	KEYBOARDS	351	Harp+7ScISRX	4	SYNTH FX	411	Ethelral Lute	4	PLUCKED
292	HpsLute 3	2	KEYBOARDS	352	Harpm9ScISRX	4	SYNTH FX	412	DelicateCOMB	3	PLUCKED
293	FullHarpsi 1	3	KEYBOARDS	353	Cluster Gong	4	SYNTH FX	413	St.CymblnSRX	2	PLUCKED
294	FullHarpsi 2	3	KEYBOARDS	354	Sus.Perc Hit	4	SYNTH FX	414	CymblnDuoSRX	2	PLUCKED
295	Continuo Pdl	2	KEYBOARDS	355	Prc Ens6-Maj	5	SYNTH FX	415	Bohemian SRX	3	PLUCKED
296	Celesta SRX	2	KEYBOARDS	356	Prc Ens7-Min	5	SYNTH FX	416	Bousouki Pic	2	PLUCKED
297	MusicBellsSRX	2	BELL	357	Prc Ens8-Dim	5	SYNTH FX	417	Bousouki	1	PLUCKED
298	Water Mallet	3	BELL	358	Cluster SRX	1	SYNTH FX	418	PulcinelaSRX	4	PLUCKED
299	Newborn	4	BELL	359	HorrorClustr	2	SYNTH FX	419	SN Roll SRX/	3	PERCUSSION
300	Victoriana 1	3	BELL	360	Hell Section	4	SYNTH FX	420	Perc Ens 1^	3	PERCUSSION
301	St.M.Box SRX	2	BELL	361	Legettimare	7	SYNTH FX	421	Perc Ens 2^	4	PERCUSSION
302	Victoriana 2	3	BELL	362	Limbus SRX	2	SYNTH FX	422	Perc Ens 3^	6	PERCUSSION
303	ChurchBells1	2	BELL	363	Backword	8	SYNTH FX	423	Perc Ens 4^	6	PERCUSSION
304	BlfryChm SRX	4	BELL	364	Dreamseq SRX	4	SYNTH FX	424	Perc Ens 5^	5	PERCUSSION
305	ChurchBellS2	3	BELL	365	Midnight SRX	4	SYNTH FX	425	Orch Percs	4	PERCUSSION
306	Tub.Bells S1	2	BELL	366	Colombus SRX	4	SYNTH FX	426	BodhranSplit	1	PERCUSSION
307	Tub.Bells S2	1	BELL	367	Once Upon A	5	OTHER SYNTH	427	BodhranVel S	3	PERCUSSION
308	BsMarimbSRX1	2	MALLET	368	Desert Dream	4	OTHER SYNTH	428	CrazyBodhrnS	1	PERCUSSION
309	BsMarimbSRX2	1	MALLET	369	AncientTimes	5	OTHER SYNTH	429	BodhranMenuS	1	PERCUSSION
310	MultiMallets	3	MALLET	370	Tension SRX	5	OTHER SYNTH	430	Perc Mix SRX	2	PERCUSSION
311	Glocken	1	MALLET	371	Wreck	6	BRIGHT PAD	431	MassiveTimpa	4	PERCUSSION
312	Glockeneste	3	MALLET	372	Eclipse SRX	4	BRIGHT PAD	432	4-way Timps	3	PERCUSSION
313	Glockn1stSRX	2	MALLET	373	PulsingVox S	3	BRIGHT PAD	433	DynaTimpsSRX	2	PERCUSSION
314	Clear Glock	1	MALLET	374	SynthStr.Pad	2	SOFT PAD	434	TimpaniRoll1	4	PERCUSSION
315	Xylorimba	2	MALLET	375	Meditate PAD	4	SOFT PAD	435	TimpaniRoll2	4	PERCUSSION
316	Xylophone S1	2	MALLET	376	Choir	3	VOX	436	MultiTimpani	1	PERCUSSION
317	Xylophone S2	1	MALLET	377	Angelic Pad	4	VOX	437	Roll > Klang	5	PERCUSSION
318	Mallet Stack	4	MALLET	378	BoysChoirSRX	1	VOX	438	Timpani /	2	PERCUSSION
319	OrgFlutes S1	3	ORGAN	379	Sing! /Mod	6	VOX	439	Big Orc.Perc	3	PERCUSSION
320	OrgFlutes S2	4	ORGAN	380	SmockyVoices	2	VOX	440	WindChimeSRX	1	PERCUSSION
321	OrgFlutes S3	2	ORGAN	381	Smooth Choir	5	VOX	441	FingerCymSRX	1	PERCUSSION
322	OrgFlute 8'S	1	ORGAN	382	X..Vox SRX	3	VOX	442	ConcertBDSRX	3	PERCUSSION
323	Psyche Pipes	2	ORGAN	383	RealChoirSRX	4	VOX	443	BD Roll SRX/	2	PERCUSSION
324	ChrchPipes S	4	ORGAN	384	StChrMm/Ah S	4	VOX	444	Tam Tam SRX	2	PERCUSSION
325	Organ&Recdr	4	ORGAN	385	Mmms & Aaahs	2	VOX	445	Piatti!! SRX	2	PERCUSSION
326	Early Harmn	5	ORGAN	386	Choir /Mod	4	VOX	446	SleighBellsS	1	PERCUSSION
327	CathedraSRX	4	ORGAN	387	Close Mouths	1	VOX	447	SlapstickS /	2	PERCUSSION
328	Harmonium	2	ORGAN	388	Voice Stax	7	VOX	448	TambourineS/	2	PERCUSSION
329	ChurchOrgSRX	4	ORGAN	389	MorphicChoir	6	VOX	449	CastanetsS /	1	PERCUSSION
330	OrganChrdSRX	4	ORGAN	390	Morph4Choir	8	VOX				

^: Accent
/: Alternate sound obtained with Key Velocity
/Mod: Alternate sound obtained with Modulation (CC:01)
/Aft: Alternate sound obtained with Aftertouch (CC:97)

- * With some tones, tempos may change suddenly or noise may be produced. This occurs when the tempo is being synchronized, for example to multi-effects or chorus delay times. If the noise becomes noticeable, change the delay time value settings to something other than times corresponding to beats.
- * Some of the patches use waveforms of the SR-JV80 series. For this reason, the upper end of the keyboard may not sound because of key range restrictions.
- * On the RD series (with SRX slots)/MC-909/VR-760/G-70, you can not select only the patches which are designed to be used with the Fantom series/XV series/JUNO-G/MX-200.
- * Some of the patch names shown in this list may appear differently on the display of the device being used, but the tones themselves remain unaffected.

^: アクセント
/: Key Velocity による切替え音色
/Mod: Modulation (CC:01) による切替え音色
/Aft: Aftertouch (CC:97) による切替え音色

- * 音色によっては、テンポを急激に変化させるとノイズが出る場合があります。これは、マルチエフェクトやコーラスのディレイ・タイムなどがテンポに同期している場合に発生します。ノイズが気になる場合は、ディレイ・タイムなどの設定を音符以外の値に変更してください。
- * パッチの中には SR-JV80 シリーズのウェーブフォームを使用しているため、上鍵域で発音の制限があり発音しない部分があります。
- * SRX 対応の RD シリーズ /MC-909/VR-760 では、Fantom シリーズ / XV シリーズ /JUNO-G/MX-200 専用のパッチを選ぶことはできません。
- * 一部のパッチの名前が、本リストと使用機器の画面表示とで異なる場合がありますが、音色自体に影響はありません。

Rhythm Set List

For All Instruments

(BANK SELECT MSB: 92; LSB: 7)

No.	RhythmName	No.	RhythmName	No.	RhythmName
1	Orch. Kit 1	3	Melo OrchKit	5	All Orch Kit
2	Orch. Kit 2	4	GM AssignKit		

Rhythm Set Key Assign (1)

For Fantom series/XV series/JUNO-G/MX-200

Note No.	1. Orch. Kit 1	2. Orch. Kit 2	3. Melo OrchKit	4. GM AssignKit	5. All Orch Kit
26	--	--	--	--	--
27	--	--	--	Close HiHat2	--
28	--	--	--	Pedal HiHat2	TubularBells
29	--	--	--	Open HiHat2	Tubular 2
30	--	--	--	Ride Cymbal	Church Bells
31	--	--	--	SticksSide	ChurchBell 2
32	--	--	--	R8 Click	JingleBell 2
33	--	--	--	Metronome 2	Sleigh Bell
34	BD Roll	BD Roll	BD Roll	Metronome 1	Tambourine
35	Orch BD	Concert BD 3	Orch BD	Concert BD	Wind Chime 2
C2 36	Concert BD 1	Concert BD 2	Concert BD 1	ConcertBD Mt	Wind Chime 3
37	OrchSnr Roll	OrchSnr Roll	OrchSnr Roll	Side Stick	Mute Triangl
38	Orch Snr	Concert Snr2	Orch Snr	Concert Snr	Open Triangl
39	Snr Roll	Snr Roll	Snr Roll	Castanets	Finger Cym 2
40	Concert Snr1	Concert Snr3	Concert Snr2	Concert Snr	Crash Cymbal
41	Timpani 2	Timpani	Concert Snr3	Timpani	Cymbal Hit
42	Timpani 2	Timpani	Timpani 2	Timpani	MalletCymbal
43	Timpani 2	Timpani	Timpani 2	Timpani	CymbalScrape
44	Timpani 2	Timpani	Timpani 2	Timpani	Gong
45	Timpani 2	Timpani	Timpani 2	Timpani	Tam Tam
46	Timpani 2	Timpani	Timpani 2	Timpani	Grongkas
47	Timpani 2	Timpani	Timpani 2	Timpani	OrchPrc Hit
C3 48	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 2
49	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 1
50	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 1
51	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 2
52	Timpani 2	Timpani	Timpani 2	Timpani	TunedBlock A
53	Timpani 2	Timpani	Timpani 2	Timpani	Slapstick
54	Crash Cymbal	Crash Cymbal	Timpani	Tambourine	Ratchet
55	Cymbal Hit	Cymbal Hit	Timpani	Splash Cym	Concert BD 1
56	MalletCymbal	MalletCymbal	Timpani	Cowbell	Concert BD 2
57	CymbalScrape	CymbalScrape	Timpani	Con.Cymbal2	Concert BD 3
58	Gong	Gong	Timpani	Vibraslap	Orch BD
59	Tam Tam	Tam Tam	Timpani	Concert Cym	BD Roll
C4 60	Grongkas	Grongkas	Timpani	Bongo High	Concert Snr1
61	OrchPrc Hit	OrchPrc Hit	Timpani	Bongo Low	Concert Snr2
62	Perc Hit 2	Perc Hit 2	Timpani	Mute H.Conga	Concert Snr3
63	Finger Cym 2	Finger Cym 2	Timpani	Conga Hi Opn	Orch Snr
64	Wind Chime 2	Wind Chime 2	Timpani	Conga Lo Opn	OrchSnr Roll
65	Wind Chime 3	Wind Chime 3	Timpani	High Timbale	Snr Roll
66	JingleBell 2	JingleBell 2	Timpani	Low Timbale	Orch Hit Dim
67	Sleigh Bell	Sleigh Bell	BoysAleluial	Agogo High	Orch Hit Maj
68	TubularBells	TubularBells	Boys Amen 1	Agogo Low	Orch Hit Min
69	Tubular 2	Tubular 2	Boys Amen 2	Cabasa	Orch Hit Maj
70	Church Bells	Church Bells	Amen	Maracas	Orch Hit Min
71	ChurchBell 2	ChurchBell 2	Alluia	ShortWhistle	Orch Hit Dim
C5 72	Mute Triangl	Mute Triangl	Tenor	Long Whistle	Orch Hit f
73	Open Triangl	Open Triangl	Tubular 2	Short Guiro	OrchestraHit
74	TunedBlockHi	Bodhran 1	Tubular 2	Long Guiro	Staccato p
75	TunedBlockLo	Bodhran 2	Tubular 2	Claves	Staccato f
76	Tambourine	Bodhran 3	Tubular 2	Woodblock H	Gliss Maj
77	Castanets 1	Bodhran 4	Tubular 2	Woodblock L	Gliss Min
78	Castanets 2	Bodhran 5	Tubular 2	Mute Cuica	Tremolo p
79	Slapstick	Bodhran 6	Tubular 2	Open Cuica	Tremolo sfz
80	Ratchet	Bodhran 7	Tubular 2	MuteTriangl	Tremolo f
81	Perc Hit 1	Timpani	Tubular 2	OpenTriangl	Pentatonic
82	Timp Roll p	Timp Roll p	Tubular 2	ShakerCabasa	Gliss Maj Lp
83	Timp Roll f	Timp Roll f	Tubular 2	Jingle Bell	Gliss Min Lp
C6 84	F.Horn Rip	Brass Stacc	TubularBells	Bell Tree	Cluster
85	Harp Maj Up	Orch Hit Dim	TubularBells	Castanets	F.Horn Rip
86	Harp Maj Dwn	Orch Hit Maj	TubularBells	Mute Surdo	Brass Fall
87	Harp m7 Up	Orch Hit Min	TubularBells	Open Surdo	Tps Fall
88	Harp m7 Dwn	Orch Hit Maj	TubularBells	Applause	Brass Stacc
89	Harp 9th Up	Orch Hit Min	TubularBells	--	Timpani
90	Harp 9th Dwn	Orch Hit Dim	TubularBells	--	Timpani p
91	Harp +7 Up	Orch Hit f	TubularBells	--	Timpani 2 p
92	Harp +7 Dwn	OrchestraHit	TubularBells	--	Timp Roll f
93	Harp b9 Up	Pentatonic	TubularBells	--	Timp Roll p
94	Harp b9 Dwn	Cluster	TubularBells	--	Harp Maj Up
95	Applause	Applause	TubularBells	--	Harp Maj Dwn
C7 96	Metronome 2	Metronome 2	Metronome 2	--	Harp m7 Up
97	R8 Click	R8 Click	R8 Click	--	Harp m7 Dwn
98	Metronome 1	Metronome 1	Metronome 1	--	Harp 9th Up
99	--	--	--	--	Harp 9th Dwn
100	--	--	--	--	Harp +7 Up
101	--	--	--	--	Harp +7 Dwn
102	--	--	--	--	Harp b9 Up
103	--	--	--	--	Harp b9 Dwn

* On the Fantom series/XV series/JUNO-G/MX-200, you can not select only the rhythm sets which are designed to be used with the RD series (with SRX slots)/MC-909/VR-760/G-70.

※ Fantomシリーズ/XVシリーズ/JUNO-G/MX-200では、RDシリーズ(SRX対応)/MC-909/VR-760専用のリズム・セットを選ぶことはできません。

Rhythm Set Key Assign (2)

For RD series (with SRX slots)/MC-909/VR-760/G-70

Note No.	1. Orch. Kit 1	2. Orch. Kit 2	3. Melo OrchKit	4. GM AssignKit	5. All Orch Kit
26	--	--	--	--	--
27	--	--	--	--	TubularBells
28	--	--	--	--	Tubular 2
29	--	--	--	--	Church Bells
30	--	--	--	--	ChurchBell 2
31	--	--	--	--	JingleBell 2
32	--	--	--	--	Sleigh Bell
33	--	--	--	--	Tambourine
34	BD Roll	BD Roll	BD Roll	Concert BD	Wind Chime 2
35	Orch BD	Concert BD 3	Orch BD	ConcertBD Mt	Wind Chime 3
C2 36	Concert BD 1	Concert BD 2	Concert BD 1	--	Mute Triangl
37	OrchSnr Roll	OrchSnr Roll	OrchSnr Roll	Concert Snr	Open Triangl
38	Orch Snr	Concert Snr2	Orch Snr	Castanets	Finger Cym 2
39	Snr Roll	Snr Roll	Snr Roll	Concert Snr	Crash Cymbal
40	Concert Snr1	Concert Snr3	Concert Snr2	Timpani	Cymbal Hit
41	Timpani 2	Timpani	Concert Snr3	Timpani	MalletCymbal
42	Timpani 2	Timpani	Timpani 2	Timpani	CymbalScrape
43	Timpani 2	Timpani	Timpani 2	Timpani	Gong
44	Timpani 2	Timpani	Timpani 2	Timpani	Tam Tam
45	Timpani 2	Timpani	Timpani 2	Timpani	Grongkas
46	Timpani 2	Timpani	Timpani 2	Timpani	OrchPrc Hit
47	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 2
C3 48	Timpani 2	Timpani	Timpani 2	Timpani	Perc Hit 1
49	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 1
50	Timpani 2	Timpani	Timpani 2	Timpani	Castanets 2
51	Timpani 2	Timpani	Timpani 2	Timpani	TunedBlock A
52	Timpani 2	Timpani	Timpani 2	Timpani	Slapstick
53	Timpani 2	Timpani	Timpani 2	Tambourine	Ratchet
54	Crash Cymbal	Crash Cymbal	Timpani	--	Concert BD 1
55	Cymbal Hit	Cymbal Hit	Timpani	--	Concert BD 2
56	MalletCymbal	MalletCymbal	Timpani	Con.Cymbal2	Concert BD 3
57	CymbalScrape	CymbalScrape	Timpani	--	Orch BD
58	Gong	Gong	Timpani	Concert Cym	BD Roll
59	Tam Tam	Tam Tam	Timpani	--	Concert Snr1
C4 60	Grongkas	Grongkas	Timpani	--	Concert Snr2
61	OrchPrc Hit	OrchPrc Hit	Timpani	--	Concert Snr3
62	Perc Hit 2	Perc Hit 2	Timpani	--	Orch Snr
63	Finger Cym 2	Finger Cym 2	Timpani	--	OrchSnr Roll
64	Wind Chime 2	Wind Chime 2	Timpani	--	Snr Roll
65	Wind Chime 3	Wind Chime 3	Timpani	--	Orch Hit Dim
66	JingleBell 2	JingleBell 2	Timpani	--	Orch Hit Maj
67	Sleigh Bell	Sleigh Bell	BoysAleluial	--	Orch Hit Min
68	TubularBells	TubularBells	Boys Amen 1	--	Orch Hit Maj
69	Tubular 2	Tubular 2	Boys Amen 2	--	Orch Hit Min
70	Church Bells	Church Bells	Amen	--	Orch Hit Dim
71	ChurchBell 2	ChurchBell 2	Alluia	--	Orch Hit f
C5 72	Mute Triangl	Mute Triangl	Tenor	--	OrchestraHit
73	Open Triangl	Open Triangl	Tubular 2	--	Staccato p
74	TunedBlockHi	Bodhran 1	Tubular 2	--	Staccato f
75	TunedBlockLo	Bodhran 2	Tubular 2	Woodblock H	Gliss Maj
76	Tambourine	Bodhran 3	Tubular 2	Woodblock L	Gliss Min
77	Castanets 1	Bodhran 4	Tubular 2	--	Tremolo p
78	Castanets 2	Bodhran 5	Tubular 2	--	Tremolo sfz
79	Slapstick	Bodhran 6	Tubular 2	MuteTriangl	Tremolo f
80	Ratchet	Bodhran 7	Tubular 2	OpenTriangl	Pentatonic
81	Perc Hit 1	Timpani	Tubular 2	--	Gliss Maj Lp
82	Timp Roll p	Timp Roll p	Tubular 2	Jingle Bell	Gliss Min Lp
83	Timp Roll f	Timp Roll f	Tubular 2	--	Cluster
C6 84	F.Horn Rip	Brass Stacc	TubularBells	Castanets	F.Horn Rip
85	Harp Maj Up	Orch Hit Dim	TubularBells	--	Brass Fall
86	Harp Maj Dwn	Orch Hit Maj	TubularBells	--	Tps Fall
87	Harp m7 Up	Orch Hit Min	TubularBells	--	Brass Stacc
88	Harp m7 Dwn	Orch Hit Maj	TubularBells	--	Timpani
89	Harp 9th Up	Orch Hit Min	TubularBells	--	Timpani p
90	Harp 9th Dwn	Orch Hit Dim	TubularBells	--	Timpani 2 p
91	Harp +7 Up	Orch Hit f	TubularBells	--	Timp Roll f
92	Harp +7 Dwn	OrchestraHit	TubularBells	--	Timp Roll p
93	Harp b9 Up	Pentatonic	TubularBells	--	Harp Maj Up
94	Harp b9 Dwn	Cluster	TubularBells	--	Harp Maj Dwn
95	--	--	TubularBells	--	Harp m7 Up
C7 96	--	--	--	--	Harp m7 Dwn
97	--	--	--	--	Harp 9th Up
98	--	--	--	--	Harp 9th Dwn
99	--	--	--	--	Harp +7 Up
100	--	--	--	--	Harp +7 Dwn
101	--	--	--	--	Harp b9 Up
102	--	--	--	--	Harp b9 Dwn
103	--	--	--	--	--

* On the RD series (with SRX slots)/MC-909/VR-760/G-70, you can not select only the rhythm sets which are designed to be used with the Fantom series/XV series/JUNO-G/MX-200.

* On the MC-909, you can use only the rhythm tones for the sixteen keys from note numbers 35 (B1) through 50 (D3).

※ SRX 対応のRD シリーズ /MC-909/VR-760 では、Fantom シリーズ / XV シリーズ /JUNO-G/MX-200 専用のリズム・セットを選ぶことはできません。

※ MC-909 では、Note No. 35 (B1) から 50 (D3) までの 16 鍵分のリズム・トーンのみ使用できます。

Waveform List (1)

No.	Name	No.	Name	No.	Name	No.	Name	No.	Name
1	Strings L pA *	61	VcSolo Vib C	121	Oboe 1	181	Trombone mfA	241	Harp +7 Dwn
2	Strings R pA *	62	Vls Spicc A	122	Oboe 1A	182	Trombone mfB	242	Harp b9 Up
3	Strings L pB *	63	Vls Spicc B	123	Oboe 1B	183	Trombone mfC	243	Harp b9 Dwn
4	Strings R pB *	64	Vls Spicc C	124	Oboe 1C	184	Trombone f A	244	Harp m7 UpLp
5	Strings L pC *	65	Vas Spicc A	125	Oboe 2A	185	Trombone f B	245	Harp m7 DnLp
6	Strings R pC *	66	Vas Spicc B	126	Oboe 2B	186	Trombone f C	246	Harp 9thUpLp
7	Strs L pA Lp *	67	Vas Spicc C	127	Oboe 2C	187	Bass Tb	247	Harp 9thDnLp
8	Strs R pA Lp *	68	Vcs Spicc A	128	Oboe 3 A	188	Tb Sect	248	Harp +7 UpLp
9	Strs L pB Lp *	69	Vcs Spicc B	129	Oboe 3 B	189	Tb Sect Lp	249	Harp +7 DnLp
10	Strs R pB Lp *	70	Vcs Spicc C	130	Oboe 3 C	190	Multi Reed	250	Harp b9 UpLp
11	Strs L pC Lp *	71	Cbs Spicc A	131	Eng.Horn A	191	Uill.Pipe1 A	251	Harp b9 DnLp
12	Strs R pC Lp *	72	Cbs Spicc B	132	Eng.Horn B	192	Uill.Pipe1 B	252	EuroPiano pA
13	Strings L fA *	73	Cbs Spicc C	133	Eng.Horn C	193	Uill.Pipe1 C	253	EuroPiano pB
14	Strings R fA *	74	Multi Spicc	134	Eng.Horn 2 A	194	Uill.Pipe2 A	254	EuroPiano pC
15	Strings L fB *	75	VISolo Spicc	135	Eng.Horn 2 B	195	Uill.Pipe2 B	255	EuroPiano fA
16	Strings R fB *	76	VISpicc2 A	136	Eng.Horn 2 C	196	Uill.Pipe2 C	256	EuroPiano fB
17	Strings L fC *	77	VISpicc2 B	137	Bassoon	197	U.Pipe Orn A	257	EuroPiano fC
18	Strings R fC *	78	VISpicc2 C	138	Bassoon 1	198	U.Pipe Orn B	258	Ac Piano1 A
19	Strs L fA Lp *	79	VcSolo Spicc	139	Bassoon 2 A	199	U.Pipe Orn C	259	Piano Thump
20	Strs R fA Lp *	80	MultiSp Spicc	140	Bassoon 2 B	200	F.Horn Solo	260	Piano Up TH
21	Strs L fB Lp *	81	Pizzicato 1	141	Bassoon 2 C	201	F.HornSolo2A	261	Harpsichord
22	Strs R fB Lp *	82	Pizzicato 2	142	Bassoon&Oboe	202	F.HornSolo2B	262	HPS_Front A
23	Strs L fC Lp *	83	STR Attack	143	S_Recorder A	203	F.HornSolo2C	263	HPS_Front B
24	Strs R fC Lp *	84	StrAttack 2A	144	S_Recorder B	204	F.Horn Sect1	264	HPS_Front C
25	Multi STR A	85	StrAttack 2B	145	S_Recorder C	205	F.Horn Sect2	265	HPS_Back A
26	Multi STR B	86	StrAttack 2C	146	T_Recorder A	206	F.Hrn Sc1 Lp	266	HPS_Back B
27	Multi STR C	87	OrchUnisonLA *	147	T_Recorder B	207	F.Hrn Sc2 Lp	267	HPS_Back C
28	Multi STR Lp	88	OrchUnisonRA *	148	T_Recorder C	208	French 1A	268	HPS_Lute A
29	VI Sect A	89	OrchUnisonLB *	149	Tnr.Recorder	209	F.Horns2 pA	269	HPS_Lute B
30	VI Sect B	90	OrchUnisonRB *	150	TinWhistle A	210	F.Horns2 pB	270	HPS_Lute C
31	VI Sect C	91	OrchUnisonLC *	151	TinWhistle B	211	F.Horns2 pC	271	HPS_Click
32	VI Sect Lp	92	OrchUnisonRC *	152	TinWhistle C	212	F.Horns2 pA+	272	Celesta A
33	Va Sect A	93	Full Orch.	153	TinWhisOrn A	213	F.Horns2 pB+	273	Celesta B
34	Va Sect B	94	Full Orch Lp	154	TinWhisOrn B	214	F.Horns2 pC+	274	Celesta C
35	Va Sect C	95	JV Strings L *	155	TinWhisOrn C	215	F.Horns2 fA	275	MusicBox 2 A
36	Va Sect Lp	96	JV Strings R *	156	Whistle 1	216	F.Horns2 fB	276	MusicBox 2 B
37	Vc Sect A	97	JV Strings A	157	Multi Sax 1	217	F.Horns2 fC	277	MusicBox 2 C
38	Vc Sect B	98	JP Strings1A	158	Multi Sax 2	218	F.Horns2 fA+	278	Bass Marimba
39	Vc Sect C	99	JP Strings2A	159	BRS Ensemble	219	F.Horns2 fB+	279	Xylophone
40	Vc Sect Lp	100	Soft Pad A	160	BRS Ens Lp	220	F.Horns2 fC+	280	Glockenspiel
41	Cb Sect	101	Piccolo	161	Brass ff	221	F.Horn Mute	281	Glocken 2 A
42	Cb Sect Lp	102	Piccolo 2 A	162	ff Brass Lp	222	F.Hrn MuteLp	282	Glocken 2 B
43	VI Solo A	103	Piccolo 2 B	163	Trumpet 1A	223	Tuba	283	Glocken 2 C
44	VI Solo B	104	Piccolo 2 C	164	Trumpet 2	224	Tuba 1	284	TubularBells
45	VI Solo C	105	Flute 1A	165	Trumpet 3 A	225	Harp A	285	Tubular 2 A
46	Va Solo A	106	FluteVib2 A	166	Trumpet 3 B	226	Harp B	286	Tubular 2 B
47	Va Solo B	107	FluteVib2 B	167	Trumpet 3 C	227	Harp C	287	Tubular 2 C
48	Va Solo C	108	FluteVib2 C	168	Cornet	228	Harp 2 A	288	Wind Chime 2
49	Vc Solo A	109	Celtic Flt A	169	Tpt Sect. A	229	Harp 2 B	289	Wind Chime 3
50	Vc Solo B	110	Celtic Flt B	170	Flugelhorn	230	Harp 2 C	290	Church Bells
51	Vc Solo C	111	Celtic Flt C	171	HarmonMute2A	231	ClarsahHarpA	291	ChurchBell 2
52	Cb Solo	112	ORG_Flute A	172	HarmonMute2B	232	ClarsahHarpB	292	JingleBell 2
53	Violin&Cello	113	ORG_Flute B	173	HarmonMute2C	233	ClarsahHarpC	293	Sleigh Bell
54	Multi Solo 1	114	ORG_Flute C	174	Solo Tb A	234	Harp Maj Up	294	Bousouki A
55	Multi Solo 2	115	Clarinet	175	Solo Tb B	235	Harp Maj Dn	295	Bousouki B
56	VISolo Vib A	116	Clarinet 2 A	176	Solo Tb C	236	Harp m7 Up	296	Bousouki C
57	VISolo Vib B	117	Clarinet 2 B	177	Trombone 1	237	Harp m7 Dwn	297	OrchPrc Hit
58	VISolo Vib C	118	Clarinet 2 C	178	Trombone 2 A	238	Harp 9th Up	298	OrchestraHit
59	VcSolo Vib A	119	Multi Cla	179	Trombone 2 B	239	Harp 9th Dwn	299	Orch Hit f
60	VcSolo Vib B	120	Bs Clarinet	180	Trombone 2 C	240	Harp +7 Up	300	Orch Hit Maj

Waveform List (2)

No. Name	No. Name	No. Name	No. Name	No. Name
301 Orch Hit Min	351 Gregorian RA *	401 Amen L *	451 Bodhran 1	501 REV VoMenu L * **
302 Orch Hit Dim	352 Gregorian LB *	402 Amen R *	452 Bodhran 2	502 REV VoMenu R * **
303 OrchHit2 Maj	353 Gregorian RB *	403 Aleluia L *	453 Bodhran 3	503 REV ByAleluL *
304 OrchHit2 Min	354 Gregorian LC *	404 Aleluia R *	454 Bodhran 4	504 REV ByAleluR *
305 OrchHit2 Dim	355 Gregorian RC *	405 Breath Wind	455 Bodhran 5	505 REV ByAmen1L *
306 Gliss Maj	356 Sop Chr Mono	406 Breath Attack	456 Bodhran 6	506 REV ByAmen1R *
307 Gliss Min	357 SopranoChr L *	407 Breath Whisl	457 Bodhran 7	507 REV ByAmen2L *
308 Gliss Maj Lp	358 SopranoChr R *	408 Breath Hrmon	458 Perc Hit 1	508 REV ByAmen2R *
309 Gliss Min Lp	359 Tenor Solo	409 Whistle Nz	459 Perc Hit 2	509 REV Amen L *
310 Tremolo p	360 Jazz Doo L A *	410 Flute Breath	460 Perc Set 1	510 REV Amen R *
311 Tremolo f	361 Jazz Doo R A *	411 Vocal Breath	461 Perc Set 2	511 REV AleluiaL *
312 Tremolo sfz	362 Jazz Doo L B *	412 Timpani	462 Perc Set 3	512 REV AleluiaR *
313 Tremolo p Lp	363 Jazz Doo R B *	413 Timpani p	463 REV Hrp m7Up	
314 Tremolo f Lp	364 Jazz Doo L C *	414 Timpani f	464 REV Hrp m7Dn	
315 Tremolo sfLp	365 Jazz Doo R C *	415 Timpani 2 p	465 REV Hrp9thUp	
316 Cluster	366 Jazz Doot LA *	416 Timpani 2 f	466 REV Hrp9thDn	
317 Cluster Lp	367 Jazz Doot RA *	417 Timpani Roll	467 REV Hrp +7Up	
318 Pentatonic	368 Jazz Doot LB *	418 Timp Roll p	468 REV Hrp +7Dn	
319 PentatonicLp	369 Jazz Doot RB *	419 Timp Roll f	469 REV Hrp b9Up	
320 Staccato p	370 Jazz Doot LC *	420 Concert SNR1	470 REV Hrp b9Dn	
321 Staccato f	371 Jazz Doot RC *	421 Concert SNR2	471 REV Hit f	
322 Brass Stacc	372 Jazz Dat L A *	422 Concert SNR3	472 REV Hit Maj	
323 Brass Fall	373 Jazz Dat R A *	423 Orch SNR	473 REV Hit Min	
324 Tps Fall	374 Jazz Dat L B *	424 OrchSNR Roll	474 REV Hit Dim	
325 F.Horn Rip	375 Jazz Dat R B *	425 SNR Roll	475 REV Hit2 Maj	
326 Choir A	376 Jazz Dat L C *	426 SNR Set	476 REV Hit2 Min	
327 Choir B	377 Jazz Dat R C *	427 Concert BD 1	477 REV Hit2 Dim	
328 Choir C	378 Jazz Bap L A *	428 Concert BD 2	478 REV Stacc p	
329 F.Chor Aah A	379 Jazz Bap R A *	429 Concert BD 3	479 REV Stacc f	
330 F.Chor Aah B	380 Jazz Bap L B *	430 Orch BD	480 REV Bell	
331 F.Chor Aah C	381 Jazz Bap R B *	431 BD Roll	481 REV Cym Hit	
332 F.Chor Mmh A	382 Jazz Bap L C *	432 Tam Tam	482 REV PercHit1	
333 F.Chor Mmh B	383 Jazz Bap R C *	433 Crash Cymbal	483 REV PercHit2	
334 F.Chor Mmh C	384 Dow fall L A *	434 Crash Cym Lp	484 REV BD 1	
335 LargeChrL pA *	385 Dow fall R A *	435 Cymbal Hit	485 REV BD 2	
336 LargeChrR pA *	386 Dow fall L B *	436 Finger Cym 2	486 REV BD 3	
337 LargeChrL pB *	387 Dow fall R B *	437 MalletCymbal	487 REV BD Roll	
338 LargeChrR pB *	388 Dow fall L C *	438 CymbalScrape	488 REV SNR 1	
339 LargeChrL pC *	389 Dow fall R C *	439 Gong	489 REV SNR 2	
340 LargeChrR pC *	390 Bass Thum A	440 Grongkas	490 REV SNR 3	
341 LargeChrL fA *	391 Bass Thum B	441 Castanets 1	491 REV Tam Tam	
342 LargeChrR fA *	392 Bass Thum C	442 Castanets 2	492 REV Crash	
343 LargeChrL fB *	393 Vocal Menu L * **	443 Tambourine	493 REV Gong	
344 LargeChrR fB *	394 Vocal Menu R * **	444 Triangle	494 REV Tamb	
345 LargeChrL fC *	395 BoysAleluiaL *	445 Slapstick	495 REV Timp 1	
346 LargeChrR fC *	396 BoysAleluiaR *	446 Ratchet	496 REV Timp 2	
347 Boys Choir A	397 Boys Amen1 L *	447 TunedBlock A	497 REV Casta 1	
348 Boys Choir B	398 Boys Amen1 R *	448 TunedBlock B	498 REV Casta 2	
349 Boys Choir C	399 Boys Amen2 L *	449 TunedBlock C	499 REV S.Stick	
350 Gregorian LA *	400 Boys Amen2 R *	450 Bodhran MENU **	500 REV Sleigh	

* These are stereo waveforms, offered in left-right pairs.

** These are menu waveforms. Include multiple waveforms assigned to keys individually.

* Some of the waveform names shown in this list may appear differently on the display of the device being used, but the tones themselves remain unaffected.

When you create a Patch using the waveforms stored in the Expansion Board, observe the following points:

* If you make a Patch with a single voice and then later play it in a chord, the sound may be distorted with certain settings for the Effects and TVA. If this happens, adjust the level of the Effects and TVA.

* This product uses waveforms of the SR-JV80 series. For this reason, the upper end of the keyboard may not sound because of key range restrictions.

* LとRでペアになるステレオ・ウェーブフォームです。

** メニュー・ウェーブフォームです。複数のウェーブフォームが、各キーに割り当てられています。

※一部のウェーブフォームの名前が、本リストと使用機器の画面表示とで異なる場合がありますが、音色自体に影響はありません。このエクスパンション・ボードに収められているウェーブフォームを使ってパッチを作るときには、次の点に注意してください。

※単音でパッチを作ったとき、エフェクトやTVAの設定状態によって、その音を和音で演奏すると音が歪む場合があります。このようなときは、エフェクトやTVAのレベルを調整してください。

※本製品のウェーブフォームはSR-JV80シリーズのウェーブフォームを使用しているため、上鍵域で発音の制限があり発音しない部分があります。

Menu Waveform

393 Vocal Menu L

Key	Wave#	WaveName
C4	359	Tenor Solo
D4	395	BoysAleluiaL
E4	397	Boys Amen1 L
F4	399	Boys Amen2 L
G4	401	Amen L
A4	403	Aleluia L

394 Vocal Menu R

Key	Wave#	WaveName
C4	359	Tenor Solo
D4	396	BoysAleluiaR
E4	398	Boys Amen1 R
F4	400	Boys Amen2 R
G4	402	Amen R
A4	404	Aleluia R

450 Bodhran Menu

Key	Wave#	WaveName
C4	451	Bodhran 1
D4	452	Bodhran 2
E4	453	Bodhran 3
F4	454	Bodhran 4
G4	455	Bodhran 5
A4	456	Bodhran 6
B4	457	Bodhran 7

501 REV VoMenu L

Key	Wave#	WaveName
C4	503	REV ByAleluL
D4	505	REV ByAmen1L
E4	507	REV ByAmen2L
F4	509	REV Amen L
G4	511	REV AleluiaL
A4		REV Jazz Doot L *
B4		REV Jazz Dat L *
C5		REV Jazz Bap L *
D5		REV Dow fall L *
E5		REV Bass Thum *

502 REV VoMenu R

Key	Wave#	WaveName
C4	504	REV ByAleluR
D4	506	REV ByAmen1R
E4	508	REV ByAmen2R
F4	510	REV Amen R
G4	512	REV AleluiaR
A4		REV Jazz Doot R *
B4		REV Jazz Dat R *
C5		REV Jazz Bap R *
D5		REV Dow fall R *
E5		REV Bass Thum *

* Used only in the menu waveforms.

* このウェーブフォームはメニュー・ウェーブフォームのみで使用しています。

About the New Format

Expansion boards SRX-01~04 could only hold a maximum of 128 Patches. In order to make it possible to provide an even greater variety of sounds, a new format (implemented originally on the SRX-05) is now being employed. This new format is capable of handling more than 128 Patches.

If you are using one of the five models listed below, and are still using an older version of the system, you may need to upgrade its system to enable it to support the new SRX format. Check the system program version of your instrument; if your current version is the same as, or older than the corresponding one listed below, use the system update program on the included CD-ROM to upgrade to the latest version before using the SRX-06.

- Fantom (FA-76): Update required for versions up to Ver. 1.12
- XV-5080: Update required for versions up to Ver. 1.24
- XV-3080: Update required for versions up to Ver. 1.08
- XV-88: Update required for versions up to Ver. 1.07
- RD-700: Update required for versions up to Ver. 1.04

For instructions on checking the system program version for each instrument, and upgrading the software, refer to the html files for the relevant instrument included on the CD-ROM.

About the Included CD-ROM

The included CD-ROM features:

- System update programs compatible with new-format SRX expansion boards (for Fantom (FA-76), XV-5080, XV-3080, XV-88, and RD-700)
- Data Reproducing the SR-JV's Original Patches and Rhythm Sets (Compatible models: Fantom (FA-76), XV-5080, XV-5050, XV-3080, XV-88, XV-2020)
- SRX-01~09 demo songs
- BPM Conversion Table (The BPM conversion table cannot be used with the SRX-06, since it does not have any phrase loop waveforms.)

For more detailed information on each file, refer to `index_e.html` on the CD-ROM.

- * *Take proper care of the included CD-ROM; it will not be reissued.*
- * *The system programs on the included CD-ROM are the latest versions, as of September, 2002. For information regarding newer versions than those on this disk, you should contact the nearest Roland Service Center.*

新フォーマットに関して

エクспанション・ボード SRX-01 ~ 04 は、最大 128 パッチを収録していました。SRX-05 以降は、より多彩な音色をお客様に供給する為に、128 以上のパッチを扱えるよう、新フォーマットを採用しています。

これにより、以下の 5 機種において、現在お使いのバージョンによっては、新フォーマットに対応するためにバージョン・アップしていただく必要があります。システム・プログラム・バージョンをご確認の上、下記のバージョン、もしくはそれより古いバージョンの場合は、付属 CD-ROM に収録のシステム・アップデート・プログラムを使用して、製品をバージョン・アップしてから SRX-06 をお使いください。

- Fantom (FA-76) : Ver.1.12 まではアップデートが必要
- XV-5080 : Ver.1.24 まではアップデートが必要
- XV-3080 : Ver.1.08 まではアップデートが必要
- XV-88 : Ver.1.07 まではアップデートが必要
- RD-700 : Ver.1.04 まではアップデートが必要

各機種のシステム・プログラム・バージョンの確認方法、およびバージョン・アップ方法は、付属 CD-ROM に収録の、各機種別ファイルを参照してください。

付属 CD-ROM について

付属 CD-ROM には

- SRX エクспанション・ボード新フォーマット対応システム・アップデート・プログラム (Fantom (FA-76)、XV-5080、XV-3080、XV-88、RD-700)
- SR-JV オリジナル Patch / Rhythm Set 再現データ (対応機種 : Fantom (FA-76)、XV-5080、XV-5050、XV-3080、XV-88、XV-2020)
- SRX-01 ~ 09 デモ・ソング
- BPM 変換テーブル (SRX-06 には、フレーズ・ループのウェーブフォームが搭載されていないため、BPM 変換テーブルは使用しません。)

が収録されています。各ファイルの詳細な内容は、CD-ROM 内の `index_j.html` を参照してください。

- ※ 付属 CD-ROM は再発行しませんので、大切にお使いください。
- ※ 付属 CD-ROM に収録の各システム・プログラムは、2002 年 9 月時点での最新のものです。収録バージョンより新しいプログラムに関しては、もよりのローランド・サービスにお問い合わせください。

お客様	ご芳名	様
	ご住所	〒 ----- ☎

取扱販売店名・住所・☎	
保証期間	お買い上げ日 年 月 日より 本体は一年間 ただし、ソフトウェア、 付属品、消耗部品は除く

太枠内に記入または捺印の無い場合は、必ず販売店発行の領収書またはそのお買い上げ年月日・販売店等を証明するものを保証書に添付願います。記入もしくは添付の無い場合は無効となりますので、ご注意ください。

型名	SRX-06 "Complete Orchestra"
----	-----------------------------

- 本保証書は、本書記載内容で無料修理をさせていただきますことをお約束するものです。
- 保証期間中に故障が発生した場合は、製品と本書をご持参ご提示の上、お買上げの販売店にご依頼ください。
- ご転居・ご贈答品などの場合で、お買上げ販売店に修理を依頼することができない場合は、ローランドサービスステーションにお問い合わせください。
- 本書は再発行いたしません。所定事項の記入および内容をよくお読みの上、大切に保存してください。



ローランド株式会社

本社工場 〒431-1304 浜松市細江町中川2036-1
電話 (053) 523-0230

保証規定

- 保証期間内において、取扱説明書・本体貼付ラベルなどの注意書に従った正常なご使用状態で発生した故障については、第3項に示す場合を除き、無料修理いたします。
- 保証期間内に無料修理をお受けになる場合は、お買上げの販売店・又は最寄りのローランドサービスステーションにご依頼のうえ、修理の際に本書をご提示ください。お客様のご事情により出張修理を依頼された場合、保証期間中であっても出張料金を申し受けます。
- 保証期間内でも、次の場合には有料修理となります。
 - (イ) 本書のご提示が無い場合。
 - (ロ) 本書にお買上げ年月日・販売店名の記入が無い場合、または字句を書き換えられた場合。
 - (ハ) ご使用上の誤り、又は当社の指定者以外の手により修理・改造された場合。
 - (ニ) 本製品に異常がなく、他の部分、他の機器に異常があり、点検及び改善した場合。
 - (ホ) お買い上げ後の輸送、移動、落下等による故障や損傷および使用中に生じたキズ・汚れなどの外観上の変化。
 - (ヘ) 地震、落雷、風水害、その他の天災地変、火災、公害、ガス、異常電圧による故障や損傷。
 - (ト) 消耗部品（例：電池など）の取り替えを要する場合、および消耗部品の摩耗や劣化に起因する故障や損傷。
- 本製品は日本国内でご使用いただくことを前提に製造・販売しております。従って本製品の保証は、日本国外ではお受けできませんので、ご了承ください。
This warranty is valid only in Japan.

修理メモ

- ※ 本保証書は以上の保証規定により無料修理をお約束するものです。従ってこの保証書によってお客様の法律上の権利を制限するものではありません。
- ※ 本製品の補修用性能部品（製品の機能を維持するために必要な部品）の最低保有期間は製造打切後6年です。この部品保有期間を修理可能の期間とさせていただきます。保有期間経過後も、故障内容によっては修理可能な場合がありますので、ローランドサービスステーションまでお問い合わせください。
- ※ 修理の際、交換した部品を再生、再利用、製品の品質向上等の目的で回収させていただくことがありますので、ご協力願います。

Copyright © 2002 ROLAND CORPORATION

All rights reserved. No part of this publication may be reproduced in any form without the written permission of ROLAND CORPORATION.

© 2002 ローランド株式会社 本書の一部、もしくは全部を無断で複写・転載することを禁じます。



This product must be disposed of separately at your local waste recycling centre. Do not dispose of in household waste bin.



03122756

06-06-8N