

MIDI Implementation Chart

Model: TR-8S

Version 1.02

Function	Transmitted	Recognized	Remarks
Basic Channel	Default Changed	10 1-16, OFF	10 1-16, OFF Memorized
Mode	Default Messages Altered	Mode 4 x *****	Mode 4 x *****
Note Number	: True Voice	*1 *****	*1
Velocity	Note On Note Off	o 9nH v=80 o 8nH v=00	o o
After Touch	Key's Channel's	x x	x x
Pitch Bend		x	x
Control Change	9	o	SHUFFLE
	12	o	EXTERNAL IN LEVEL
	14	o	AUTO FILL IN [ON]
	15	o	MASTER FX [ON]
	16	o	DELAY LEVEL
	17	o	DELAY TIME
	18	o	DELAY FEEDBACK
	19	o	MASTER FX CTRL
	20	o	BD TUNE
	23	o	BD DECAY
	24	o	BD LEVEL
	25	o	SD TUNE
	28	o	SD DECAY
	29	o	SD LEVEL
	46	o	LT TUNE
	47	o	LT DECAY
	48	o	LT LEVEL
	49	o	MT TUNE
	50	o	MT DECAY
	51	o	MT LEVEL
	52	o	HT TUNE
	53	o	HT DECAY
	54	o	HT LEVEL
	55	o	RS TUNE
	56	o	RS DECAY
	57	o	RS LEVEL
	58	o	HC TUNE
	59	o	HC DECAY
	60	o	HC LEVEL
	61	o	CH TUNE
	62	o	CH DECAY
	63	o	CH LEVEL
	70	o	AUTO FILL IN [MANUAL TRIG]
	80	o	ACCENT
81	o	OH TUNE	
82	o	OH DECAY	
83	o	OH LEVEL	
84	o	CC TUNE	
85	o	CC DECAY	
86	o	CC LEVEL	
87	o	RC TUNE	
88	o	RC DECAY	
91	o	RC LEVEL	
96	o	REVERB LEVEL	
97	o	BD CTRL	
102	o	SD CTRL	
103	o	LT CTRL	
104	o	MT CTRL	
105	o	HT CTRL	
106	o	RS CTRL	
107	o	HC CTRL	
108	o	CH CTRL	
109	o	OH CTRL	
110	o	CC CTRL	
110	o	RC CTRL	
Program Change	: True Number	o 0-127	o 0-127
System Exclusive		x	x
System Commor	: Song Position	x	x
	: Song Select	x	x
	: Tune Request	x	x
System Real Time	: Clock	o	o
	: Start	o	o
	: Continue	x	o
	: Stop	o	o
Aux Message	: All Sound Off	x	x
	: Reset All Controllers	x	x
	: Local On/Off	x	x
	: All Notes Off	x	x
	: Omni Mode Off	x	x
	: Omni Mode On	x	x
	: Mono Mode On	x	x
	: Poly Mode On	x	x
	: Active Sensing	o	o
: System Reset	x	x	
Notes	*1		
	INST	Note Number	Note Number (ALT)
	BD	36	35
	SD	38	40
	LT	43	41
	MT	47	45
	HT	50	48
	RS	37	56
	HC	39	54
	CH	42	44
	OH	46	58
	CC	49	61
	RC	51	63
TRIGGER OUT	OFF	----	

These note numbers are configurable on UTILITY:MIDI:Inst Note.

*2 The same processing will be carried out as when Start is received.

Mode 1: Omni On, Poly
Mode 3: Omni Off, Poly

Mode 2: Omni On, Mono
Mode 4: Omni Off, Mono

o: Yes
x: No