

Roland Memory Card Battery Replacement Instructions

The Roland M-512, M-256 and M-128 memory cards each have an internal battery.

If you need to replace the internal battery, please use the following images as a guide.

(A replacement battery may be ordered from Roland at 323-890-3700, ext. 5301.)



Locate the battery tray and use your thumbnail or the blade of a small flat-head screwdriver to gently loosen the battery tray.



Gently pull the battery tray completely out of the memory card.



Make a note of which side of the battery is facing up so you can position the new battery correctly.



Take care not to touch the new battery with your bare fingers as this can shorten battery life.