

Before using this product, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES." These sections provide important information concerning the proper operation of this product. Additionally, the Owner's manual should be saved and kept on hand as a convenient reference.

Check the Included Items

Before you begin assembling the stand, check that all the items were supplied.

Symbol	Name	Quantity
A	Bench seat	1
B	Legs	4
C	Hex bolts *1	4
D	Washers *1	4
E	Spring washers *1	4
F	Wrench *2	1

*1: Attached to the legs.

*2: Attached to the bench seat.


* To prevent injury, work gloves should be worn while performing the assembly.

* When removing the wrench from the bottom of the seat, pay attention to the tip of the holder.

Assembly

1. Place the bench seat (A) upside down in a stable location.

* When placing the bench seat upside down, take care to protect the seating surface from damage. Handle it with care so that it does not fall or overturn.


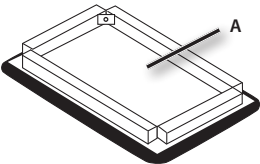


2. Attach the legs (B).

Place a spring washer (E) and a washer (D) on each hex bolt (C), and provisionally tighten each leg (B). At this time, tighten the hex bolts (C) by hand.

* Place the spring washer (E) and washer (D) on the hex bolt (C) in that order.


* Note the position of the screw holes in the legs (B) and the holes in the metal fixtures of the bench seat (A).

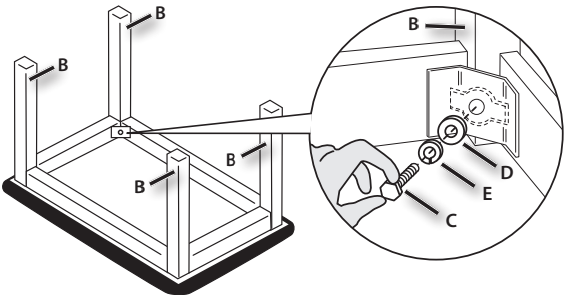

3. Place the bench in the location in which you are going to use it, and tighten the legs (B).

While applying pressure on the seat, go around and tighten each hex bolt (C) little by little, while adjusting the position of the legs as necessary to prevent any wobbling. In other words, tighten the hex bolt for each leg gradually, a little each time, as you go around in order starting with leg number 1, then moving to number 2, then number 3, then number 4; after which you can go back to number 1 and repeat the process.

* If the height of the bench is adjustable, be careful not to insert your hand into the metal components of the height adjustment mechanism.

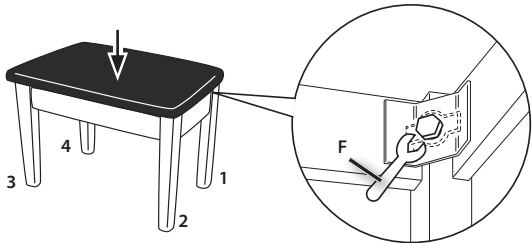


If the bench wobbles after you've fastened all the legs, first loosen the hex bolt for leg number 1. Then, while applying pressure to the center of the seat, retighten the hex bolt. If necessary, repeat this process for the other legs until the wobbling is eliminated.

4. Finally, tighten the hex bolts (C) further, and verify that none of them are loose.

* Use the included wrench (F) to firmly tighten the hex bolts (C) until there is no space between the spring washers (E) and the washers (D).



Completed bench

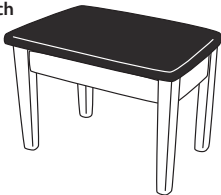

* In the interest of product improvement, the specifications and/or appearance of this product are subject to change without prior notice.

Maintenance

At regular intervals, please check that the hex bolts are firmly tightened and that the legs are stable. If any hex bolts are loose, retighten them.

If you notice any other abnormality, immediately stop using the bench, and contact your dealer for service.



USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.

⚠ CAUTION Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly.
* Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.

The ⛔ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.

The ⚡ symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



Do not repair or replace parts by yourself

Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information."



Do not use or store in the following types of locations

• Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are



• Damp (e.g., baths, washrooms, on wet floors); or are



• Exposed to steam or smoke; or are

• Subject to salt exposure; or are

• Exposed to rain; or are

• Dusty or sandy; or are

• Subject to high levels of vibration and shakiness.



Do not place in an unstable location

Otherwise, you risk injury as the result of this product toppling over or dropping down.



Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using this product in places where children are present, or when a child will be using this product.



Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.



⚠ CAUTION

Take care so as not to get fingers pinched

When handling the following moving parts, take care so as not to get fingers, toes, etc., pinched. Whenever a child uses this product, an adult should be on hand to provide supervision and guidance.



• Height adjustment handle

Precautions concerning use of bench

When using the bench, please observe the following points:

• Do not use the bench as a toy, or as a stepping stool.

• Do not allow two or more persons to sit on the bench.

• Do not adjust the height while sitting on the bench.

• Do not sit on the bench if the bolts holding the bench legs are loose. (If the bolts are loose, immediately re-tighten them using the supplied tool.)

• Never insert your hand into the gap (the metal height adjustment mechanism) under the seat lid. Doing so may cause your hand to be pinched or injured.



Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.



• Included Parts

• Washers

• Spring washers

IMPORTANT NOTES

Placement

• Do not expose this product to direct sunlight, place it near devices that radiate heat, leave it inside an enclosed vehicle, or otherwise subject it to temperature extremes. Also, do not allow lighting devices that normally are used while their light source is very close to this product (such as a piano light), or powerful spotlights to shine upon the same area of this product for extended periods of time. Excessive heat can deform or discolor this product.

• Do not allow rubber, vinyl, or similar materials to remain on this product for long periods of time. Such objects can deform or discolor this product.

• Do not paste stickers, decals, or the like to this product. Peeling such matter off this product may damage the exterior finish.

• Do not place containers or anything else containing liquid on top of this product. Also, whenever any liquid has been spilled on the surface of this product, be sure to promptly wipe it away using a soft, dry cloth.

Maintenance

• If the unit should become soiled, wipe it with a soft dry cloth or a firmly wrung-out cloth. Wipe with even pressure across the entire unit. The finish may be damaged if you strongly rub only a specific location.

• Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

• Do not apply excessive force to the height adjustment handle, since this could cause malfunctions.

• When you need to transport this product, pack it in shock-absorbent material. Transporting this product without doing so can cause it to become scratched or damaged, and could lead to malfunction.

• When adjusting the height of the seating surface, take care not to pinch your fingers in the movable parts. If the unit is used where small children are present, you must provide adult supervision and guidance.

• This unit is a bench specifically designed for use with musical instruments. Use it only when playing a musical instrument. Sit on the center of the bench.

• In some cases, the color of your clothing might transfer to the seating surface. Do not use this bench when wearing dark-colored clothing.

• If you use this bench on a wood floor or a woven mat, the legs of the bench could leave marks on its surface. In such cases, we recommend that you place a rug or similar protective surface under the bench.

• If you tighten the height adjustment handle excessively, it may stop working.

For C.A. US (Proposition 65)

WARNING

This product contains chemicals known to cause cancer, birth defects and other reproductive harm, including lead.

本製品を正しくお使いいただくために、ご使用前に「安全上のご注意」と「使用上のご注意」をよくお読みください。
また、取扱説明書は必要なときにすぐに見ることができるよう、手元に置いてください。

部品の確認

組み立てる前に、部品がそろっていることを確認してください。

記号	名称	個数
A	椅子本体	1
B	脚	4
C	六角ボルト *1	4
D	ワッシャー *1	4
E	スプリング・ワッシャー *1	4
F	スパナ *2	1

*1：脚に付いています。

*2：椅子本体に付いています。


※ けが防止のため、作業用手袋をはめて組み立てをしてください。

※ 座面裏のスパナを取りはずすときは、固定具の先端に注意してください。

組み立てかた

1. 椅子本体 (A) の座面を裏返し、安定した場所に置きます。

※ 椅子を裏返すときは、破損を防ぐため座面などを保護してください。また、落下や転倒を引き起こさないよう取り扱いに注意してください。

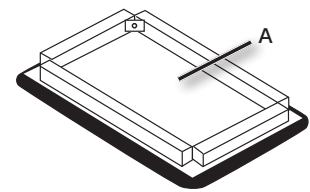


2. 脚 (B) を取り付けます。

六角ボルト (C) に、スプリング・ワッシャー (E) とワッシャー (D) を取り付け、脚 (B) を仮止めします。このときは手で六角ボルト (C) を締めてください。

※ スプリング・ワッシャー (E)、ワッシャー (D) の順で、六角ボルト (C) に取り付けます。

※ 脚 (B) のネジ穴と椅子本体 (A) の金具の穴の位置を確認してください。

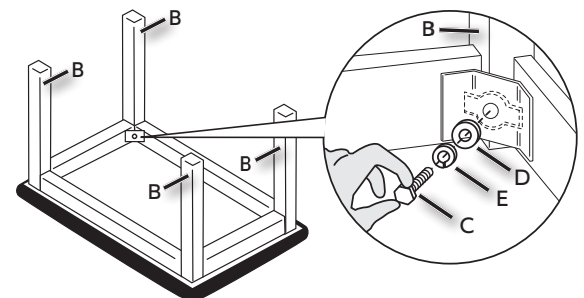


3. 設置場所に椅子を置き、脚 (B) を固定します。

座面の中央を押さえ、ガタつきが少なくなるように脚の取り付け位置を上下に調整します。取り付け位置が決まったら、付属のスパナ (F) を使って六角ボルト (C) を少しずつ締めていきます。

このとき、六角ボルトを締める脚は 1 → 2 → 3 → 4 → 1 → ・ ・ ・ と順番に変えながら締めてください。

※ 高低自在椅子の場合は、昇降装置の金属部に手を入れないようご注意ください。

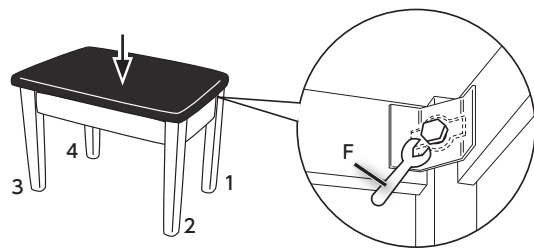

脚を固定したあともガタつく場合は、いったん 1 番の脚の六角ボルトをゆるめ、座面の中央を押さえながらゆるめた六角ボルトを締め直します。ガタつきが収まるまで、ほかの脚に対してもこの調整を繰り返してください。

4. 最後にもう一度、六角ボルト (C) の増し締めをして、ゆるみがないことを確認します。

※ 付属のスパナ (F) を使い、六角ボルト (C) と、スプリング・ワッシャー (E)、ワッシャー (D) の隙間がなくなるまでしっかりと締め付けてください。



完成図



※ 製品の仕様や外観は、改良のため予告なく変更することがあります。

メンテナンス

定期的に六角ボルトの締め付けや脚の安定感などを点検してください。六角ボルトのゆるみがある場合は締め直してください。その他の異常が発生したときは、直ちに使用を中止し、お買い上げの販売店またはローランドお客様相談センターに相談してください。

安全上のご注意

火災・感電・傷害を防止するには

△ 警告と △ 注意の意味について

△ 警告	取り扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表しています。
△ 注意	取り扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表しています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表しています。

図記号の例

	△ は、注意（危険、警告を含む）を表しています。具体的な注意内容は、△ の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表しています。
	⊘ は、禁止（してはいけないこと）を表しています。具体的な禁止内容は、⊘ の中に描かれています。左図の場合は、「分解禁止」を表しています。
	● は、強制（必ずすること）を表しています。具体的な強制内容は、● の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表しています。

----- 以下の指示を必ず守ってください -----

△ 警告

分解や改造をしない

取扱説明書に書かれていないことはしないでください。故障の原因になります。



個人で修理や部品交換はしない

必ずお買い上げ店またはローランドお客様相談センターに相談してください。



次のような場所で使用や保管はしない

- 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）
- 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所
- 湯気や油煙が当たる場所
- 塩害の恐れがある場所
- 雨に濡れる場所
- ほこりや砂ぼこりの多い場所
- 振動や揺れの多い場所



不安定な場所に設置しない

転倒や落下によって、けがをする恐れがあります。



お子様がけがをしないように注意する

お子様のいる場所で使用する場合やお子様が使用する場合、必ず大人のかたが、監視／指導してあげてください。



落としたり、強い衝撃を与えたりしない

破損や故障の原因になります。



使用上のご注意

設置について

• 直射日光の当たる場所や発熱する機器の近く、閉め切った車内などに放置しないでください。また、至近距離から照らす照明器具（ピアノ・ライトなど）や強力なスポット・ライトで長時間同じ場所を照らさないでください。変形、変色することがあります。

• 本製品の上にゴム製品やビニール製品を長時間放置しないでください。変形、変色することがあります。

• 本製品にシールなどを貼らないでください。はがす際に外装の仕上げを損なうことがあります。

• 本製品の上に液体の入った容器などを置かないでください。また、表面に付着した液体は、速やかに乾いた柔らかい布で拭き取ってください。

お手入れについて

• お手入れは、柔らかい布で乾拭きするか、固く絞った布で汚れを拭き取ってください。全体を均一の力で拭くようにします。同じところばかり強くこすると、仕上げを損なうことがあります。

• 変色や変形の原因となる、ベンジン、シンナー、アルコール類は使用しないでください。

修理について

• お客様が本製品または付属品を分解（取扱説明書に指示がある場合を除く）、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合もあります。

その他の注意について

• 故障の原因になりますので、昇降ハンドルなどにて過度の力を加えないでください。

• 輸送や引っ越しをするときは、本製品を緩衝材などで十分に梱包してください。そのまま移動すると、傷、破損、故障の原因になります。

• 本製品が入っていた梱包箱や緩衝材を廃棄するときは、各地域のゴミの分別基準に従ってください。

• 座面の高さを調節するときは、可動部に指をはさまないように注意してください。お子様のいる場所で使用する場合は、必ず大人のかたが監視／指導してください。

• 本製品は楽器専用椅子です。楽器演奏のみにお使いください。また、椅子の中央に座ってお使いください。

• 座面部分に衣類の色が移る場合があります。色の濃い衣類を着用して使用しないでください。

• フローリングの床や畳の上でお使いになる場合、椅子の脚で傷を付けてしまうことがあります。椅子の下にマットなどの保護材を敷いてお使いになることをおすすめします。

• 昇降ハンドルを閉めすぎると、ハンドルが動かなくなることがあります。