




Play the voices of the Minions!

01 Get ready

Connect the AC adaptor and power cord to the instrument.

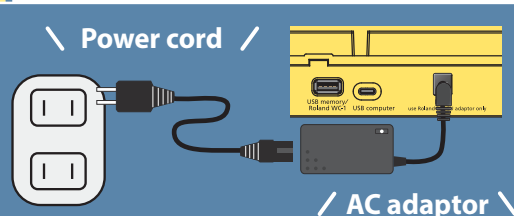


02 Power on!

Press the [ON] button.
This turns the screen on.




03 Adjust the volume of the voices

Move the volume slider up.

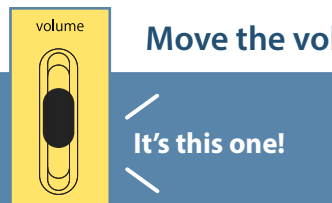


04 Hear the voices of the Minions

Play the keys.
This triggers the Minion voices.

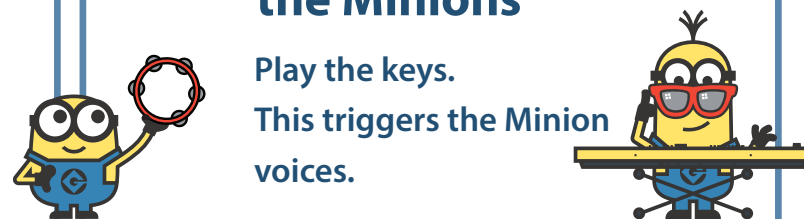

05 Change the Minion voices


Press the button you like, [EYE] [EYE] or [EYE].
When you play the keys, you can hear the selected Minion voice.

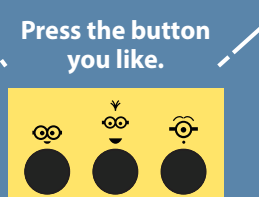

! Use the dial to change the voice

The Minion voices change when you turn the dial and then play the keyboard.

Try this!

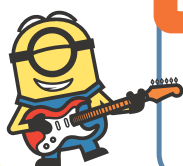

Bob Cycle

Select "Bob Cycle"

Each time you play a key, the Minion voice changes.

Bob Velocity

Select "Bob Velocity"

Try playing the keys at different strengths. The voice changes depending on whether you play hard or soft.



If you can't get back to the screen to hear the Minion voices


1. Press the [HOME] button. This brings you back to the startup screen.
2. Press the button you like, [EYE] [EYE] or [EYE].



ミニオンの声を出してみよう!

01 準備しよう

ACアダプターと電源コードを
本体につなごう。

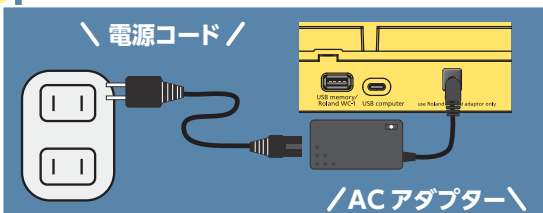


02 電源オン!

[ON] ボタンを押そう。
画面がつくよ。




03 音の大きさを調節しよう

Volume スライダーを上げよう。

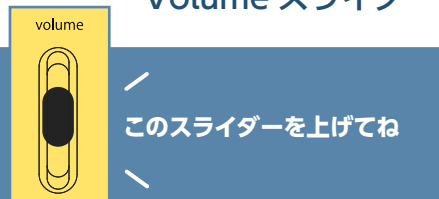

04 ミニオンの声を聞こう

鍵盤を弾いてみよう。
ミニオンの声が出るよ。

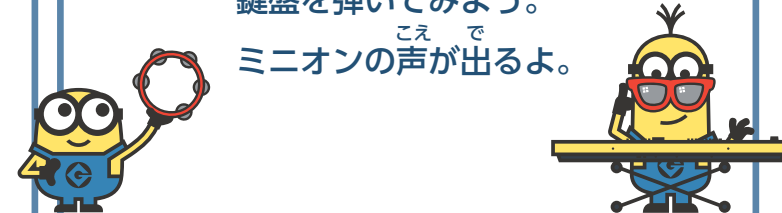

05 ミニオンの声を変えてみよう

[EYE] [EYE] [EYE] ボタンの中から好きなボタンを押してね。
鍵盤を弾くと選んだミニオンの声が出るよ。



! ダイヤルで声を変えてみよう

さらに、ダイヤルを回してから鍵盤を弾くと、ミニオンの声が変わるよ。

おすすめ



Bob Cycle

「Bob Cycle」を選ぶ

鍵盤を弾くたびに、ミニオンの声が変わるよ。

Bob Velocity

「Bob Velocity」を選ぶ

鍵盤を弾く強さを試してみよう。強く弾いたときと弱く弾いたときで声が変わるよ。



ミニオンの声が出る画面に戻れなくなったとき

1. [HOME] ボタンを押してね。電源を起動したときの画面に戻るよ。
2. [EYE] [EYE] [EYE] ボタンの中から好きなボタンを押してね。



About this product

This is the GO:KEYS 3 Minion (the Minion edition of the GO:KEYS 3).The basic functions and operations are the same as the GO:KEYS 3.In Roland Cloud Connect and the Chord Director app, this instrument is recognized as a GO:KEYS 3.Also, you can use the GO:KEYS 3 sound contents in Roland Cloud.

About the Quick Start guide (separate document)

The GO:KEYS 5/GO:KEYS 3 Quick Start guide is included with this product. Follow along with the Quick Start guide to learn the basic operations.

Differences from GO:KEYS 3


Some specifications of this product (GO:KEYS 3 Minion) differ from those listed in Quick Start.Check the following information.

Different tone buttons

- The names and images of the tone buttons listed in Quick Start differ from those on the instrument.
- The names of the tone buttons on p. 3 (“Panel Descriptions”) are different.
- The tone button images on p. 5 (“Selecting the tone”) are different.

GO:KEYS 3
tone buttons

[piano] [e.piano] [strings] [synth] [other]



GO:KEYS 3 Minion (this product)
tone buttons

[👁️] [👁️👁️] [👁️👁️👁️] [👁️👁️] [piano] [other]



Minion voices have been added

The voices of the Minions [👁️] (bob), [👁️👁️] (kevin) and [👁️👁️] (stuart) are available.

You can change the Minions’ lines and the way they speak, according to how you play the keys.

We’ve provided special tones for the GO:KEYS 3 Minion (the Minion edition of the GO:KEYS 3) that are not available on the GO:KEYS 3.

See the Roland website for details.



MEMO

If you don’t hear the Minion’s voices even when you press the [👁️] [👁️👁️] or [👁️👁️] buttons.

- Long-press the [exit] button.
Keep pressing down the button until “Cleared All Favorite Tones” appears on the screen. This returns all tone settings to their factory-set state.
- Press the [👁️] [👁️👁️] or [👁️👁️] buttons and play the keyboard.

Before using this instrument, carefully read “USING THE UNIT SAFELY” and “IMPORTANT NOTES” in the “GO:KEYS Quick Start” guide, as well as the separate leaflet “USING THE UNIT SAFELY”, to make sure you’re using it properly.After reading, keep the documents available for immediate reference.

本製品について

本製品は、GO:KEYS 3 Minion（GO:KEYS 3 のミニオン版）です。基本的な機能や操作方法は GO:KEYS 3 と同じです。Roland Cloud Connect や Chord Director App では GO:KEYS 3 として認識されます。また、Roland Cloud では GO:KEYS 3 のサウンド・コンテンツに対応しています。

クイック・スタート（別冊）について

本製品には GO:KEYS 5 ／ GO:KEYS 3 クイック・スタートが同梱されています。基本操作はクイック・スタートに沿ってご確認ください。

GO:KEYS 3 との違い


本製品 (GO:KEYS 3 Minion) は 、クイック・スタートの記載と一部仕様が異なります。以下の点をご確認ください。

トーン・ボタンが違います

- クイック・スタートに記載されたトーン・ボタンの名称と画像が異なります。
- P.3「各部の名称とはたらき」のトーン・ボタンの名称が異なります。
- P.5「音色を選ぶ」のトーン・ボタンの画像が異なります。

GO:KEYS 3
トーン・ボタン

[piano] [e.piano] [strings] [synth] [other]



本製品（GO:KEYS 3 Minion）
トーン・ボタン

[👁️] [👁️👁️] [👁️👁️] [piano] [other]



ミニオン・ボイスが追加されています

ミニオンの声 [👁️] (bob) ／ [👁️👁️] (kevin) ／ [👁️👁️] (stuart) が収録されています。

鍵盤の弾きかたによってセリフを変えたり、声の出しかたを変えたりもできます。
GO:KEYS 3 にはない、GO:KEYS 3 Minion（GO:KEYS 3 のミニオン版）だけの特別な音色です。

詳しくは、ローランドのホームページをご確認ください。



MEMO

[👁️] [👁️👁️] [👁️👁️] ボタンを押して鍵盤を弾いてもミニオンの声が出ないとき

- [exit] ボタンを長押ししてください。
画面に「Cleared All Favorite Tones」という表示が出るまで長押ししてください。音色の設定が工場出荷時の状態に戻ります。
- [👁️] [👁️👁️] [👁️👁️] ボタンを押して鍵盤を弾いてください。

本機を正しくお使いいただくために、ご使用前に『GO:KEYS 5 ／ GO:KEYS 3 クイック・スタート』の「安全上のご注意」と「使用上のご注意」および「安全上のご注意」チラシ（別紙）をよくお読みください。お読みになったあとは、すぐに見られるところに保管しておいてください。