KIYOLA
MADE IN JAPAN KF-10

Easy Operation Guide

Roland & karimoku

Tone Selection

Alternates each time the button is pressed.

Red	Concert Grand Piano
Green	Ballad Piano
Blue	Bright Piano
Pink	Upright Piano
Light Blue	Harpsichord
Yellow	Electric Piano



Song Settings

Selecting a Song — There are 30 internal songs. If a USB flash drive is connected, you can select up to 50 songs from the USB flash drive.

Song Volume — NORMAL, –, +

Recording your performance — Record-standby, Play back the recorded song

★ SMF Play Mode — INTERNAL, EXTERNAL, AUTO

★ All Songs Play Mode — OFF, ORDER (default), RANDOM

hold down

Bluetooth Settings

* Only on models equipped with Bluetooth

Bluetooth Audio Volume — NORMAL, –, +

Metronome Settings

Number of Beats — 2, 4, 0, 3, 5, 6

Tempo — NORMAL, –, +

Specifying a Numeric Tempo — 2, 4, 7, 9, ENTER, 1, 3, 5, 6, 8, 0

Common Tempo Settings — Largo (46), Adagio (58), Lento (60), Andante (72), Andantino (80), Moderato (92), Allegretto (108), Allegro (132), Animato (152), Vivace (164), Presto (184), Prestissimo (200)

Metronome On/Off — ON/OFF

hold down

Other Settings

Transpose — -6, -5, -4, -3, -2, -1, 0, +1, +2, +3, +4, +5

★ Ambience — NORMAL, –, +

★ Brilliance — NORMAL, –, +

★ Key Touch — FIX, SUPER LIGHT, LIGHT, MEDIUM (default), HEAVY, SUPER HEAVY

★ Master Tuning — 440 Hz (default), -0.1 Hz, +0.1 Hz, 442 Hz

Auto Off — 30 min. (default), 10 min., 240 min., OFF

hold down



Playing a song

Bluetooth

[ ] button + power ON
Registering a mobile device (Bluetooth audio pairing)



* On models not equipped with Bluetooth, this button is labeled "Metronome."

Speaker on/off (only when headphones are connected)




Saving the Settings

The ★ settings can saved so that they will be remembered even after the power is off.



Restoring the Factory Settings

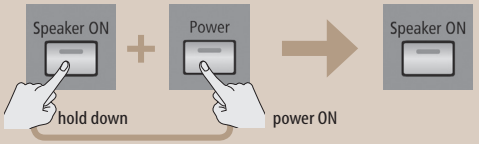

Copyright © 2015 ROLAND CORPORATION

* 5 1 0 0 0 4 9 6 2 8 - 0 3 *