
KS-13 Owner's Manual

English

© 2023 Roland Corporation

Before using this unit, carefully read the leaflet "USING THE UNIT SAFELY" and "IMPORTANT NOTES". After reading, keep the document(s) where it will be available for immediate reference.

Part descriptions

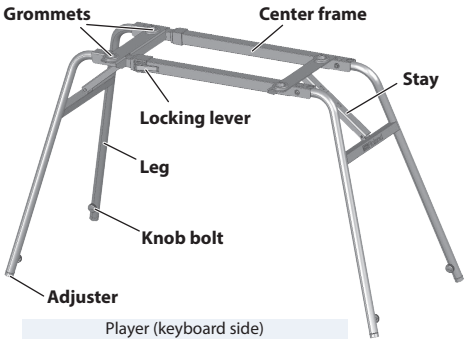

Player (keyboard side)

NOTE

- **Set up the keyboard so that the locking lever faces the player (on the keyboard side).**
- **Insert the rubber feet (either on the keyboard side or the rear panel side) of the bottom of the keyboard into the grommets on the stand when you use it.**

Height adjustment	Three positions: 641 mm (factory setting), 709 mm, 777 mm
Width adjustment	1,132–1,606 mm
	Grommet spacing: 513–912 mm


* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

* Roland is an either registered trademark or trademark of Roland Corporation in the United States and/or other countries.


Assembly

Locking the legs

1. **Set the stand down and then open the legs of the stand in the direction of the arrows, as shown in the illustration.**

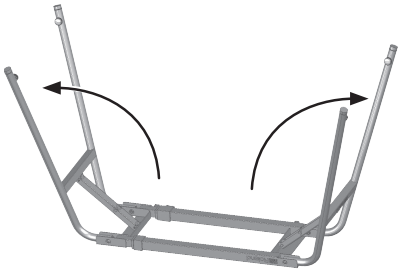


2. **Prop the stand upright, and lock the stays into place in the direction shown by the arrows.**

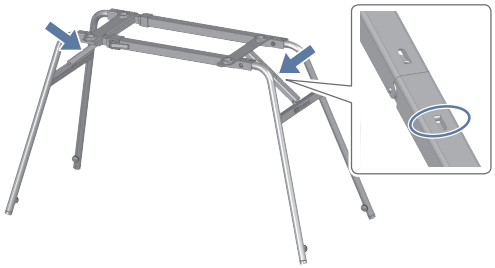


NOTE

- Push down on the stays until you hear a clicking sound to make sure that they are locked.
- When folding up the stand, (1) turn the stand upside-down, (2) push the stays down in the direction shown by the arrows to unlock them, and (3) fold down the legs.

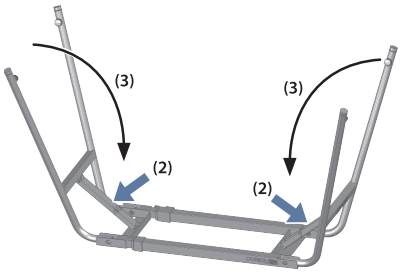


- Make sure not to get your fingers pinched when you prop the stand upright or lock/unlock the stays.
- Keep your hands and fingers away from the positions shown in the circled parts below when you fold up the stand.

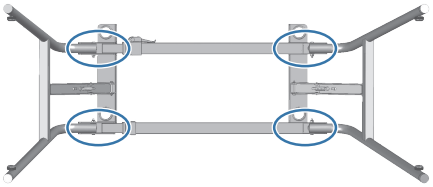

Adjusting the width

NOTE

Make sure to take the keyboard off the stand before you adjust the width.

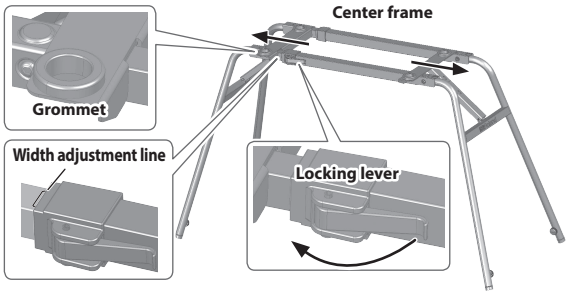

1. **Release (pull up) the locking lever.**
2. **Slowly pull to slide the center frame outwards, adjusting the width so that two of the rubber feet on the keyboard (either on the keyboard side or the rear panel side) fit into the grommets on the stand.**


* Do not extend the center frame past the width adjustment line.

3. **Lock (push down) the locking lever to firmly stabilize the center frame.**

Adjusting the height

NOTE

Make sure to take the keyboard off the stand before you adjust the height.

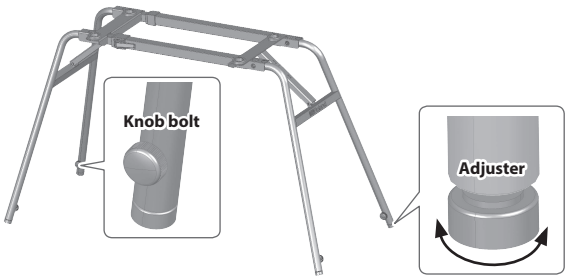

1. **Loosen the knob bolt.**
2. **Pull to slide out the legs, adjust the height of the screw holes and use the knob bolts to temporarily lock the legs in place.**
3. **Once you've temporarily locked all four legs in place, firmly tighten all four knob bolts.**
4. **If the stand wobbles, stabilize it by turning the adjusters.**