


Roland

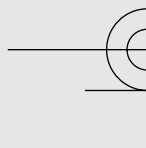

EXPANSION
BOARD
SRX Series

SRX-04

Symphonique Strings

OWNER'S MANUAL

Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (p. 2; p. 4). These sections provide important information concerning the proper operation of the unit. Additionally, in order to feel assured that you have gained a good grasp of every feature provided by your new unit, this manual should be read in its entirety. The manual should be saved and kept on hand as a convenient reference.

この機器を正しくお使いいただくために、ご使用前に「安全上のご注意」(P.3)と「使用上のご注意」(P.4)をよくお読みください。また、この機器の優れた機能を十分ご理解いただくためにも、この取扱説明書をよくお読みください。取扱説明書は必要ときにすぐに見ることができるよう、手元に置いてください。

Thank you, and congratulations on your choice of the SRX-04 "Symphonique Strings" Wave Expansion Board.

The SRX-04 "Symphonique Strings" Wave Expansion Board dedicates its entire memory to reproducing the most expressive stereo-sampled string sounds on the planet. Sampled with rich natural ambience, these string sounds can be used across a complete spectrum of genres ranging from classical to rock, pop, dance, film scoring and more.

Waveforms include full string sections as well as violin, viola, cello, and contrabass sections. Each section contains Waves representing different playing techniques and rhythms, such as tremolo, pizzicato, marcato, spiccato, and staccato—giving you lots of expressive possibilities.

The patches on the SRX-04 board are carefully selected and optimized to bring out the expressiveness of the high-quality waveforms. Moreover, settings for effects, sound parameters, and controller assignments have been pre-programmed to provide musicians with a rich tonal palette and unrivaled realism.

- Patches: 128
(The contents for the Fantom series/XV series/MX-200 and the RD-700/MC-909/VR-760 are slightly different.)
- Waveforms: 196

* The parameter settings for patches are optimized for the Fantom series, XV series, MX-200, RD-700, MC-909, and VR-760 models, so there are some minor differences in the sounds each instrument produces.

このたびは、ウェーブ・エクスパンション・ボード SRX-04「Symphonique Strings」をお買い上げいただき、まことにありがとうございます。

このエクスパンション・ボードは、クラシックや、ロック、ポップス、ダンス、映画音楽などのあらゆるジャンルで幅広く使用できる、アンビエント感を含んだ高品位なストリングス音色を多数収録しています。

ウェーブフォームはフル・セクションをはじめ、バイオリン、ピオラ、チェロ、コントラバスの各セクションをステレオ・サンプリングで収録しています。

また各セクション毎に、トレモロ、ピチカート、マルカート、スピッカート、スタッカートといった奏法別・強弱別のウェーブも収録しています。

パッチは高品位なウェーブの表現力を十分に生かした音色を厳選して収録しています。



エフェクト、パラメータ、コントローラー・アサインなども各音色の鳴りを最大限に生かし、演奏者の感情が効果的に出音に反映出来るよう最適に設定してあります。



- パッチ： 128 種類
(Fantomシリーズ/XVシリーズ/MX-200とRD-700/MC-909/VR-760とで一部収録内容が異なります。)
- ウェーブフォーム： 196 種類

※ 各パッチはFantomシリーズ、XVシリーズ、MX-200、RD-700、MC-909、VR-760の各機種で最適なパラメーター設定を行っていますので、それぞれ出音が異なることがあります。







USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About  WARNING and  CAUTION Notices






 WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
 CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols





	The  symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The  symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The  symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING



WARNING

- Before using this unit, make sure to read the instructions below, and the Owner's Manual. 
- Do not open or perform any internal modifications on the unit. 
- Do not attempt to repair the unit, or replace parts within it (except when this manual provides specific instructions directing you to do so). Refer all servicing to your retailer, the nearest Roland Service Center, or an authorized Roland distributor, as listed on the "Information" page. 
- Never use or store the unit in places that are:
 - Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are 
 - Damp (e.g., baths, washrooms, on wet floors); or are 
 - Humid; or are
 - Exposed to rain; or are
 - Dusty; or are
 - Subject to high levels of vibration.

WARNING

- Do not allow any objects (e.g., flammable material, coins, pins); or liquids of any kind (water, soft drinks, etc.) to penetrate the unit. 

- In households with small children, an adult should provide supervision until the child is capable of following all the rules essential for the safe operation of the unit. 
- Protect the unit from strong impact. (Do not drop it!) 

CAUTION



- Never climb on top of, nor place heavy objects on the unit. 
- Install the circuit board only into the specified unit (Fantom series/XV series/MX-200/RD-700/MC-909/VR-760). Remove only the specified screws during the installation. 

* In the interest of product improvement, the specifications and/or contents of this package are subject to change without prior notice.




安全上のご注意

火災・感電・傷害を防止するには

⚠ 警告と ⚠ 注意の意味について

 警告	取扱いを誤った場合に、使用者が死亡または重傷を負う可能性が想定される内容を表わしています。
 注意	取扱いを誤った場合に、使用者が傷害を負う危険が想定される場合および物的損害のみの発生が想定される内容を表わしています。 ※物的損害とは、家屋・家財および家畜・ペットにかかわる拡大損害を表わしています。

図記号の例

	△は、注意（危険、警告を含む）を表わしています。具体的な注意内容は、△の中に描かれています。左図の場合は、「一般的な注意、警告、危険」を表わしています。
	⊘は、禁止（してはいけないこと）を表わしています。具体的な禁止内容は、⊘の中に描かれています。左図の場合は、「分解禁止」を表わしています。
	●は、強制（必ずすること）を表わしています。具体的な強制内容は、●の中に描かれています。左図の場合は、「電源プラグをコンセントから抜くこと」を表わしています。

----- 以下の指示を必ず守ってください -----

警告

- この機器を使用する前に、以下の指示と取扱説明書をよく読んでください。



- この機器を分解したり、改造したりしないでください。



- 修理／部品の交換などで、取扱説明書に書かれていないことは、絶対にしないでください。必ずお買い上げ店またはローランド・サービスに相談してください。



- 次のような場所での使用や保存はしないでください。



- 温度が極端に高い場所（直射日光の当たる場所、暖房機器の近く、発熱する機器の上など）
- 水気の近く（風呂場、洗面台、濡れた床など）や湿度の高い場所
- 雨に濡れる場所
- ホコリの多い場所
- 振動の多い場所



警告

- この機器に、異物（燃えやすいもの、硬貨、針金など）や液体（水、ジュースなど）を絶対に入れないでください。



- お子様のいるご家庭で使用する場合、お子様の取り扱いやいたずらに注意してください。必ず大人のかたが、監視／指導してあげてください。



- この機器を落としたり、この機器に強い衝撃を与えないでください。



注意

- この機器の上に乗ったり、機器の上に重いものを置かないでください。



- 指定の機器（Fantom シリーズ、XV シリーズ、MX-200、RD-700、MC-909、VR-760）だけに取り付け、取り付け時には指定されたネジだけを外してください。



※ 製品の仕様および内容は、改良のため予告なく変更することがあります。

IMPORTANT NOTES

When you purchase the SRX-04 expansion board from an authorized Roland dealer, the included sounds and samples are licensed, not sold, to you by Roland Corporation, for commercial use in music production, public performance, broadcast, etc.

You may use any of the included phrases and/or samples in a commercial or non-commercial recording without paying any additional license fees. However, you must strictly adhere to the following crediting guidelines on any music recording that utilize material from SRX-04.

Reproduction or duplication of this collection or any of the sound recording contained in the SRX-04, either as they exist on this expansion board or by any means of reformatting, mixing, filtering, re-synthesizing, processing or otherwise editing for use in another product or for re-sale, is strictly prohibited without the express written consent of Roland. All unauthorized giving, trading, lending, renting, re-issue, re-distribution or re-sale of the sounds included in the SRX-04 are expressly prohibited.

In Plain English: Be creative in your application of the SRX-04 sounds, and keep this library for your use only. DO NOT COPY IT.

Roland constantly monitors other Soundware releases to check for copyright infringements, and will prosecute all piracy and copyright violations to the fullest extent of the law.

THIS LIBRARY IS GUARANTEED TO BE 100%
COPYRIGHT CLEAN.

In addition to the items listed under “USING THE UNIT SAFELY” on page 2, please read and observe the following:

To avoid the risk of damage to internal components that can be caused by static electricity, please carefully observe the following whenever you handle the board.

- * *Before you touch the board, always first grasp a metal object (such as a water pipe), so you are sure that any static electricity you might have been carrying has been discharged.*
- * *When handling the board, grasp it only by its edges. Avoid touching any of the electronic components or connectors.*
- * *Save the bag in which the board was originally shipped, and put the board back into it whenever you need to store or transport it.*

French language for Canadian Safety Standard

Veillez suivre attentivement les instructions suivantes quand vous manipulez la carte afin d'éviter tout risque d'endommagement des pièces internes par l'électricité statique.

- * *Toujours toucher un objet métallique relié à la terre (comme un tuyau par exemple) avant de manipuler la carte pour vous décharger de l'électricité statique que vous auriez pu accumuler.*
- * *Lorsque vous manipulez la carte, la tenir par les côtés. Évitez de toucher aux composants ou aux connecteurs.*
- * *Conservez le sachet d'origine dans lequel était la carte lors de l'envoi et remettez la carte dedans si vous devez la ranger ou la transporter.*

使用上のご注意

お客様がSRX-04 エクスパンション・ボード（以下、「本製品」といいます）をローランドの正規販売店からお買い上げになった時点で、本製品に含まれる音やサンプルは、ローランド株式会社から、お客様に対して、音楽制作、公共の場での演奏、放送などの商用目的のための使用を許諾したものであって、著作権を譲渡したものではありません。

お客様は、いかなる追加料金を支払うこともなく、本製品に含まれるあらゆるフレーズやサンプルを、商用あるいは非商用目的の録音に使用できます。ただし、お客様が本製品を使用して音楽の録音を行う際は、以下のことにご注意ください。

本製品に含まれるいかなる録音物も、そのままの状態であれ、いかなる手段によって再構成、ミキシング、フィルター加工、再合成、加工処理、その他の編集作業をした状態であれ、ローランドの書面による許可なく、他の製品に含めたり再販売するために複製・複写することを禁止します。また、本製品に含まれるいかなる音も、許可なく贈与、取引、貸与、賃貸、再発行、再配布、再販売することを禁止します。

従って、本製品の音色は音楽制作の範囲でお使いいただくようお願いいたします。そして、本製品のライブラリーはお客様ご自身の個人的使用の目的の範囲でお使いください。本製品の音色データの複製・複写は禁止します。

ローランドは、著作権侵害がないかどうか、常時他のサウンド・ライブラリーの発売を把握しており、著作権侵害に対しては法的手段を行使する場合があります。

なお、本製品のライブラリーは第三者の著作権を一切侵害していないことを保証します。

3 ページに記載されている「安全上のご注意」以外に、次のことに注意してください。

修理について

- ※ お客様がこの機器を分解、改造された場合、以後の性能について保証できなくなります。また、修理をお断りする場合があります。
- ※ 当社では、この製品の補修用性能部品（製品の機能を維持するために必要な部品）を、製造打切後6年間保有しています。この部品保有期間を修理可能の期間とさせていただきます。なお、保有期間が経過した後も、故障箇所によっては修理可能な場合がありますので、お買い上げ店、または最寄りのローランド・サービスにご相談ください。

基板の取り扱い

この基板は、静電気により部品が破壊される恐れがあります。基板を取り扱うときは、次の点に注意してください。

- ※ 基板を持つときは、あらかじめ何らかの金属に触れて、体や衣類にたまっている静電気を放電してください。
- ※ 基板を持つときは、基板の縁を持ち、部品やコネクターの部分に直接手を触れないでください。
- ※ 基板を保管するとき、または輸送するときなどは、購入時に基板が入っていた袋（導電袋）に入れてください。

INSTALLING THE WAVE EXPANSION BOARD

* Turn off your instrument.

1. Remove the cover located on the top (or rear) of your instrument.
2. Insert the Wave Expansion Board connector into a connector for an SRX Series slot, while simultaneously inserting the board holders into the holes in the Wave Expansion Board.
 - * Do not touch any of the printed circuit pathways or connection terminals.
 - * Never use excessive force when installing a circuit board. If it doesn't fit properly on the first attempt, remove the board and try again.
3. Use the supplied Installation Tool to turn the holders in the LOCK direction, so the board will be fastened in place. (To remove the Wave Expansion Board, turn the board holders in the UNLOCK direction, and lift up the board.)
 - * When circuit board installation is complete, double-check your work.
4. Using the screws removed in Step 1, refasten the cover in its original position.
5. Check if the Wave Expansion Board is correctly installed.
 - * If the "EXP" display cannot be selected (doesn't appear) in the Waveform Selection Screen (refer to the owner's manual of the instrument you use), remove the Wave Expansion Board and install it properly.

French language for Canadian Safety Standard


* Éteindre l'instrument.

1. Retirer le couvercle situé sur le dessus (ou à l'arrière) de l'instrument.
2. Insérer le connecteur de la carte dans un des creneaux pour la série SRX tout en enfonçant les supports à carte dans les trous de celle-ci.
 - * Ne pas toucher aux circuits imprimés ou aux connecteurs.
 - * Ne jamais forcer lors de l'installation de la carte de circuits imprimés. Si la carte s'ajuste mal au premier essai, enlevez la carte et recommencez l'installation.
3. Utiliser l'outil d'installation fourni pour tourner les clips de retenue vers la position de blocage (LOCK) de façon à ce que la carte soit retenue en place. (Pour retirer la carte d'expansion Wave, tourner les clips de retenue de la carte vers la position déblocage (UNLOCK) et retirer la carte en la soulevant.)
 - * Quand l'installation de la carte de circuits imprimés est terminée, vérifiez si tout est bien installé.
4. Remettre la plaque à sa place et la fixer à l'aide des vis enlevées à l'étape 1.
5. S'assurer que la carte d'expansion Wave est installée correctement.
 - * S'il est impossible de sélectionner l'affichage "EXP" (il n'apparaît pas) à l'écran de sélection Waveform (se reporter au guide du propriétaire de l'instrument utilisé), retirer la carte d'expansion Wave et la réinstaller correctement.


ウェーブ・エクспанション・ボードの取り付けかた

※ 使用機器の電源スイッチをオフにしてください。

1. 使用機器の上部、または背面にあるカバーをはずします。
2. SRX シリーズ用のスロットのコネクターにウェーブ・エクспанション・ボードのコネクターを差し込み、同時に基板ホルダーをウェーブ・エクспанション・ボードの穴にはめ込みます。
 - ※ 回路部やコネクター部には手を触れないでください。
 - ※ 基板を無理に押し込まないでください。装着しにくい場合、いったん基板を外してやり直してください。
3. 付属の固定用具で基板ホルダーを LOCK 方向に回し、ウェーブ・エクспанション・ボードを固定します。(ウェーブ・エクспанション・ボードを取り外すには、基板ホルダーを UNLOCK 方向に回してから取り外します。)
 - ※ 取り付けを終えたら、正しく取り付けられていることを再度確認してください。
4. 手順 1 で外したネジで、カバーを元通りに取り付けます。
5. ウェーブ・エクспанション・ボードの取り付けが正しく行われたかを確認します。
 - ※ ウェーブフォームの選択画面（使用機器の取扱説明書参照）で“EXP”が選べない（表示されない）ときは、もう一度ウェーブ・エクспанション・ボードをつけ直してください。

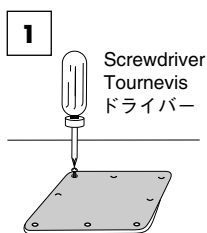


1 Screwdriver
Tournevis
ドライバ

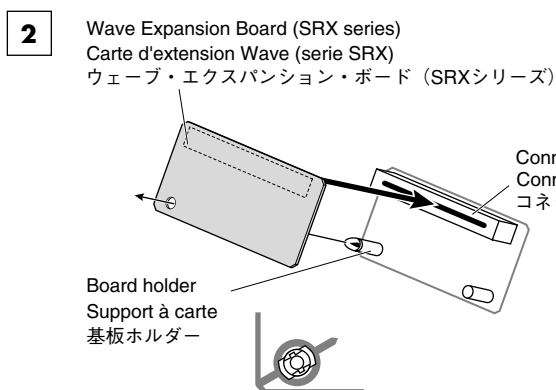

2 Wave Expansion Board (SRX series)
Carte d'extension Wave (serie SRX)
ウェーブ・エクспанション・ボード (SRXシリーズ)

Board holder
Support à carte
基板ホルダー

Connector
Connecteur
コネクター

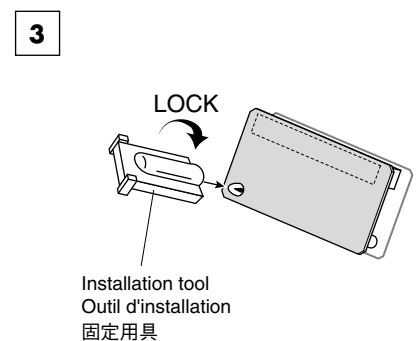

3 LOCK
Installation tool
Outil d'installation
固定用具

Position them as shown before you install the board.
Avant l'installation, orienter les supports à carte tel qu'indiqué sur le schéma.
取り付ける前に図のような向きに合わせます

Patch List (1)

For Fantom series/XV series/MX-200

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
1	Epic Strings	6	STRINGS
2	sfz! Crsc/sw	4	STRINGS
3	Trem/sw Fine	4	STRINGS
4	Fast Stac/sw	2	STRINGS
5	Str Attack	8	STRINGS
6	Full Pizz mp	8	STRINGS
7	Violins ^/sw	6	STRINGS
8	Violas ^/sw	6	STRINGS
9	Celli ^/sw	6	STRINGS
10	Basses ^/sw	6	STRINGS
11	Fast Section	4	STRINGS
12	F.Str ^/sw	6	STRINGS
13	SymphStrings	8	STRINGS
14	SymphStrngs2	8	STRINGS
15	Vibrato /Aft	4	STRINGS
16	Expressimo	4	STRINGS
17	Spc release	4	STRINGS
18	Hall Strings	6	STRINGS
19	Warm Section	4	STRINGS
20	4Section ^	8	STRINGS
21	4Section Vib	8	STRINGS
22	Sad Strings2	4	STRINGS
23	Pizz&ArcSpl	4	COMBINATION
24	So Swell	4	STRINGS
25	Full Section	8	STRINGS
26	Vibrato /sw	4	STRINGS
27	Octave ^	8	STRINGS
28	Full Sect 2	8	STRINGS
29	Attack Sect	6	STRINGS
30	Velo Strings	8	STRINGS
31	Full Tremolo	2	STRINGS
32	Trem Decresc	4	STRINGS

^: Accent

/sw: Alternate sound obtained with Key Velocity

/Mod: Alternate sound obtained with Modulation (CC:01)

/Aft: Alternate sound obtained with Aftertouch (CC:97)

When playing patches on the expansion board, we recommend that you set all the EFFECTS ON/OFF settings on the Fantom series/XV series to "ON." If such settings are set to "OFF," you may not obtain the intended sound.

* Note that the Release Time has been set to a fairly long value for some of the patches. As a result, if your sound generator has been set so "Patch Remain" is "ON," the release portion of a previously sounding patch may continue to be heard even after switching to a new patch.

* Refer to the owner's manual for your instrument for specific instructions on how to play Patches on the expansion board.

* On the Fantom series/XV series/MX-200, you can not select only the patches which are designed to be used with the RD-700/MC-909/VR-760.

For Fantom series/XV series/MX-200

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
33	Tension Trem	8	STRINGS
34	F.StrTrm/Mrc	2	STRINGS
35	F.Str Trm/sw	6	STRINGS
36	Trm /Mod&Aft	4	STRINGS
37	F.Str/ModTrm	4	STRINGS
38	Spc Marc /sw	4	STRINGS
39	WarmStaccSec	8	STRINGS
40	StackNirvana	8	STRINGS
41	Spc Sect.8va	8	STRINGS
42	Spc-Mrc /sw	2	STRINGS
43	Mrc-Spc /sw	4	STRINGS
44	Full Spc /sw	2	STRINGS
45	Marc & Pizz	8	STRINGS
46	PizzL+SpiccR	4	STRINGS
47	Pizz Sect	8	STRINGS
48	Full Pizz pp	8	STRINGS
49	Full Pizz ff	8	STRINGS
50	4Sect. Pz ff	8	STRINGS
51	Double Pizz	6	STRINGS
52	sfz! Vln /sw	4	STRINGS
53	Violin Sect1	2	STRINGS
54	Violin Sect2	4	STRINGS
55	Violin Sect3	4	STRINGS
56	Warm Vln Sec	6	STRINGS
57	GrandVln&Vcs	4	STRINGS
58	Vln Sect mp	8	STRINGS
59	Slow Atk Vln	4	STRINGS
60	Vln/Mod Pizz	8	STRINGS
61	Vln Stc/Mrc	6	STRINGS
62	Vn Piz/Spccff	2	STRINGS
63	Vln Marcato	4	STRINGS
64	Vln Pizz /sw	4	STRINGS

^: アクセント

/sw: Key Velocity による切替え音色

/Mod: Modulation (CC:01) による切替え音色

/Aft: AfterTouch (CC:97) による切替え音色

エクспанション・ボードのパッチを発音させるときは、Fantom シリーズ/XV シリーズの EFFECTS ON/OFF の設定をすべて ON にして使用することをお勧めいたします。OFF に設定した場合、意図した音色にならないことがあります。

※ パッチの中にはリリース・タイムが長く設定してあるパッチもありますので、音源のパッチ・リメインが ON になっていると音色を切り替えても前のパッチのリリースが残る場合があります。

※ エクспанション・ボードのパッチを発音させるときは、使用機器の取扱説明書にしたがって、実行してください。

※ Fantom シリーズ/XV シリーズ/MX-200 では、RD-700/MC-909/VR-760 専用のパッチを選ぶことはできません。

Patch List (2)

For Fantom series/XV series/MX-200

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
65	sfz! Va /sw	4	STRINGS
66	Viola Sect 1	6	STRINGS
67	Viola Sect 2	4	STRINGS
68	Va Stc/Mrc	6	STRINGS
69	Va /Mod Pizz	8	STRINGS
70	Va Marcato	4	STRINGS
71	Va Pizz /sw	4	STRINGS
72	sfz! Vc /sw	4	STRINGS
73	Cello Sect 1	6	STRINGS
74	Cello Sect 2	4	STRINGS
75	Warm Vc Sect	6	STRINGS
76	Vc Pizz /sw	4	STRINGS
77	Vc /Mod Pizz	8	STRINGS
78	Vc Marcato	4	STRINGS
79	Vc Stc/Mrc	6	STRINGS
80	Vc Piz/Spdff	2	STRINGS
81	sfz! Cb /sw	4	STRINGS
82	Cb /Mod Pizz	8	STRINGS
83	Bass Sect 1	4	STRINGS
84	Cbs Marcato	4	STRINGS
85	Cbs Stc/Mrc	6	STRINGS
86	Cbs Pizz /sw	4	STRINGS
87	Symphonique2	7	ORCHESTRA
88	Soundtrk Str	6	STRINGS
89	LargeStrings	8	STRINGS
90	Slow Atk Str	8	STRINGS
91	LushStrings2	4	STRINGS
92	Pop Strings	8	STRINGS
93	102 Violins	8	STRINGS
94	MultiStakato	4	STRINGS
95	Spicatto Arp	4	STRINGS
96	Dim. Pizz	8	STRINGS

^: Accent

/sw: Alternate sound obtained with Key Velocity

/Mod: Alternate sound obtained with Modulation (CC:01)

/Aft: Alternate sound obtained with Aftertouch (CC:97)

When playing patches on the expansion board, we recommend that you set all the EFFECTS ON/OFF settings on the Fantom series/XV series to "ON." If such settings are set to "OFF," you may not obtain the intended sound.

- * Note that the Release Time has been set to a fairly long value for some of the patches. As a result, if your sound generator has been set so "Patch Remain" is "ON," the release portion of a previously sounding patch may continue to be heard even after switching to a new patch.
- * Refer to the owner's manual for your instrument for specific instructions on how to play Patches on the expansion board.
- * On the Fantom series/XV series/MX-200, you can not select only the patches which are designed to be used with the RD-700/MC-909/VR-760.

For Fantom series/XV series/MX-200

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
97	RhythmicPizz	6	STRINGS
98	Harp StrPad	4	COMBINATION
99	Trem-Guitar	5	AC.GUITAR
100	Baroque Ens2	7	COMBINATION
101	ImitatEP Pad	8	OTHER SYNTH
102	Daybreak Ens	6	OTHER SYNTH
103	Grand Unison	6	ORCHESTRA
104	Va Sect&Glkn	6	ORCHESTRA
105	SRX Symphony	8	ORCHESTRA
106	XV Orchestra	6	ORCHESTRA
107	Full Orch 1	8	ORCHESTRA
108	Orc with Str	8	ORCHESTRA
109	Symphnic Orc	8	ORCHESTRA
110	Strings&Hrns	8	ORCHESTRA
111	Strgs&Hrns 2	8	ORCHESTRA
112	Octa StrEns	6	BRIGHT PAD
113	Antique Str	4	SOFT PAD
114	SweepSectStr	6	SOFT PAD
115	Stereo Tron!	4	STRINGS
116	Horror Str.	3	STRINGS
117	DanzSurround	4	STRINGS
118	Ether Strngs	4	SOFT PAD
119	MoveFX Str	6	SYNTH FX
120	Phase /Aft	4	BRIGHT PAD
121	PhazeStrngs2	8	BRIGHT PAD
122	Reverse Str2	3	STRINGS
123	Haunted	8	SYNTH FX
124	Rewind Vln	2	BRIGHT PAD
125	Synthy Sweep	2	SYNTH FX
126	Ripple	3	SYNTH FX
127	Mystery 2	7	BRIGHT PAD
128	Rising STR	8	SYNTH FX

^: アクセント

/sw: Key Velocity による切替え音色

/Mod: Modulation (CC:01) による切替え音色

/Aft: AfterTouch (CC:97) による切替え音色

エクспанション・ボードのパッチを発音させるときは、Fantom シリーズ/XV シリーズの EFFECTS ON/OFF の設定をすべて ON にして使用することをお勧めいたします。OFF に設定した場合、意図した音色にならないことがあります。

- ※ パッチの中にはリリース・タイムが長く設定してあるパッチもありますので、音源のパッチ・リメインが ON になっていると音色を切り替えても前のパッチのリリースが残る場合があります。
- ※ エクспанション・ボードのパッチを発音させるときは、使用機器の取扱説明書にしたがって、実行してください。
- ※ Fantom シリーズ/XV シリーズ/MX-200 では、RD-700/MC-909/VR-760 専用のパッチを選ぶことはできません。

Patch List (3)

For RD-700/MC-909/VR-760

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
1	Epic Strings	6	STRINGS
2	sfz! Crsc/sw	4	STRINGS
3	Trem/sw Fine	4	STRINGS
4	Fast Stac/sw	2	STRINGS
5	Str Attack	8	STRINGS
6	Full Pizz mp	8	STRINGS
7	Violins ^/sw	6	STRINGS
8	Violas ^/sw	6	STRINGS
9	Celli ^/sw	6	STRINGS
10	Basses ^/sw	6	STRINGS
11	Fast Section	4	STRINGS
12	F.Str ^/sw	6	STRINGS
13	SymphStrings	8	STRINGS
14	SymphStrngs2	4	STRINGS
15	Vibrato /Aft	4	STRINGS
16	Expressimo	4	STRINGS
17	Spc release	4	STRINGS
18	Hall Strings	6	STRINGS
19	Warm Section	4	STRINGS
20	4Section ^	8	STRINGS
21	4Section Vib	8	STRINGS
22	Sad Strings2	2	STRINGS
23	Pizz&ArcSplt	4	COMBINATION
24	So Swell	4	STRINGS
25	Full Section	8	STRINGS
26	Vibrato /sw	4	STRINGS
27	Octave ^	8	STRINGS
28	Full Sect 2	8	STRINGS
29	Attack Sect	6	STRINGS
30	Velo Strings	8	STRINGS
31	Full Tremolo	2	STRINGS
32	Trem Decresc	4	STRINGS

^: Accent

/sw: Alternate sound obtained with Key Velocity

/Mod: Alternate sound obtained with Modulation (CC:01)

/Aft: Alternate sound obtained with Aftertouch (CC:97)

* On the RD-700/MC-909/VR-760, you can not select only the patches which are designed to be used with the Fantom series/ XV series/MX-200.

For RD-700/MC-909/VR-760

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
33	Tension Trem	8	STRINGS
34	F.StrTrm/Mrc	2	STRINGS
35	F.Str Trm/sw	6	STRINGS
36	Trm /Mod&Aft	4	STRINGS
37	F.Str/ModTrm	4	STRINGS
38	Spc Marc /sw	4	STRINGS
39	WarmStaccSec	8	STRINGS
40	StackNirvana	8	STRINGS
41	Spc Sect.8va	8	STRINGS
42	Spc-Mrc /sw	2	STRINGS
43	Mrc-Spc /sw	4	STRINGS
44	Full Spc /sw	2	STRINGS
45	Marc & Pizz	8	STRINGS
46	PizzL+SpiccR	4	STRINGS
47	Pizz Sect	8	STRINGS
48	Full Pizz pp	8	STRINGS
49	Full Pizz ff	8	STRINGS
50	4Sect. Pz ff	8	STRINGS
51	Double Pizz	6	STRINGS
52	sfz! Vln /sw	4	STRINGS
53	Violin Sect1	2	STRINGS
54	Violin Sect2	4	STRINGS
55	Violin Sect3	4	STRINGS
56	Warm Vln Sec	6	STRINGS
57	GrandVln&Vcs	4	STRINGS
58	Vln Sect mp	8	STRINGS
59	Slow Atk Vln	4	STRINGS
60	Vln/Mod Pizz	8	STRINGS
61	Vln Stc/Mrc	6	STRINGS
62	Vn Piz/Spicff	2	STRINGS
63	Vln Marcato	4	STRINGS
64	Vln Pizz /sw	4	STRINGS

^: アクセント

/sw: Key Velocity による切替え音色

/Mod: Modulation (CC:01) による切替え音色

/Aft: AfterTouch (CC:97) による切替え音色

※ RD-700/MC-909/VR-760 では、Fantomシリーズ / XV シリーズ / MX-200 専用のパッチを選ぶことはできません。

Patch List (4)

For RD-700/MC-909/VR-760

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
65	sfz! Va /sw	4	STRINGS
66	Viola Sect 1	6	STRINGS
67	Viola Sect 2	4	STRINGS
68	Va Stc/Mrc	6	STRINGS
69	Va /Mod Pizz	8	STRINGS
70	Va Marcato	4	STRINGS
71	Va Pizz /sw	4	STRINGS
72	sfz! Vc /sw	4	STRINGS
73	Cello Sect 1	6	STRINGS
74	Cello Sect 2	4	STRINGS
75	Warm Vc Sect	6	STRINGS
76	Vc Pizz /sw	4	STRINGS
77	Vc /Mod Pizz	8	STRINGS
78	Vc Marcato	4	STRINGS
79	Vc Stc/Mrc	6	STRINGS
80	Vc Piz/Spdff	2	STRINGS
81	sfz! Cb /sw	4	STRINGS
82	Cb /Mod Pizz	8	STRINGS
83	Bass Sect 1	4	STRINGS
84	Cbs Marcato	4	STRINGS
85	Cbs Stc/Mrc	6	STRINGS
86	Cbs Pizz /sw	4	STRINGS
87	Symphonique2	7	ORCHESTRA
88	Soundtrk Str	6	STRINGS
89	LargeStrings	8	STRINGS
90	Slow Atk Str	8	STRINGS
91	LushStrings2	4	STRINGS
92	Pop Strings	6	STRINGS
93	102 Violins	8	STRINGS
94	MultiStakato	4	STRINGS
95	Spicatto Arp	4	STRINGS
96	Dim. Pizz	8	STRINGS

^: Accent
 /sw: Alternate sound obtained with Key Velocity
 /Mod: Alternate sound obtained with Modulation (CC:01)
 /Aft: Alternate sound obtained with Aftertouch (CC:97)

* On the RD-700/MC-909/VR-760, you can not select only the patches which are designed to be used with the Fantom series/XV series/MX-200.

For RD-700/MC-909/VR-760

(BANK SELECT MSB: 93; LSB: 3)

No.	Name	Voices	Category
97	RhythmicPizz	6	STRINGS
98	Spec/Pizz Vn	2	STRINGS
99	Spec/Pizz Vc	2	STRINGS
100	Lead&StrSpl	4	OTHER SYNTH
101	ImitatEP Pad	8	OTHER SYNTH
102	Daybreak Ens	6	OTHER SYNTH
103	Grand Unison	5	ORCHESTRA
104	Soft Mover 2	2	SOFT PAD
105	SRX Syn Str	8	SOFT PAD
106	RichDynapad2	7	SOFT PAD
107	ReverseSweep	4	SYNTH FX
108	JunoSynthAtk	2	OTHER SYNTH
109	ElectroStrng	2	OTHER SYNTH
110	Atmospheric2	2	SOFT PAD
111	AnalogDrama2	6	SOFT PAD
112	2 Octave Vib	8	STRINGS
113	Antique Str	3	SOFT PAD
114	SweepSectStr	6	SOFT PAD
115	Stereo Tron!	4	STRINGS
116	Horror Str.	3	STRINGS
117	DanzSurround	4	STRINGS
118	Ether Strngs	4	SOFT PAD
119	MoveFX Str	6	SYNTH FX
120	Phase /Aft	4	BRIGHT PAD
121	PhazeStrngs2	8	BRIGHT PAD
122	Reverse Str2	3	STRINGS
123	Haunted	8	SYNTH FX
124	Rewind Vln	2	BRIGHT PAD
125	Synthy Sweep	2	SYNTH FX
126	Ripple	3	SYNTH FX
127	Mystery 2	4	BRIGHT PAD
128	Rising STR	8	SYNTH FX

^: アクセント
 /sw: Key Velocity による切替え音色
 /Mod: Modulation (CC:01) による切替え音色
 /Aft: AfterTouch (CC:97) による切替え音色

※ RD-700/MC-909/VR-760 では、Fantomシリーズ / XV シリーズ / MX-200 専用のパッチを選ぶことはできません。

Waveform List (1)

No.	Name	No.	Name	No.	Name			
1	F.Str mp A L	*	35	Vn mp C L	*	69	Vn mltV + L	*
2	F.Str mp A R	*	36	Vn mp C R	*	70	Vn mltV + R	*
3	F.Str mp B L	*	37	Vn mp + L	*	71	Va mltV A L	*
4	F.Str mp B R	*	38	Vn mp + R	*	72	Va mltV A R	*
5	F.Str mp C L	*	39	Va mp A L	*	73	Va mltV B L	*
6	F.Str mp C R	*	40	Va mp A R	*	74	Va mltV B R	*
7	F.Str mp + L	*	41	Va mp B L	*	75	Va mltV C L	*
8	F.Str mp + R	*	42	Va mp B R	*	76	Va mltV C R	*
9	Mrcr A L	*	43	Va mp C L	*	77	Va mltV + L	*
10	Mrcr A R	*	44	Va mp C R	*	78	Va mltV + R	*
11	Mrcr B L	*	45	Va mp + L	*	79	Vc mltV A L	*
12	Mrcr B R	*	46	Va mp + R	*	80	Vc mltV A R	*
13	Mrcr C L	*	47	Vc mp A L	*	81	Vc mltV B L	*
14	Mrcr C R	*	48	Vc mp A R	*	82	Vc mltV B R	*
15	Mrcr + L	*	49	Vc mp B L	*	83	Vc mltV C L	*
16	Mrcr + R	*	50	Vc mp B R	*	84	Vc mltV C R	*
17	Spct A L	*	51	Vc mp C L	*	85	Vc mltV + L	*
18	Spct A R	*	52	Vc mp C R	*	86	Vc mltV + R	*
19	Spct B L	*	53	Vc mp + L	*	87	Cb f A L	*
20	Spct B R	*	54	Vc mp + R	*	88	Cb f A R	*
21	Spct C L	*	55	Cb mp A L	*	89	Cb f B L	*
22	Spct C R	*	56	Cb mp A R	*	90	Cb f B R	*
23	Trem mp A L	*	57	Cb mp B L	*	91	Cb f C L	*
24	Trem mp A R	*	58	Cb mp B R	*	92	Cb f C R	*
25	Trem mp B L	*	59	Cb mp C L	*	93	Cb f + L	*
26	Trem mp B R	*	60	Cb mp C R	*	94	Cb f + R	*
27	Trem mp C L	*	61	Cb mp + L	*	95	Vn mltV^ A L	*
28	Trem mp C R	*	62	Cb mp + R	*	96	Vn mltV^ A R	*
29	Trem mp + L	*	63	Vn mltV A L	*	97	Vn mltV^ B L	*
30	Trem mp + R	*	64	Vn mltV A R	*	98	Vn mltV^ B R	*
31	Vn mp A L	*	65	Vn mltV B L	*	99	Vn mltV^ C L	*
32	Vn mp A R	*	66	Vn mltV B R	*	100	Vn mltV^ C R	*
33	Vn mp B L	*	67	Vn mltV C L	*	101	Vn mltV^ + L	*
34	Vn mp B R	*	68	Vn mltV C R	*	102	Vn mltV^ + R	*

^: Accent

*: These are stereo waveforms, offered in left-right pairs.

When you create a Patch using the waveforms stored in the Expansion Board, observe the following points:

* If you make a Patch with a single voice and then later play it in a chord, the sound may be distorted with certain settings for the Effects and TVA. If this happens, adjust the level of the Effects and TVA.

^: アクセント

*: L と R でペアになるステレオ・ウェーブフォームです。

このエクspansion・ボードに収められているウェーブフォームを使ってパッチを作るときには、次の点に注意してください。

※ 単音でパッチを作ったとき、エフェクトやTVAの設定状態によって、その音を和音で演奏すると音が歪む場合があります。このようなときは、エフェクトやTVAのレベルを調整してください。

Waveform List (2)

No.	Name	No.	Name	No.	Name			
103	Va mltV^ A L	*	137	Cb Stc A L	*	171	Vn Pz ff A L	*
104	Va mltV^ A R	*	138	Cb Stc A R	*	172	Vn Pz ff A R	*
105	Va mltV^ B L	*	139	Cb Stc B L	*	173	Vn Pz ff B L	*
106	Va mltV^ B R	*	140	Cb Stc B R	*	174	Vn Pz ff B R	*
107	Va mltV^ C L	*	141	Cb Stc C L	*	175	Vn Pz ff C L	*
108	Va mltV^ C R	*	142	Cb Stc C R	*	176	Vn Pz ff C R	*
109	Va mltV^ + L	*	143	All Stc L	*	177	Va Pz ff A L	*
110	Va mltV^ + R	*	144	All Stc R	*	178	Va Pz ff A R	*
111	Vc mltV^ A L	*	145	Vn Pz mf A L	*	179	Va Pz ff B L	*
112	Vc mltV^ A R	*	146	Vn Pz mf A R	*	180	Va Pz ff B R	*
113	Vc mltV^ B L	*	147	Vn Pz mf B L	*	181	Va Pz ff C L	*
114	Vc mltV^ B R	*	148	Vn Pz mf B R	*	182	Va Pz ff C R	*
115	Vc mltV^ C L	*	149	Vn Pz mf C L	*	183	Vc Pz ff A L	*
116	Vc mltV^ C R	*	150	Vn Pz mf C R	*	184	Vc Pz ff A R	*
117	Vc mltV^ + L	*	151	Va Pz mf A L	*	185	Vc Pz ff B L	*
118	Vc mltV^ + R	*	152	Va Pz mf A R	*	186	Vc Pz ff B R	*
119	Vn Stc A L	*	153	Va Pz mf B L	*	187	Vc Pz ff C L	*
120	Vn Stc A R	*	154	Va Pz mf B R	*	188	Vc Pz ff C R	*
121	Vn Stc B L	*	155	Va Pz mf C L	*	189	Cb Pz ff A L	*
122	Vn Stc B R	*	156	Va Pz mf C R	*	190	Cb Pz ff A R	*
123	Vn Stc C L	*	157	Vc Pz mf A L	*	191	Cb Pz ff B L	*
124	Vn Stc C R	*	158	Vc Pz mf A R	*	192	Cb Pz ff B R	*
125	Va Stc A L	*	159	Vc Pz mf B L	*	193	Cb Pz ff C L	*
126	Va Stc A R	*	160	Vc Pz mf B R	*	194	Cb Pz ff C R	*
127	Va Stc B L	*	161	Vc Pz mf C L	*	195	All Pz ff L	*
128	Va Stc B R	*	162	Vc Pz mf C R	*	196	All Pz ff R	*
129	Va Stc C L	*	163	Cb Pz mf A L	*			
130	Va Stc C R	*	164	Cb Pz mf A R	*			
131	Vc Stc A L	*	165	Cb Pz mf B L	*			
132	Vc Stc A R	*	166	Cb Pz mf B R	*			
133	Vc Stc B L	*	167	Cb Pz mf C L	*			
134	Vc Stc B R	*	168	Cb Pz mf C R	*			
135	Vc Stc C L	*	169	All Pz mf L	*			
136	Vc Stc C R	*	170	All Pz mf R	*			

^: Accent

*: These are stereo waveforms, offered in left-right pairs.

When you create a Patch using the waveforms stored in the Expansion Board, observe the following points:

- * If you make a Patch with a single voice and then later play it in a chord, the sound may be distorted with certain settings for the Effects and TVA. If this happens, adjust the level of the Effects and TVA.

^: アクセント

*: L と R でペアになるステレオ・ウェーブフォームです。

このエクspansion・ボードに収められているウェーブフォームを使ってパッチを作るときには、次の点に注意してください。

- ※ 単音でパッチを作ったとき、エフェクトやTVAの設定状態によって、その音を和音で演奏すると音が歪む場合があります。このようなときは、エフェクトやTVAのレベルを調整してください。

お客様	ご芳名	様
	ご住所	〒 ----- ☎

取扱販売店名・住所・☎	
保証期間	お買い上げ日 年 月 日より 本体は一年間 ただし、ソフトウェア、 付属品、消耗部品は除く

太枠内に記入または捺印の無い場合は、必ず販売店発行の領収書またはそのお買い上げ年月日・販売店等を証明するものを保証書に添付願います。記入もしくは添付の無い場合は無効となりますので、ご注意ください。

型名	SRX-04 "Symphonique Strings"
----	-------------------------------------

- 本保証書は、本書記載内容で無料修理をさせていただきますことをお約束するものです。
- 保証期間中に故障が発生した場合は、製品と本書をご持参ご提示の上、お買上げの販売店にご依頼ください。
- ご転居・ご贈答品などの場合で、お買上げ販売店に修理を依頼することができない場合は、ローランドサービスステーションにお問い合わせください。
- 本書は再発行いたしません。所定事項の記入および内容をよくお読みの上、大切に保存してください。



ローランド株式会社

本社 〒530-0002 大阪市北区曽根崎新地1-4-20 桜橋 IMビル11F
電話 (06) 6345-9800

保証規定

- 保証期間内において、取扱説明書・本体貼付ラベルなどの注意書に従った正常なご使用状態で発生した故障については、第3項に示す場合を除き、無料修理いたします。
- 保証期間内に無料修理をお受けになる場合は、お買上げの販売店・又は最寄りのローランドサービスステーションにご依頼のうえ、修理の際に本書をご提示ください。お客様のご事情により出張修理を依頼された場合、保証期間中であっても出張料金を申し受けます。
- 保証期間内でも、次の場合には有料修理となります。
 - (イ) 本書のご提示が無い場合。
 - (ロ) 本書にお買上げ年月日・販売店名の記入が無い場合、または字句を書き換えられた場合。
 - (ハ) ご使用上の誤り、又は当社の指定者以外の手により修理・改造された場合。
 - (ニ) 本製品に異常がなく、他の部分、他の機器に異常があり、点検及び改善した場合。
 - (ホ) お買い上げ後の輸送、移動、落下等による故障や損傷および使用中に生じたキズ・汚れなどの外観上の変化。
 - (ヘ) 地震、落雷、風水害、その他の天災地変、火災、公害、ガス、異常電圧による故障や損傷。
 - (ト) 消耗部品（例：電池など）の取り替えを要する場合、および消耗部品の摩耗や劣化に起因する故障や損傷。
- 本製品は日本国内でご使用いただくことを前提に製造・販売しております。従って本製品の保証は、日本国外ではお受けできませんので、ご了承ください。
This warranty is valid only in Japan.

修理メモ

- ※ 本保証書は以上の保証規定により無料修理をお約束するものです。従ってこの保証書によってお客様の法律上の権利を制限するものではありません。
- ※ 本製品の補修用性能部品（製品の機能を維持するために必要な部品）の最低保有期間は製造打切後6年です。この部品保有期間を修理可能の期間とさせていただきます。保有期間経過後も、故障内容によっては修理可能な場合がありますので、ローランドサービスステーションまでお問い合わせください。
- ※ 修理の際、交換した部品を再生、再利用、製品の品質向上等の目的で回収させていただくことがありますので、ご協力願います。