© 2025 Roland Corporation

* Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES". After reading, keep the document where it will be available for immediate reference.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠WARNING and ⚠CAUTION Notices

⚠WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The ⚠ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
⃠	The ⃠ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
●	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.



Do not repair or replace parts by yourself

Be sure to contact your dealer, a Roland service center, or an official Roland dealer.



For a list of Roland service centers and official Roland dealers, refer to the Roland website.

Do not place in an unstable location

Otherwise, you risk injury as the result of the unit toppling over or dropping down.



Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.



⚠ WARNING

Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.



⚠ CAUTION

Evaluate safety issues before using this unit

Even if the precautions described in the Owner's Manual are followed, this unit or your smartphone may fall off, depending on how they are handled. Please be mindful of any safety issues before using this product.

Take care so as not to get fingers pinched

When adjusting this unit, be careful not to get your fingers or other extremities pinched.



Whenever a child uses the unit, an adult should be on hand to provide supervision and guidance.

- Movable/rotating parts
- Side arm
- Head and side arm attachment
- Clamp

IMPORTANT NOTES

Maintenance

- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Additional Precautions

- When disposing of the packing carton or cushioning material in which this unit was packed, you must observe the waste disposal regulations that apply to your locality.

Intellectual Property Right


- Roland is either registered trademarks or trademarks of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

Points of caution during setup

- Check the useable pipe size (diameter) to which the clamp can be attached, as shown in "Main specifications". Tighten knob ❶ according to the pipe diameter when adjusting.
- Only use your hands when tightening the knob, to avoid over-tightening and damaging the parts.
- When loosening knobs ❶ and ❷, make sure to firmly hold the unit with one hand, and carefully loosen the knobs without getting your fingers pinched.
- After setup, make sure that the stand on which you mounted the smartphone holder is stable.
- Be careful not to let your smartphone fall. We do not provide compensation for smartphones that may be damaged as a result of a fall.

Setup

Mount the smartphone holder onto your stand.

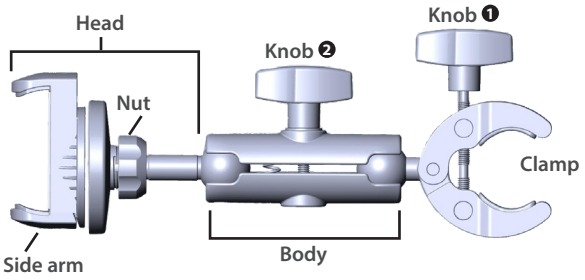

1. **Loosen knob ❶ and clamp the unit onto the stand.**
2. **Firmly tighten knob ❶, and lock the clamp onto the stand.**
3. **While firmly holding the body with one hand, use your other hand to loosen knob ❷, adjusting the angle of the body and the head.**
4. **Firmly tighten knob ❷.**
5. **Loosen the nut and adjust the orientation of the side arm.**
6. **Firmly tighten the nut.**
7. **Remove the disc of the side arm from the disc of the head.**
8.  **Widen the side arm so that your smartphone tightly fits between the arms.**
9. **Attach the disc of the side arm on which you mounted your smartphone to the disc of the head.**

* Make sure that the disc of the side arm fits within the disc of the head, so that the unit firmly holds your smartphone.

10. **Last, make sure that knobs ❶ and ❷ as well as the nut are all tightened.**

MEMO

Since the side arm is magnetically attached to the head, it can be removed or swiveled. You can use your smartphone in either portrait or landscape orientation, as you like.

Main specifications

Compatible smartphone size	Width: 64–80 mm (2-9/16–3-3/16 inches) Thickness: 10 mm or less (7/16 inched or less) Weight: 250 g or less (9 oz or less)
Compatible pipe diameter	Vertical pipe diameter: 19–38 mm Horizontal pipe diameter: 22–38 mm
Weight	370 g (14 oz)

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.