


Assembling the KF-10



- * To ensure that you assemble this unit correctly, please read this manual carefully before you begin assembly. Keep this manual nearby for reference when needed.
- * Keep this unit horizontal when lifting it during assembly or transport.
- * Be careful not to pinch your hands or drop this unit on your foot during assembly or transport.
- * You must obtain the assistance of at least one additional person when assembling or transporting this unit.
- * Keep small parts such as screws out of the reach of small children to ensure that these items are not swallowed accidentally.
- * The screwdriver needed for assembly is not included. You will need to provide a Phillips screwdriver of the appropriate size for the screws.
- * You should initially tighten each screw loosely before tightening them to their final position. Start by tightening the screws until they are approximately half hidden. Do not use a power screwdriver when tightening the screws to their final position. Doing so may strip the threads.
- * Tighten the screws firmly, and place the unit at a location that is level and sure to remain stable. Never place the unit on a shag carpet. If you do so, the piano and the pedal may be unstable, causing damage.
- * Do not place the piano main unit directly on the floor. Doing so will damage the jacks and holders on the bottom of the piano, and also damage the bottom panel case.
- * The wooden portions of this instrument feature a traditional finish that can be damaged. Take care not to allow it to be bumped or abraded.

Copyright © 2015 ROLAND CORPORATION


Check the Parts

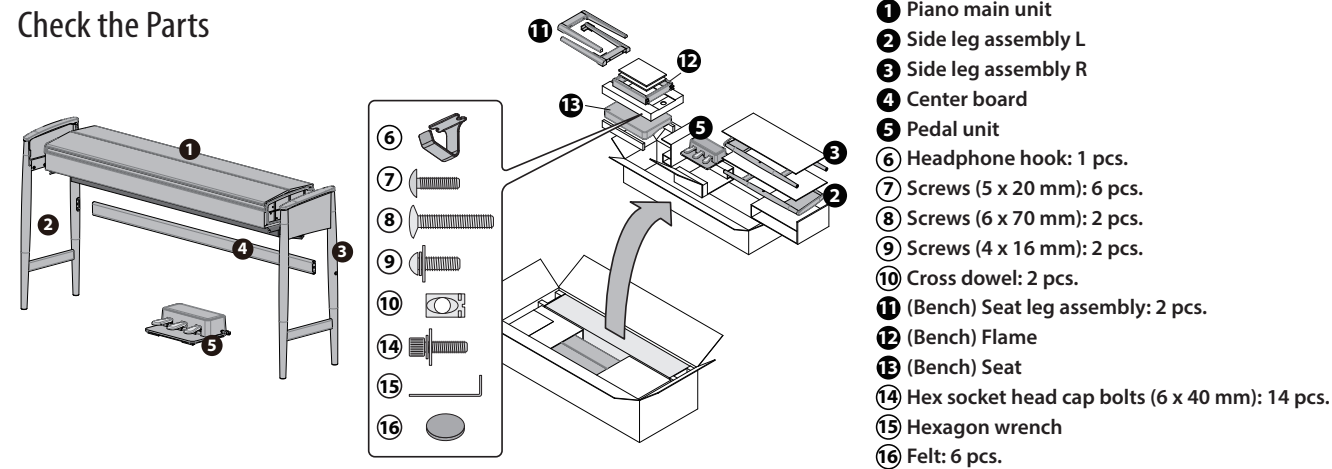


Assembling the KF-10

- * Make sure to enlist the help of at least one other person.

1. Remove the box with accessories and the packing cushions A (2), and then remove the piano unit 1.

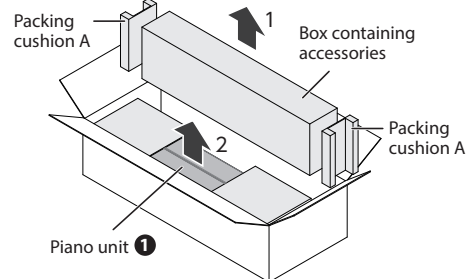


2. Open up the packing cushion used for the piano unit 1, and insert the center board 4 through the notches in the packing cushion to pull it out towards you. Peel off the sheet strips (2) that are wrapped around the piano unit.

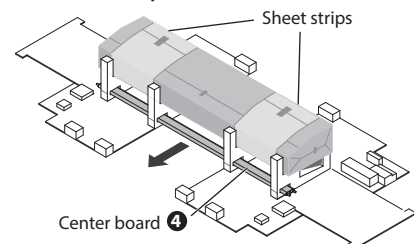


3. Place the packing cushions A down that you removed in step 1 as shown in the illustration, and set the piano unit 1 on top of them.

- * Make sure that the piano unit doesn't topple over.

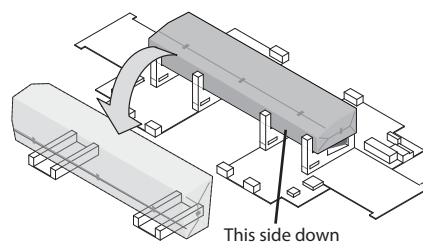

4. Open up the protective mat that's wrapped around the piano unit 1.

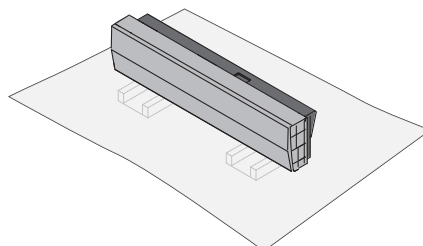

5. Open the box containing the accessories, and remove the left-right side legs 2 3.

About natural marks

The wooden parts of this instrument are finished in a way that maximizes the natural character of the wood and its sense of quality.


For this reason, the color and woodgrain (natural marks) of your unit will differ from other units of the same model.

This is an indication that natural wood is used, and is not a problem with the quality.

6. Attach the left side leg 2 onto the piano unit 1, and insert and tighten the screws 7 (3) as much as you can by hand.


- * Make sure that the brackets on the piano unit fit into the grooves on the side leg, leaving no gaps between the piano unit and the side leg.

* If there are still gaps after assembly, the unit could get scratched or damaged.

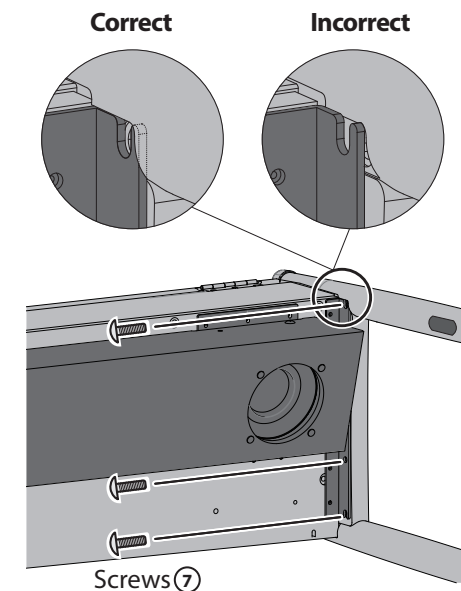


7. Attach the center board 4 to the left side leg 2, and fasten it with the cross dowel 10 and screw 8.


- * If the center board needs support, use the packing cushion that was used for the pedal.

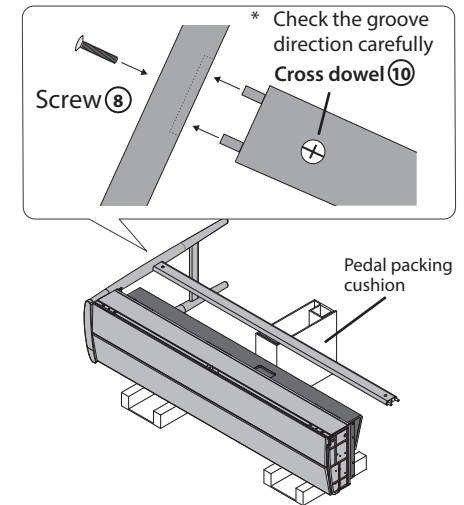


8. Attach the right side leg 3 to the piano unit 1, and then attach the right side leg 3 to the center board.

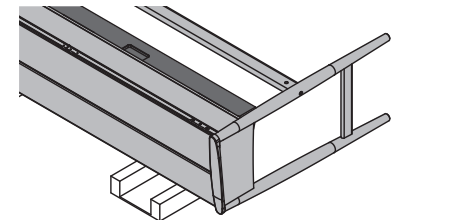

9. As with step 6, insert and tighten the screws 7 (3) as much as you can by hand into the right side leg 3 and the piano unit 1.

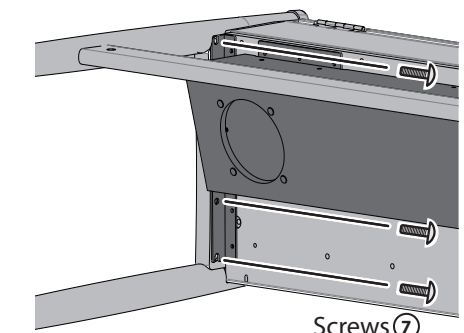


10. As with step 7, fasten the right side leg 3 to the center board 4 with the cross dowel 10 and screw 8.

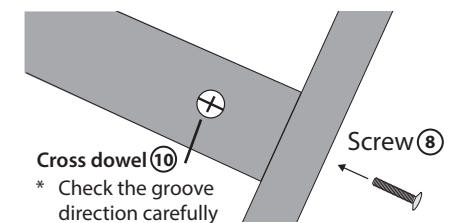

11. Slide your hand in below the side leg and stand the piano up.

- * Don't try to hold the piano unit by the keyboard cover. Also, do not use the bottom of the side legs to support the weight of the piano, as this may damage the piano.


12. Make sure that there are no gaps between the left and right side legs 2 3 and the piano unit 1, and use a screwdriver to tighten the screws (6) you inserted in steps 6 and 9.

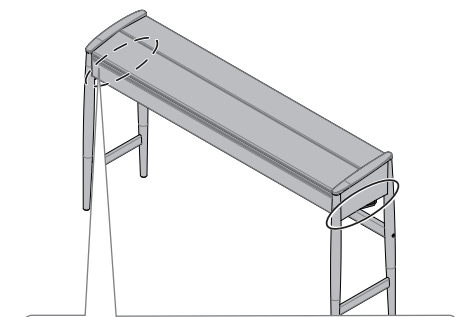


What to do if there are gaps between the side legs and the piano unit

Loosen the screws you tightened in step 12, and retighten the screws while adjusting the positions of the side legs and the piano unit so that there are no gaps.

13. Use the screws 9 to fasten the headphone hook 6.

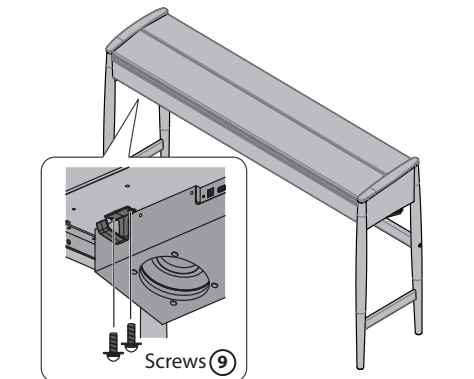

14. Connect the AC adaptor to the DC In jack on the back of the piano 1, and connect the pedal cord to the Pedal jack. Use the cable fasteners (3) to fasten the AC adaptor cord and the pedal cord.

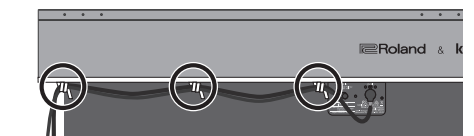


When moving the instrument


Before moving this instrument, close the keyboard cover and unplug both the AC adaptor and the pedals. When moving the unit, at least two people should work together and lift the unit carefully, all the while keeping it level and being very careful so as not to pinch their hands or drop the unit on their feet.

Assembling the Dedicated Seat (Bench)

1. Remove the bench seat legs 11 (2), frame 12 and seat 13 from the box containing the accessories.
2. Insert the seat legs 11 into the dowels of the frame 12, and temporarily fasten with the hex socket head cap screws 14 (8).

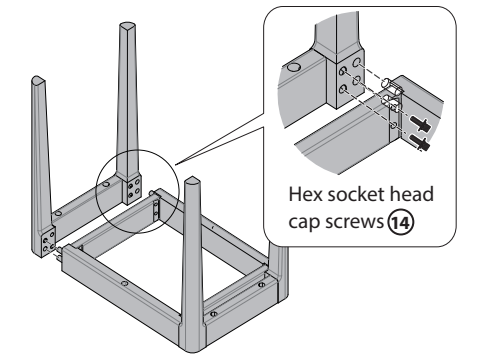

3. Fasten the parts you assembled in step 2 to the seat 13 using the hex socket head cap screws 14 (6).

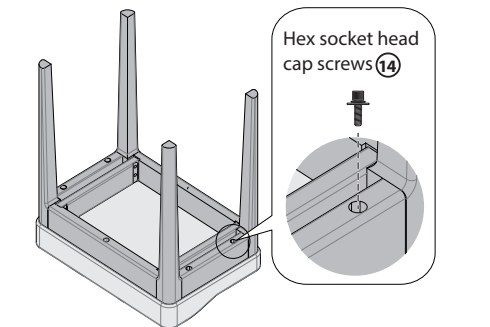

4. Stand the bench upright, and stabilize the bench by tightening all of the screws.



What to do if the bench wobbles

Attach the included pieces of felt 16 onto the bottom of the legs.

- * Don't attach the felt if the seat is being used on a carpet.



Setting up the pedals

1. Place the tips of the pedals 18 cm from the front edge of the front piano legs (the recommended position).

